Contactors and Contactor Assemblies

3RT Contactors / 3RH Control Relays

Accessories for contactors, control relays and auxiliary contactors

Selection and ordering data



SIRIUS











3RH19 11-1HA -1FA..

3RH19 11-2HA. -2FA.

3RH19 21-1HA.

3RH19 21-2HA.

3RH19 11-1LA.

| For contactors | Rated operational current ²) | Auxiliary | contacts | Screw connection | | Cage Clamp connection | 1 | Weight approx. |
|-----------------------|--|---------------|------------------------------|------------------|------------------|-----------------------|------------------|----------------|
| Туре | NEMA A600 / Q600 | Ident. no. | Design I L I L NO NC NO NC | Order No. | List Price \$ | Order No. | List Price \$ | kg |
| Acceptitions accepted | | Acres and | a Alexa Consust | | | | | |

Auxiliary switch blocks for snapping onto the front acc. to EN 50 012 ¹)

Size S00

For making contactors with 2, 4 or 5 auxiliary contacts

| 3RT10 11 1, | 11 E | _ | 1 | _ | - | 3RH19 11-1HA01 | 3RH19 11-2HA01 | 0.045 |
|----------------|------|---|---|---|---|----------------|----------------|-------|
| 3RT10 121 | 22 E | 1 | 2 | _ | _ | 3RH19 11-1HA12 | 3RH19 11-2HA12 | |
| Ident. no. 10E | 23 E | 1 | 3 | _ | _ | 3RH19 11-1HA13 | 3RH19 11-2HA13 | |
| | 32 E | 2 | 2 | - | - | 3RH19 11-1HA22 | 3RH19 11-2HA22 | |
| | | | | | | | | |

Sizes S0 to S121)

4-pole

| 3RT10 2, 3RT1 . 3 to 3RT1 . 7, | | 31 22 13 | 2 | 2 | _ _ _ | | 3RH19 21-1HA31 3RH19 21-1HA22 3RH19 21-1HA13 | 3RH19 21-2HA31 3RH19 21-2HA22 3RH19 21-2HA13 | 0.065 |
|--------------------------------------|----------------------|----------------|---|---|-------------|---|--|--|-------|
| 3RT11 | with location digits | 22 | 2 | 2 | - | - | 3RH19 21-1XA22-0MA0 | 3RH19 21-2XA22-0MA0 | |

Auxiliary switch blocks for snapping onto the front acc. to EN 50 005 ¹)

Size S00

2 or 4-pole auxiliary switch blocks for making contactors with 3 or 5 auxiliary contacts

| 3RT1 . 1, 3RH11, 3RH14 | | 20 11 02 11 U | 2 1 - - | 1 2 - | - - 1 | - - 1 | 3RH19 11-1FA20 3RH19 11-1FA11 3RH19 11-1FA02 3RH19 11-1FB11 | 3RH19 11-2FA20 3RH19 11-2FA11 3RH19 11-2FA02 3RH19 11-2FB11 | 0.045 |
|------------------------------|---------------------------------------|------------------------------------|--------------------------------|-----------------------|------------------|-----------------------|--|--|-------|
| | | 40 31 22 22 U 11, 11 U | 4 3 2 - J 1 | - 1 2 - 1 | - - 2 1 | - - - 2 1 | 3RH19 11-1FA40 3RH19 11-1FA31 3RH19 11-1FA22 3RH19 11-1FC22 3RH19 11-1FB22 | 3RH19 11-2FA40 3RH19 11-2FA31 3RH19 11-2FA22 3RH19 11-2FC22 | 0.045 |
| | Single or 2-pole au Cable entry from | | witch | ı blo | cks, | cable en | try from one side | | |
| | | - | 1 | - | - | - | 3RH19 11-1AA10 3RH19 11-1AA01 | - | 0.015 |
| | | _ | 1 2 | 1 | - | _ | 3RH19 11-1LA11 3RH19 11-1LA20 | - | 0.045 |
| | Cable entry from | below | | | | | | | |
| | | _ | 1 | - 1 | _ | _ | 3RH19 11-1BA10 3RH19 11-1BA01 | - | 0.015 |
| | | _ | 1 2 | 1 - | _ | _ | 3RH19 11-1MA11 3RH19 11-1MA20 | - | 0.045 |
| | | | | | | | | | |

EN50005 and EN50012 designate the markings of the auxiliary terminal numbers. For position of the terminals see pages 2/166-169. For int. circuit diagrams see pages 2/156-160

- 1) Exception: 3RT16.
- 2) UL ratings, Appendix page 19/7.

Contactors and Contactor Assemblies

3RT1 Contactors

SIRIUS

Accessories for contactors

Selection and ordering data













3RH19 21-1F..

9 21-1F...

3RH19 21-2F...

3RH19 21-10

3RH19

-2C... 3RH19

.A.. 3RH19 21-1MA.

| For contactors | Rated operational current ²) | Auxiliary | contacts | Screw connect | ion | Cage Clamp con | nection | Weight approx. | Pack. |
|----------------|--|---------------|-------------|---------------|------------------|----------------|------------------|----------------|-------|
| | NEMA A600 / Q600 | Ident. no. | Design | Order No. | List Price \$ | Order No. | List Price \$ | | |
| Туре | | | NO NC NO NC | | | | | kg | |

Auxiliary switch blocks for snapping onto the front acc. to EN 50 005

| acc. to EN 50 005 | | | | |
|--|--|---------------------------------|--|--|
| Sizes S0 to S121) | | | | |
| 4-pole au | uxiliary switch bloo | cks | | |
| 3RT10 2, 3RT1. 3 to 3RT1. 7, 3RT11 | 40 31 22 04 22 U | 4 3 1 2 2 - 4 - 2 2 | 3RH19 21-1FA40 3RH19 21-1FA31 3RH19 21-1FA22 3RH19 21-1FA04 3RH19 21-1FC22 | 3RH19 21-2FA40 3RH19 21-2FA31 3RH19 21-2FA22 3RH19 21-2FA04 3RH19 21-2FC22 |
| Single-po | ole auxiliary switcl | th blocks acc. to EN 50 | 0 005 and EN 50 012 | |
| 3RT1. 2 to 3RT1. 7, 3RT11 | - - - | 1 - 1 1 - 1 | 3RH19 21-1CA10 3RH19 21-1CA01 3RH19 21-1CD10 3RH19 21-1CD01 | 3RH19 21-2CA10 3RH19 21-2CA01 - |
| | uxiliary switch bloo entry from above | cks with cable entry fr | rom one side | |
| 3RT10 2, 3RT1. 3 to 3RT1. 7, 3RT11 ———— | - - - | 1 1 2 - 2 | 3RH19 21-1LA11 3RH19 21-1LA20 3RH19 21-1LA02 | = |
| • Cable 6 | entry from below | | | |
| | - - - | 1 1 2 - 2 | 3RH19 21-1MA11 3RH19 21-1MA20 3RH19 21-1MA02 | _ |

EN50005 and EN50012 designate the markings of the auxiliary terminal numbers. For position of the terminals see pages 2/166-169. For int. circuit diagrams see pages 2/156-160.

¹⁾ Exception: 3RT16.


²⁾ UL ratings, Appendix page 19/7.



Contactors and Contactor Assemblies 3RT1 Contactors

Accessories for contactors

Selection and ordering data

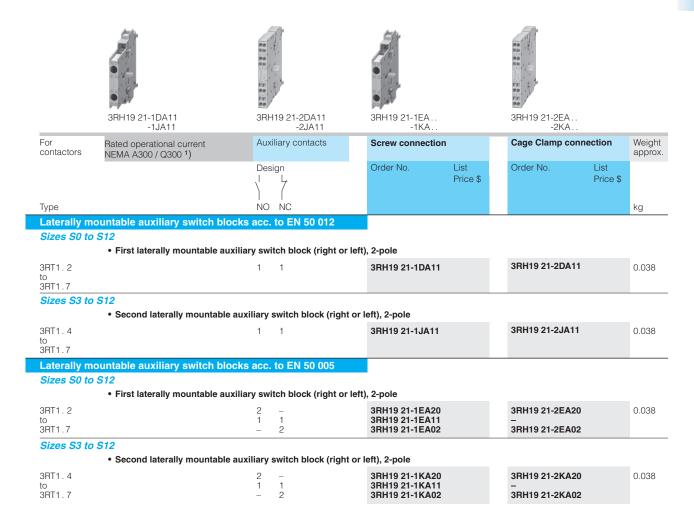

EN50005 and EN50012 designate the markings of the auxiliary terminal numbers. For position of the terminals see pages 2/166-169. For int. circuit diagrams see pages 2/156-160.

1) UL ratings, Appendix page 19/7.


Contactors and Contactor Assemblies

3RT1 Contactors and 3RH1 Control Relays



Accessories for contactors and control relays

Selection and ordering data

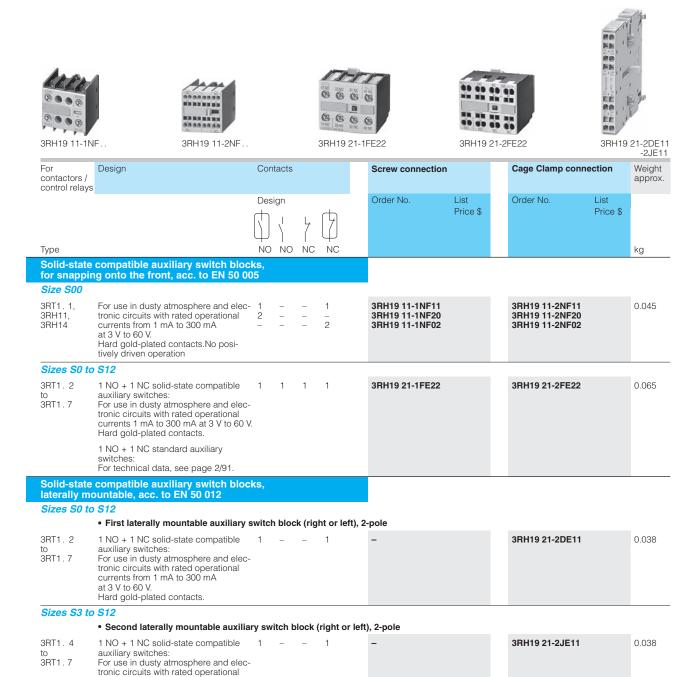

EN50005 and EN50012 designate the markings of the auxiliary terminal numbers. For position of the terminals see pages 2/166-169. For int. circuit diagrams see pages 2/156-160.

currents from 1 mA to 300 mA

at 3 V to 60 V. Hard gold-plated contacts