
# EVALUATION BOARD MANUAL EBSNCN Series


# EVALUATION KIT MANUAL EKSNCN Series

for EYSNCN series Bluetooth® low energy Module

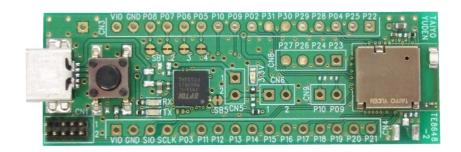

#### **Introduction**

This evaluation board is applicable for Taiyo Yuden's *Bluetooth*® low energy module, EYSNCN Series.

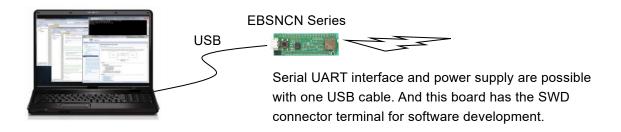

#### Mounted module

EYSNCN Series (9.6mm x 12.9mm x 2.0mm MAX)



Nordic nRF52811 / ARM® Cortex™-M4 32 bit processor 49-pin Land Grid Array / 30GPIOs / SWD

- Basic Module -

Taiyo Yuden writes firmware for (EYSNCNZWW) SoftDevice to this product. The user can develop unique application for the module.

#### Content

1	EBSNCN Series Evaluation Board (PCB name_TE8648-2)	1 pc
2	J-Link Lite (EKSNCN Series Only)	1 set

#### 1. EBSNCN




#### 2. EKSNCN




TAIYO YUDEN CO., LTD.

# **Evaluation board circuit schematic**

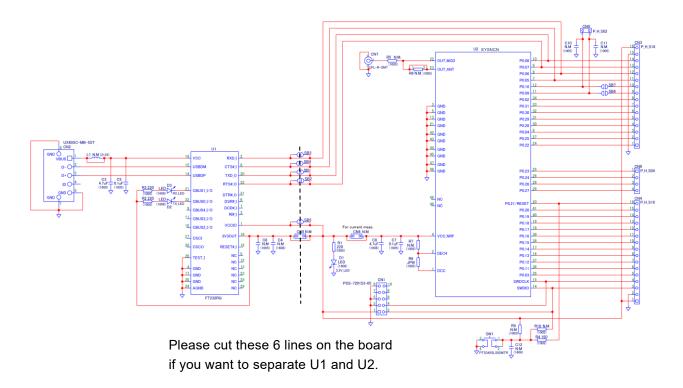


#### **Evaluation board layout**

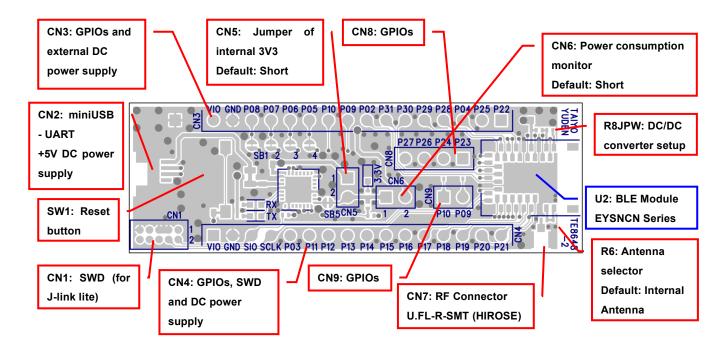

- 1) All pin headers are 2.54mm pitch. And distance between CN3 and CN4 is 15.24mm.
- 2) CN3,4,5,6,8, C4,6,10-12, L1, R5-7,9,10, SB1-7, TP1 are not mounted (N.M.).
- 3) D1 (LED): 3.3V Indicator
- 4) D2 (LED): UART TX Indicator
- 5) D3 (LED): UART RX Indicator
- 6) SW1 (Push button): Module Reset (active low)

### Silkscreen Printing

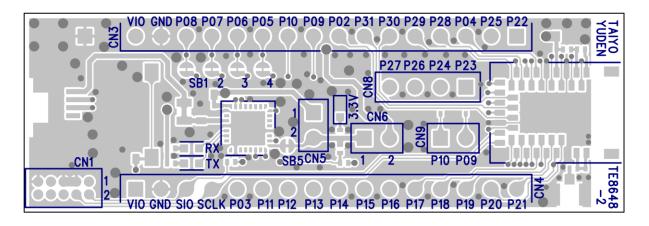

TAIYO YUDEN CO., LTD.


# **EBSNCN**, **EKSNCN**

# Pin Descriptions

Pin No.	CN3	CN4	CN8
1	P0.22	VIO	P0.23
2	P0.25	GND	P0.24
3	P0.04	SWDIO	P0.26
4	P0.28	SWDCLK	P0.27
5	P0.29	P0.03	
6	P0.30	P0.11	
7	P0.31	P0.12	
8	P0.02	P0.13	
9	P0.09	P0.14	
10	P0.10	P0.15	
11	P0.05	P0.16	
12	P0.06	P0.17	
13	P0.07	P0.18	
14	P0.08	P0.19	
15	GND	P0.20	
16	VIO	P0.21/RESET	

#### How to use

It is very easy just to tie this board to the PC with a USB cable. It is not necessary to change the setting of the board. The power supply of the module supplies by default 3.3V from 3V3OUT of FT232RQ.

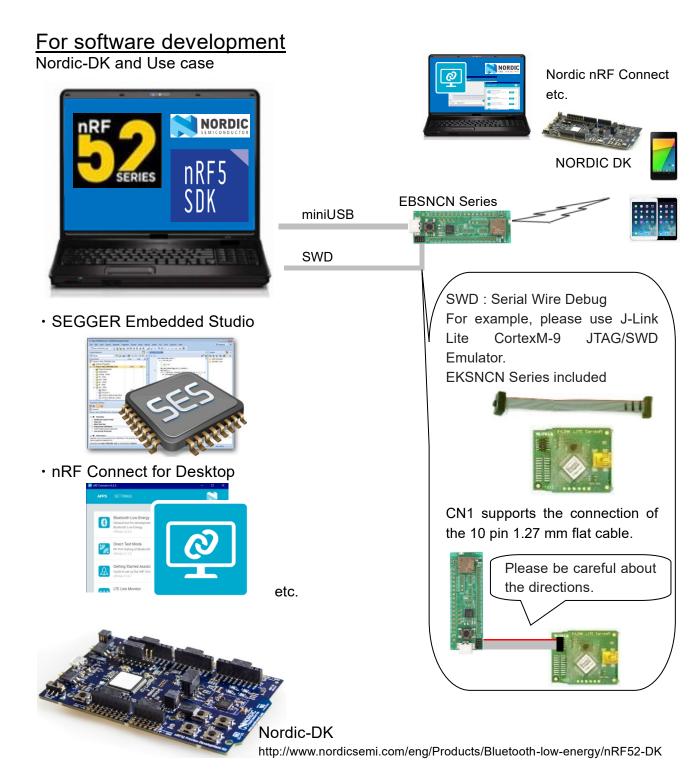



TAIYO YUDEN CO., LTD.

#### **MEMO**

#### 1) Current measurment


To measure the current, please cut the shorting 1pin and 2 pin of CN6. And connect an ampere-meter between the pins of connector CN6 to monitor the current directly.

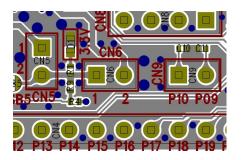


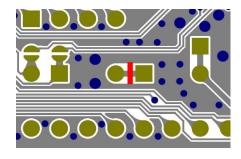

#### 2) About the power supply of the module

When you use external power supply, please supply power from 15 and 16pin of CN3. On this configuration, please cut the short circuit 1pin and 2pin of CN5 in order to separate 3V3OUT of FT232RQ.

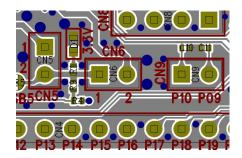

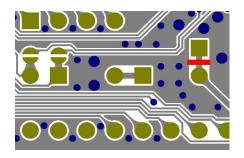

#### 3) USB to serial UART interface

It needs to install driver of FT232RQ to use USB for UART interface. The drivers are available on FTDI website.

http://www.ftdichip.com/Drivers/D2XX.htm

In addition, by the application development, please assign GPIO as follows.

GPIO	UART
P0.05	RTS
P0.06	TX
P0.07	CTS
P0.08	RX

