PM7/PM8/PM8 Series



Features:

- · RFI Filter Module Combines IEC Connector, Fusing, and Voltage Select Features in One Unit
- PM7 Series Filters Provide 20% More Differential Mode Attenuation Than Comparable Units
- · Accepts Either U.S. or European Standard Fuse Sizes
- · Available to UL/IEC 60601 Standard and Meets UL 544 Specification for Medical and Dental Applications

Specifications:

Rated Voltage: 250VAC Maximum - 50/60 Hz **Rated Current:** 115VAC 250VAC 3A 3A

6A 6A

Current Overload: 6X for 8 Seconds

Hi-Pot Test (1 min):

Line to Ground 1500VAC Line to Line 1768VDC

Insulation Resistance: 9 x 109 Ω at 100VDC Ambient Temperature: 40°C Max. at Rated Current

Humidity Range: 0% to 95% R.H.

Termination:

· IEC Receptacle Wire Wrap/Solder

Maximum Leakage Current:

Each Line to Ground PM7, PM 8, PM9 115VAC, 60Hz: 0.002mA 250VAC, 50Hz: 0.005mA

Voltage Select Card: Installed in 120VAC position

unless otherwise specified

Agency Approvals:










Refer to Page 86 for Ordering Instructions


PM7 Series Simplified Schematic

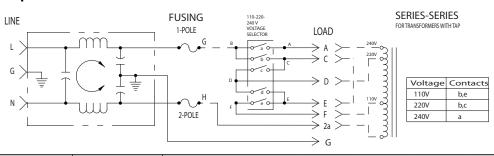


Nominal Current Rating	Part Number	Termination Line/Load	MINIMUM INSERTION LOSS - dB (50 ohm Circuit)						
			MODE	Frequency - MHz					
				.15	.50	1.0	5.0	10	30
3A	PM7XXX03 PM8XXX03 PM9XXX03	IEC/Solder Tabs	Common Differential	14 8	20 18	22 24	24 46	22 50	15 40
6A	PM7XXX06 PM8XXX06 PM9XXX06	IEC/Solder Tabs	Common Differential	10 8	15 18	18 24	18 39	18 40	15 40






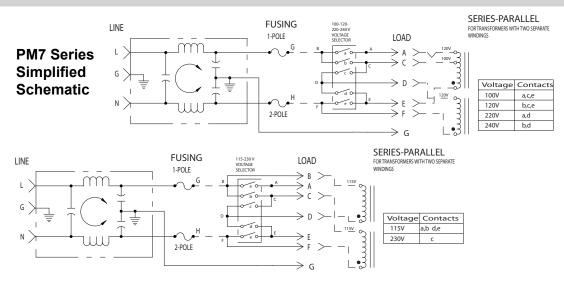



PM8 Series Simplified Schematic

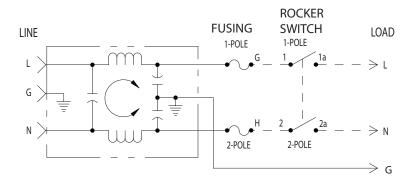



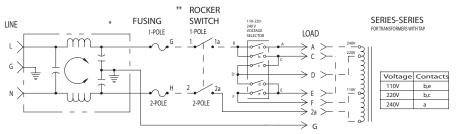

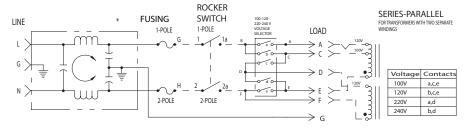

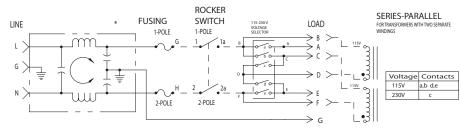



PM7/PM8/PM8 Series (continued)


PM7/PM8 Snap-Mount Series

(3 and 6Amp) Dimensions

Refer to Page 82 for Standard Mounting Cutouts

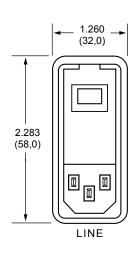

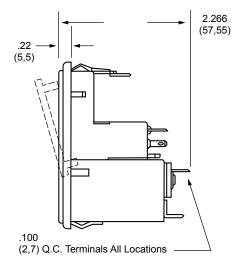


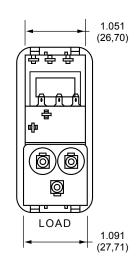

PM7/PM8 Screw-Mount Series

(3 and 6Amp) Dimensions

Refer to Page 82 for Standard Mounting Cutouts

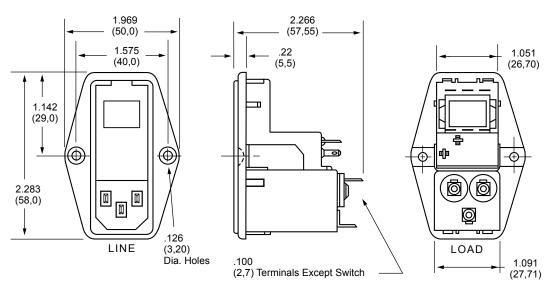







PM9(3 and 6Amp) Dimensions

Refer to Page 82 for Standard Mounting Cutouts

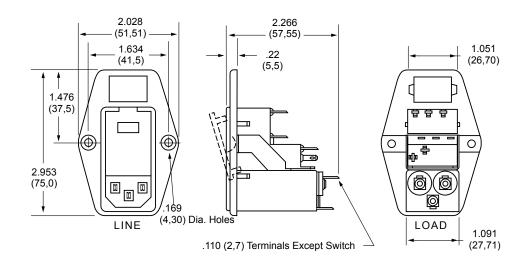

How to Order

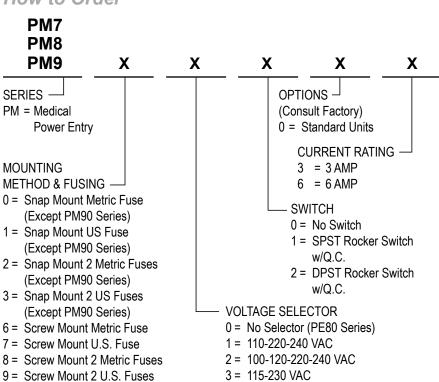

INSTALLATION INSTRUCTION IMPORTANT – CHANGING FUSE/VOLTAGE

PM7/PM8/PM9

To change fuse, remove power cord and open the front cover on the module. Remove fuse holder and replace fuse. Reinsert fuse holder and close cover. To change the operating voltage on the PM7 and PM9 Series, remove the power cord and open front cover. Rotate voltage select wheel until desired voltage appears in window of cover.

· Filter shipped without fuse.

Always use caution when selecting and changing fuses and voltage requirements. Curtis Industries is not responsible for malfunction due to improper installation/selection of fuse and/or voltage select.