



# RF SERIES ADAPTORS

All RFA Shown in Numerical Order (Left to Right, Top to Bottom)

<p>SMA (M) - BNC Male</p>  <p><u>RFA-8384</u></p>	<p>RCA (F) - BNC Female</p>  <p><u>RFA-8391</u></p>	<p>RCA (M) - BNC Female</p>  <p><u>RFA-8392</u> <u>RFA-8392-75</u></p>	<p>BNC (M) - RCA Female</p>  <p><u>RFA-8393</u> <u>RFA-8393-75</u></p>
<p>RCA (M) - BNC Male</p>  <p><u>RFA-8394</u></p>	<p>BNC (M) - RCA Male (9mm)</p>  <p><u>RFA-8394L</u></p>	<p>UHF (M) - TNC Female</p>  <p><u>RFA-8412</u></p>	<p>UHF (F) - TNC Male</p>  <p><u>RFA-8413</u></p>
<p>Mini UHF (M) - TNC Female</p>  <p><u>RFA-8422</u></p>	<p>Mini UHF (F) - TNC Male</p>  <p><u>RFA-8423</u></p>	<p>TNC (F) - FME Female</p>  <p><u>RFA-8451</u></p>	<p>TNC (F) - FME Male</p>  <p><u>RFA-8452</u></p>
<p>TNC (M) - FME Female</p>  <p><u>RFA-8453</u></p>	<p>TNC (M) - FME Male</p>  <p><u>RFA-8454</u></p>	<p>TNC (F) - RFN Male</p>  <p><u>RFA-8462</u></p>	<p>TNC (M) - RFN Female</p>  <p><u>RFA-8463</u></p>
<p>SMA (F) - TNC Female</p>  <p><u>RFA-8481</u></p>	<p>SMA (M) - TNC Female</p>  <p><u>RFA-8482</u></p>	<p>SMA (F) - TNC Male</p>  <p><u>RFA-8483</u></p>	<p>SMA Male - TNC Male</p>  <p><u>RFA-8484</u></p>
<p>SMA (M) - FME Male</p>  <p><u>RFA-8584</u></p>	<p>UHF (F) - N Female</p>  <p><u>RFA-8611</u></p>	<p>UHF (M) - N Female</p>  <p><u>RFA-8612</u></p>	<p>N (M) - UHF Female</p>  <p><u>RFA-8613</u></p>