
T-1 (3mm) SOLID STATE LAMP

Part Number: WP710A10SURC/E Hyper Red

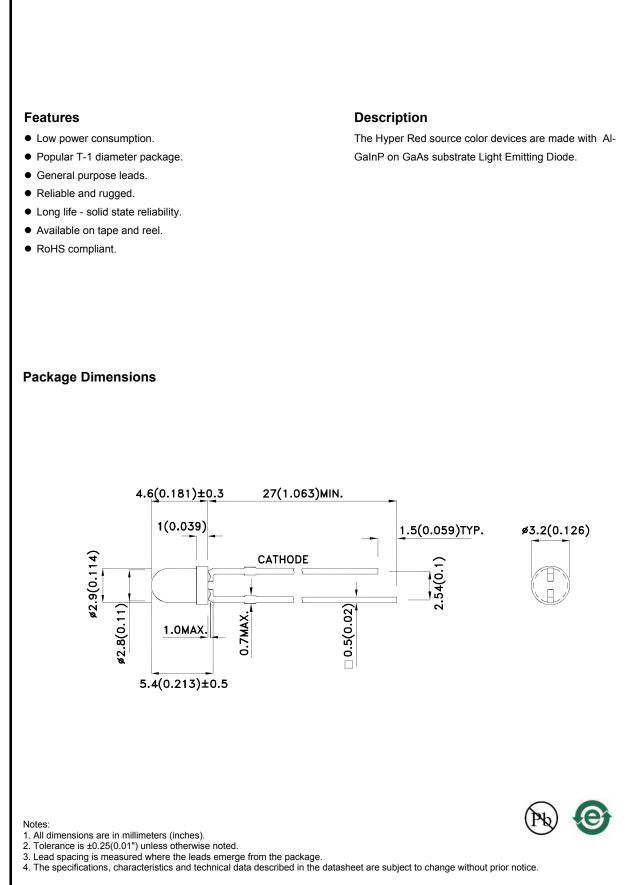

SPEC NO: DSAL0555 APPROVED: WYNEC REV NO: V.1 CHECKED: Allen Liu DATE: AUG/09/2010 DRAWN: Q.T.Yi PAGE: 1 OF 6 ERP: 1101029222

Selection Guide

Selection Guide					
Part No.	Dice	Lens Type	lv (mcd) [2] @ 20mA		Viewing Angle [1]
			Min.	Тур.	201/2
WP710A10SURC/E	Hyper Red (AlGaInP)	WATER CLEAR	1600	2500	34°

Notes:

θ1/2 is the angle from optical centerline where the luminous intensity is 1/2 of the optical peak value.
Luminous intensity/ luminous Flux: +/-15%.

Electrical / Optical Characteristics at TA=25°C

Symbol	Parameter	Device	Тур.	Max.	Units	Test Conditions	
λpeak	Peak Wavelength	Hyper Red	640		nm	IF=20mA	
λD [1]	Dominant Wavelength	Hyper Red	630		nm	I⊧=20mA	
Δλ1/2	Spectral Line Half-width	Hyper Red	25		nm	I⊧=20mA	
С	Capacitance	Hyper Red	45		pF	VF=0V;f=1MHz	
VF [2]	Forward Voltage	Hyper Red	1.9	2.5	V	IF=20mA	
lr	Reverse Current	Hyper Red		10	uA	VR = 5V	

Notes: 1.Wavelength: +/-1nm. 2. Forward Voltage: +/-0.1V.

Absolute Maximum Ratings at TA=25°C


Parameter	Hyper Red	Units			
Power dissipation	75	mW			
DC Forward Current	30	mA			
Peak Forward Current [1]	200	mA			
Reverse Voltage	5	V			
Operating/Storage Temperature	-40°C To +85°C				
Lead Solder Temperature [2]	260°C For 3 Seconds				
Lead Solder Temperature [3]	260°C For 5 Seconds				


Notes:

1. 1/10 Duty Cycle, 0.1ms Pulse Width.

2. 2mm below package base.


3. 5mm below package base.

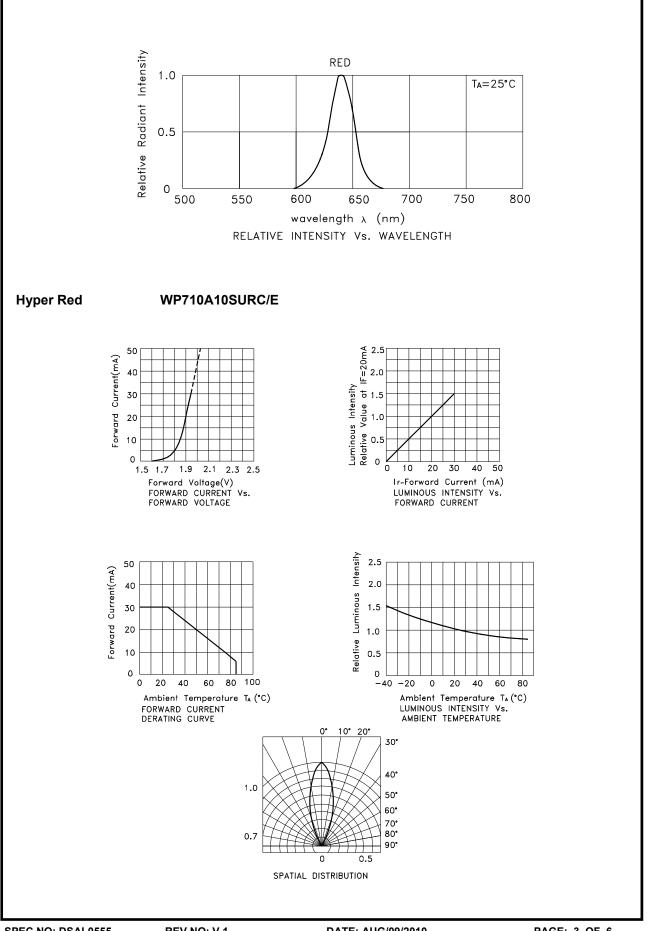

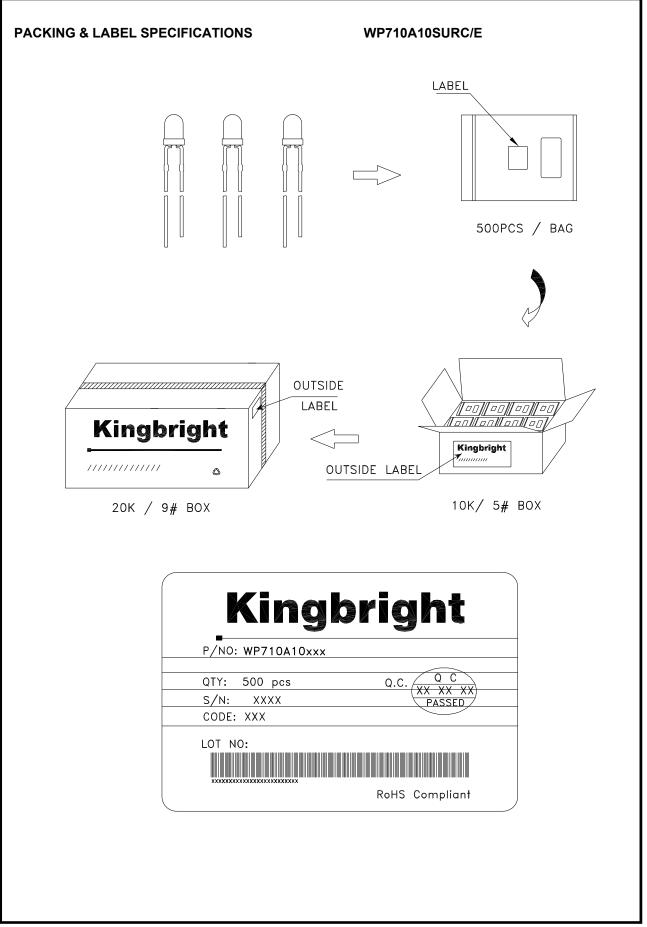


LED MOUNTING METHOD

 The lead pitch of the LED must match the pitch of the mounting holes on the PCB during component placement. Lead-forming may be required to insure the lead pitch matches the hole pitch. Refer to the figure below for proper lead forming procedures. (Fig. 1)

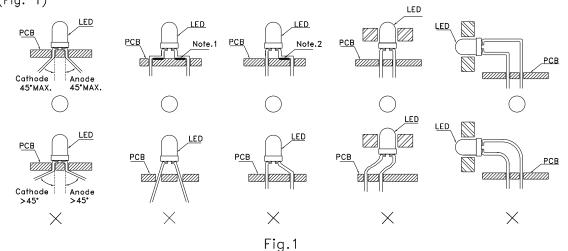



" \bigcirc " Correct mounting method " \times " Incorrect mounting method Note 1-2 : Do not route PCB trace in the contact area between the leadframe and the PCB to prevent short-circuits.

2. When soldering wire to the LED, use individual heat-shrink tubing to insulate the exposed leads to prevent accidental contact short-circuit. (Fig. 2)



3. Use stand-offs (Fig. 3) or spacers (Fig. 4) to securely position the LED above the PCB.

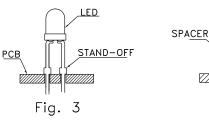



DATE: AUG/09/2010 DRAWN: Q.T.Yi


Fig. 4

LED


PCB

LEAD FORMING PROCEDURES

1. Maintain a minimum of 2mm clearance between the base of the LED lens and the first lead bend. (Fig. 5 and 6)

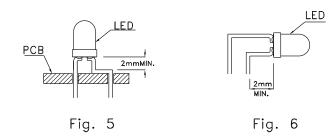

- 2. Lead forming or bending must be performed before soldering, never during or after Soldering.
- 3. Do not stress the LED lens during lead-forming in order to fractures in the lens epoxy and damage the internal structures.
- 4. During lead forming, use tools or jigs to hold the leads securely so that the bending force will not be transmitted to the LED lens and its internal structures. Do not perform lead forming once the component has been mounted onto the PCB. (Fig. 7)
- 5. Do not bend the leads more than twice. (Fig. 8)

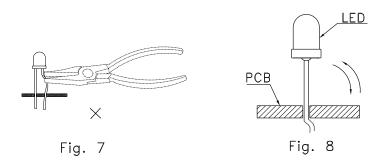

6. After soldering or other high-temperature assembly, allow the LED to cool down to 50°C before applying outside force (Fig. 9). In general, avoid placing excess force on the LED to avoid damage. For any questions please consult with Kingbright representative for proper handling procedures.

