# **Interactive Catalog Supplements Catalog PDFs**

If you need detailed product information, or help choosing the right product for your application, see our <u>Interactive Catalog</u>. Use the <u>Interactive Catalog</u> to access the most complete and up-to-date information available.

The Interactive Catalog provides an extensive collection of product specifications, application data, and technical literature that can be searched based on criteria you select.

This PDF catalog information was published in November 2000.



Click this icon to try the Interactive Catalog.

Sensing and Control
Honeywell Inc.
11 West Spring Street
Freeport, IL 61032



#### Miniature Manual Line





#### **FEATURES**

- Breadth of line offers complete selection of pushbuttons, rockers, and indicators to accommodate different functions and promote operator efficiency.
- Printed wiring board (PWB) or panel mounted switches, plus multi-unit strip mounting, and single level termination for cost-effective installation.
- Tactile feedback imparts a definite feel of switching action.
- Coordinated appearance enhances panel harmony.
- Illumination by long-life LEDs and incandescent lamps—for lighted display versatility.
- Solid state, electronic control and power duty switching—for electrical versatility.
- Temperature range: -18° to 65°C (0° to 149°F).

#### **DESIGN FREEDOM**

Rocker switches are available in the MICRO SWITCH MML Miniature Manual Line. They complement AML pushbuttons and indicators, providing you flexibility and design freedom to answer all your miniature manual control requirements. You can choose the actuator option that matches the switch function and natural habit pattern reflex of the operator. You no longer need to compromise quality, appearance, or human factors considerations, because of size constraints.

The MML pushbutton and indicator offering has also been expanded to include new square forms which are small enough to fit in the tightest places.

#### MOUNTING FLEXIBILITY

Printed wiring board (PWB) mounted switches can be arranged in individual panel openings or multi-unit strips, in a common panel cutout. Optional support brackets provide added rigidity for standalone PWB mounted devices. Units with bezels and mounting clips can be snap-in mounted from the panel front.

Single level PWB or solder/quick-connect termination throughout makes wiring faster, easier, and more economical. Housings are designed to accommodate washing, before and after wave soldering, to help prevent contamination during printed wiring board installation.

#### LIGHTED DISPLAY OPTIONS

Pushbuttons and indicators can be fullface illuminated by LEDs or incandescent lamps for high visibility of colors and legends. Inherently rugged, long-life LEDs reduce service and maintenance costs. Also, their low drive and inrush current (30 mA or less) reduces costs of drive circuitry.

Rockers can be furnished with colored lenses for illumination by LEDs or incandescent lamps.

#### **CONTROL VERSATILITY**

Solid state pushbutton switches with Hall effect integrated circuits interface directly with microprocessors and other logic level devices. Time-proven for billions of cycles, Hall effect ICs provide the ultimate in reliability.

Electronic control pushbutton or rocker switches, with gold or silver contacts, handle up to 1 amp; power duty switches, up to 6 amps.

## Miniature Manual Line

#### MML ENHANCES PANEL HARMONY

The attractive clean line design of the total MML offering is coordinated to work in harmony and enhance the visual qualities of your product. MML will help make a good first impression with your customers by blending with other panel components. And also work hard over the long run to maintain operator satisfaction.

#### **HOW TO ORDER**

To specify MML catalog listings, refer to the order guides. They are based on a modular cataloging system which gives you the flexibility to choose the combination of feature options that best answers the requirements of your application.

#### **ORDER GUIDES**

Solid State Switches	
MML11 Pushbutton Switches	8
Electronic Control Switches	
MML21 Pushbutton Switches	
MML24 Rocker Switches	2
Power Duty Switches	
MML31 Pushbutton Switches	4
ndicators	
MML41 Indicators/LED or Incandescent Display	6
MML46 Indicators/LED or Incandescent Display6	6
Lenses and Buttons	
MML51 Lenses/Incandescent or Non-lighted Display6	8
MML52 Lenses/LED or Neon Display	8
Mounting Hardware	
MML61 Strip Mounting Frames7	1
MML72/73 Bezels and Mounting Clips	2
MML74 PWB Mount Support Brackets7	2
LEDs, Lamps, Receptacles	
MML92/93 LED's/Receptacles73/70	
MML91/93 Incandescent Lamps/Receptacles	6



**MML medical application.** Intranvaneous fluid flow controller automatically dispenses fluids for medications, therapy, and nutrition.



**MML communications application**. Mobile radio control keeps businesses in touch with employees on the road.

# Miniature Manual Line

MML CHARACTERISTICS

	MML 10 Series	MML 20 Series	MML 30 Series	MML 40 Series
Mechanical Lifetime*				N/A
Pushbuttons–Momentary	1,000,000	250,000	100,000	
Pushbuttons-Alternate	100,000	100,000	100,000	
Rockers	100,000	250,000	100,000	
Electrical Lifetime * * *				N/A
Pushbuttons-Momentary	1,000,000	25,000	25,000	
Pushbuttons-Alternate	100,000	25,000	25,000	
Rockers	100,000	25,000	25,000	
Agency Ratings				
ŬL	File E53576	File E12252	File E12252	File E58932
CSA	File L R4442	File LR4442	File LR4442	File LR4442

#### MML ELECTRICAL DATA MML10 SERIES

Flootnical Chanastanistics	Into anoto al Cinovit Evanstion	F 24 VDC Circlein a
Electrical Characteristics	Integrated Circuit Function	5-24 VDC Sinking
	Supply Current (Max.)	7 mA (Released) 8 mA (Operated no load)
	Output Voltage (Operated)	0.3 Volt (Sinking 10 mA)
	Output Leakage Current Max. (Released)	5.0 μΑ
	Switching Time Max. Rise 10% to 90% Fall 90% to 10%	1.5 μ sec (Sinking 10 mA) 0.5 μ sec (Sinking 10 mA)
	Rated Output Current	10 mA Sinking
Absolute Maximum	Supply Voltage (V <sub>s</sub> )	-28 to +28 VDC
Ratings	Voltage Externally Applied to Output	-0.5 Volt min. +28 Volts max. (Off condition)
	Loads to Output	20 mA (Sinking)
	Storage Temperature	-40° to +85°C (-40° to +185°F)
A 20 10 15 15 15 15 15 15 15 15 15 15 15 15 15	Operating Temperature	-18° to +65°C (0° to +149°F) and supply voltage of 4.5 to 5.5 VDC

As with all solid state components, performance can be expected to deteriorate as rating limits are approached; however, they will not be damaged unless the limits are exceeded.

<sup>\* 95%</sup> Survival \* \* Lifetime at Full Rated Load

# **Manual Switches** Miniature Manual Line

#### **MML20 SERIES**

Electrical Rating (silver contacts)	Standard buttons Up to 1 amp, 125 VAC
	1 piece plunger/lens cap buttons: Black—Up to 1 amp, 125 VAC All others—Up to 0.5 amp, 125 VAC
Electrical Rating Gold Contacts	All button styles: Up to 0.25 amp, 30 VDC UL rating—0.10 amp, 30 VDC
	One pole Form C

#### MML30 SERIES

#### MML31:

Contact Arrangement	1 or 2 poles Form X
Electrical Rating	6A @ 125 VAC, 250 VAC; 2A @ 30 VDC;
Silver Contacts	1A @ 125 VDC "L"; 1/10 hp @ 125 VAC

# Solid State Pushbutton

#### LED, INCANDESCENT, OR NON-LIGHTED DISPLAY



#### **FEATURES**


- Hall effect reliability
- Provides low voltage signals that interface with nearly all DC logic
- Accepts one LED or incandescent lamp
- Printed wiring board mountingUL recognized, CSA certified
- Bezels and mounting clips, LEDs and legended lenses can be furnished installed or ordered separately

#### Example: MML11KK3AAKRSDR

Furnished with black bezel; mounting clips (long sides); red LED, and red lens installed.

#### **MML11 ORDER GUIDE**


Catalog listing codes for switch, less assembled display options

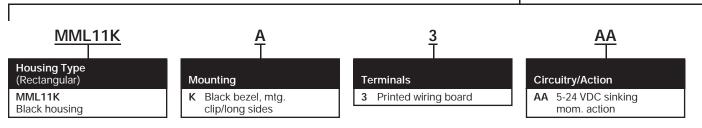


Electrical Data	page 56
Strip and matrix mounting	page 71
Mounting dimensions	page 79
PWB pin locations	page 79
LED/receptacle	pages 73/74
Lamp/LED/Lens	pages 75/76

#### **Current Sinking Output**

A permanent magnet plunger moves adjacent to the Hall effect integrated circuit to give a digital, current sinking (normally high and normally low) output.

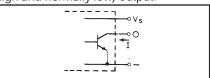

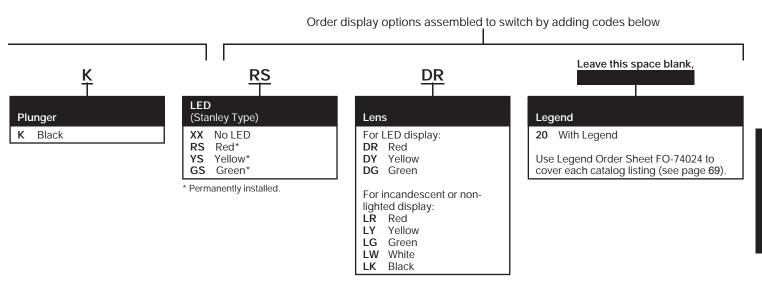

#### **CUSTOMER INSTALLATION:**

#### LED

- Order LED and receptacle, page 73.
- 2. Installation instructions, page 74/76.

#### Incandescent Lamp

- Order lamp/PWB receptacle or lamp/solder receptacle, page 75.
- 2. Installation instructions, page 76.

### **Electronic Control Pushbutton**

#### LED, INCANDESCENT, OR NON-LIGHTED DISPLAY



PWB Mount (Standard plunger)



Panel Mount (Standard plunger)



PWB Mount (One-piece plunger)

#### FEATURES

- Silver or gold contacts
- Choice of rectangular or square housings
- Accepts one LED or incandescent lamp
- Printed wiring board or snap-in panel mounting
- Bezels and mounting clips, LEDs and legended lenses can be furnished installed or ordered separately
- UL recognized, CSA certified

#### Example: MML21KK3AAK

Electronic control pushbutton switch with standard plunger; rectangular housing (black); bezel (black); mounting clips on long sides, PWB terminals; 1-pole, momentary action, silver contacts, black plunger.


#### Example: MML21KK3AAKRSDR

As above, except furnished with red LED and red lens installed.

MML21KK3AAHRSXX20 as above, legended.


MML21 STANDARD PLUNGER SWITCHES ORDER GUIDE

Catalog listing codes for switch, less assembled display options

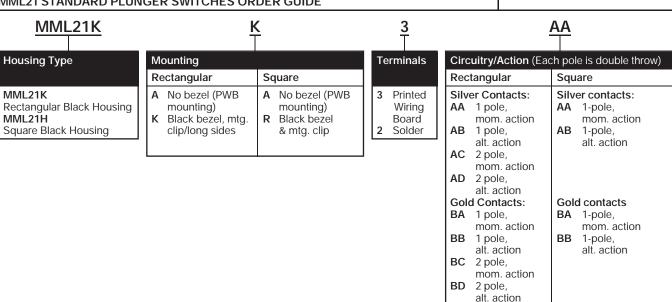


#### MML21 ONE PIECE LENS/PLUNGER SWITCHES ORDER GUIDE

Catalog listing codes for switch, less assembled display options

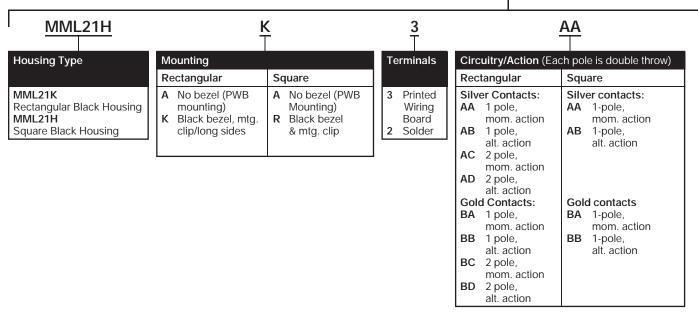

Electrical Data	page 57
Bezels	page 72
Strip and matrix mounting	page 71
PWB pin locations	page 79

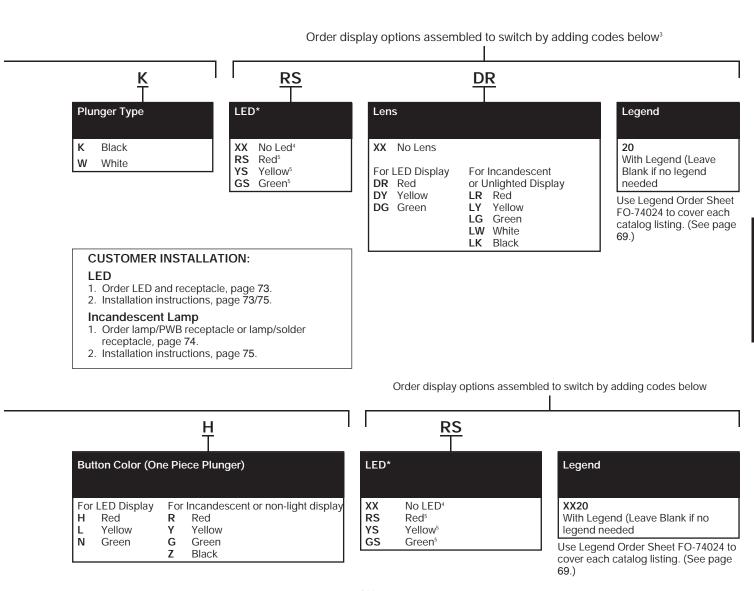

#### \* Notes:

- When an LED is specified in a rectangular MML21 listing, MICRO SWITCH will permanently install it in the housing.
- MICRO SWITCH does not permanently install an LED in a square MML21 listing. To install an LED in a square housing, order a MML93L or MML93G receptacle and a MML92 LED (see pages 86 and 88).
- 3. Include four digits (XXXX or XX DR) when a legend is required.
- 4. For square or rectangular only.
- 5. For rectangular only.

# **Electronic Control Rocker Switches**

#### LED, INCANDESCENT, OR NON-LIGHTED DISPLAY







**PWB Mount** Panel Mount (Lighted rocker)

#### **FEATURES**

- Accepts one or two LEDs or Accepts one of two EEDs of incandescent lamps which are ordered separately
   Printed wiring board mounting or
- snap-in panel mounting
- Bezels and mounting clips can be furnished installed or ordered separately
- UL recognized, CSA certified

**MML24 ORDER GUIDE** 

(Catalog listing for switch, less assembled display options)

MML24K	A	3	AA
Housing Type	Mounting	Terminals	Circuitry
MML24K Black housing	A No bezel (PWB mounting) K Black bezel, mtg. clip/long sides	<ul><li>3 Printed wiring board</li><li>2 Solder</li></ul>	Insert code letters from Circuitry Chart

Electrical Data page 57
Bezels page 72
Strip and matrix mounting page 71
Mounting dimensions pages 85/86
PWB pin locations page 85


Rockers are permanently installed.


#### **CIRCUITRY**

CIRCUITR	Y	
		2-Position 3-Position
Silver Contacts	Gold Contacts	
AA	BA	1 2 3 1 2 3 1 2 3 1 2 3
AC	BC	1 2 3 1 2 3 1 2 3 1 2 3 1 2 3 4 5 6 4 5 6 4 5 6 4 5 6


Example: MML24KA3AA01HDRXX


Electronic control rocker switch with black housing, printed wiring board terminals; 1 pole, silver contacts; 2-position, maintained action; one circuit ON in each position; black rocker, red lens for LED display in Side 1 and no lens in Side 2.

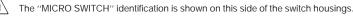

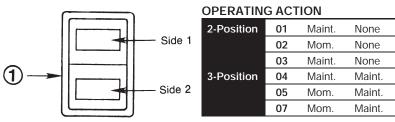

Order display options assembled to switch by adding codes below.

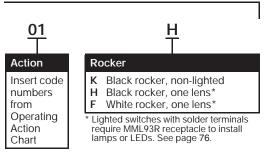

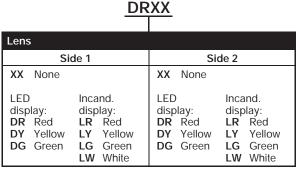



Maint

Maint

Mom.

Maint.

Mom.

Maint.

#### CUSTOMER INSTALLATION:

#### LED

- 1. Order LED and receptacle, page 73.
- 2. Installation instructions, pages 74/76.

#### Incandescent Lamp

- Order lamp/PWB receptacle or lamp/solder receptacle, page 75.
- 2. Installation instructions, page 76.

# **Power Duty Pushbutton**

#### **NON-LIGHTED DISPLAY**





Panel Mount

#### **FEATURES**

- Printed circuit board or snap-in panel mounting
- Bezels and mounting clips, and legended lenses can be furnished installed or ordered separately
- UL recognized, CSA certified.

#### Example: MML31KK2AAK


Power duty pushbutton switch housing (black); bezel (black) and mounting clips; solder terminals; 1 pole, momentary action; black plunger.

#### Example: MML31KK2AAKLR


As above, except furnished with red lens.

#### **MML31 ORDER GUIDE**

Catalog listing codes for switch, less assembled display options

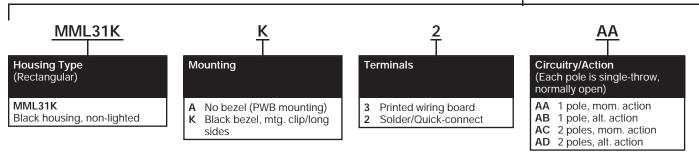

Electrical Data	page 57
Bezels	page 72
Strip and matrix mounting	page 71
Mounting dimensions	pages 85/86
PWB pin locations	page 85

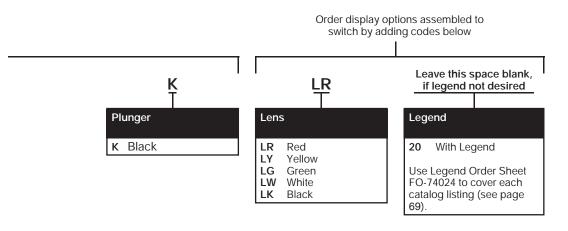

# MML41/46 Series

Accepts one LED or incandescent

MML41 indicators resemble a pushbutton switch with the button in the "down" posi-

# Indicators/Pushbutton Style

#### LED OR INCANDESCENT DISPLAY






PWB Mount

MML41 ORDER GUIDE

Panel Mount

Catalog listing codes for indicator, less assembled display options

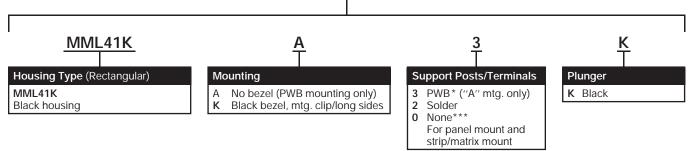

# **Indicators/Flush Mount** MML46

#### LED OR INCANDESCENT DISPLAY







**PWB Mount** 



Panel Mount

#### **FEATURES**

**FEATURES** 


lamp

tion.

- Accepts one or two LEDs or incandescent lamps
- Bezels and mounting clips, LEDs and legended lenses can be furnished installed or ordered separately

#### MML46 ORDER GUIDE

Catalog listing codes for indicator, less assembled display options

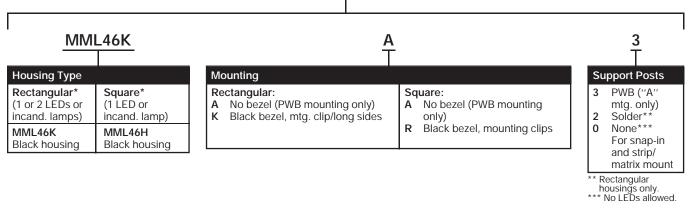

#### \* Notes:

- When an LED is specified in a rectangular MML46 listing, MICRO SWITCH will permanently install it in the housing.
- 2. MICRO SWITCH does **not** permanently install an LED in a **square** MML46 listing. To install an LED in a square housing, order a MML93L or MML93G receptacle and a MML92 LED (see pages 74 and 76).

# Indicators/Pushbutton Style

Example: MML41KA3K

Pushbutton style indicator housing (black): no bezel; support posts; black plunger.


Example: MML41KA3KRSDR

As above, except furnished with one red

LED and red lens.

**Electrical Data** page 57 Lenses page 68 Bezels page 72 pages **73/75** LEDs/Lamps Strip and matrix mounting page 71 Mounting dimensions pages 80/82/83 PWB pin locations pages 80/84

Order display options assembled to indicator by adding codes below

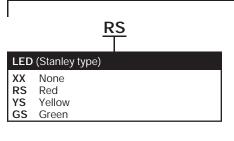

Example: MML46KA3

Indicator housing, rectangular (black); no bezel; support terminals.

Example: MML46KA3RSXXDR20

As above, except furnished with red LED and red lens, with legend.

#### **CUSTOMER INSTALLATION:**

#### **LED**

- 1. Order LED and receptacle, page 73.
- 2. Installation instructions, pages 74/76.

#### **Incandescent Lamp**

- Order lamp/PWB receptacle or lamp/solder receptacle, page 75.
- 2. Installation instructions, page 76.

#### Lens For LED display: For incandescent or Red DR non-lighted DY Yellow display:\* DG Green LR Řed LY Yellow LG Green LW White LK Black

When ordering incandescent or non lighted display, LED field must be XX.

# if legend not desired

#### Legend With legend

Use Legend Order Sheet FO-74024 to cover each catalog listing (see page 69). Note: If legend is not desired, leave this space blank

Leave this space blank

LED TERMINATION


If LEDs are to be permanently installed by MICRO SWITCH, please indicate by either a 2 (solder) or a 3 (PWB) for the Support Posts listing code. With MICRO SWITCH identification to the rear, the longest lead (+) anode will be to the left, closest to the double-pole circuit or support terminals.





Style 3 Style 2

Order display options assembled to indicator by adding codes below

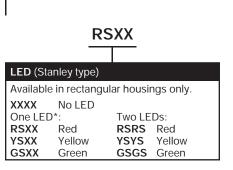

Square housings accept only one LED. Only a two-character LED code is necessary. Example: MML46HR0XXDY.

Lens For LED display: For incandescent or DR Red non-lighted display:\* DY Yellow DG Green LR Red Yellow LY LG Green LW White LK Black

 $^{\ast}$  When ordering incandescent or non-lighted display, LED field must be XXXX.

Leave this space blank if legend not desired 20 Legend

With legend

Use Legend Order Sheet FO-74024 to

Manual Switches MML51 Series

Red

Yellow

Green


White

Black (Opaque)

# Button Lenses/Incandescent or Non-lighted Display

#### MML51 ORDER GUIDE

For standard plunger MML pushbuttons.

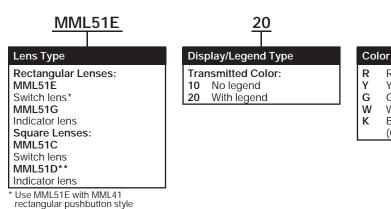

Example: MML51E20R

Incandescent or non-lighted display switch lens; red transmitted color, with legend.

#### **LEGENDING**


Use the MML Legend Order Sheets on pages 81 and 82 to specify legending.

# **Button Lenses/LED** MML52

#### MML52 ORDER GUIDE

MML51D for use with MML41

For standard plunger MML pushbuttons.

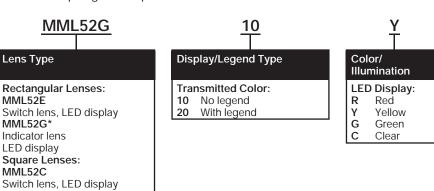

Square lenses have tabs on two sides. Before snapping in place, the tabs should be at right angles to the housing side with the MICRO SWITCH logo. (See below.)

MICRO SWITCH logo on housing

Lens key tab

Example: MML52G10Y

LED display indicator lens; yellow transmitted color, no legend.

# \*\* Use MML52D with MML41 square.

**HOW TO INSTALL LENSES** 

Indicator lens, LED display

\* Use MML52E with MML41
rectangular pushbutton style

MML52D\*\*


Keytabs on two sides of the lenses mate with matching button slots.

**Rectangular** lenses have tabs on the long sides. Seat a long side before snapping in place.

#### **HOW TO INSTALL LENSES**



1. Seat lens

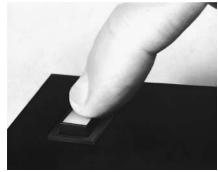

2. Snap in place.

68

# Miniature Manual Line

# Honeywell

# **MML Pushbutton/Indicator Lens**

ō Legend Order Guide/Product Specification (PG\_

Max Characters/Line	5/64 7/64 9/64 13/64	-	2	2	က
racter	9/64	2	2	3	4
Cha	7/64	2	3	4	4
Max	5/64	3	4	9	7
ea	5/64 7/64 9/64 13/64	1	1	-	-
Max Lines/Area	9/64	-	-	-	-
fax Li	7/64	-	-	-	-
	5/64	2	2	1	2
Figure	8	-	2	3	4
ndicator Type	ation	C	D	Ш	g
Switch & Indicator Lense Type	Orientation				

Catalog Listing MML 5		
Customer P.O. No.	Customer Dwg. No.	
MICRO SWITCH Sales Order	Line Number	Schedule No.
Customer:		
Address:	٠	

Fill in appropriate catalog listing - one listing/sheet.

Instructions

2. Check proper figure #. Type size, Type color.
3. Fill in quantity required.
4. Indicate legends desired — Do not exceed maximums shown in Legend Order Guide.

# Hot Stamp Legending

1. For Proper Legend Orientation, MML housings (when viewed from front of panel)

should have "MICRO SWITCH" logo oriented "UP"

2. All legends will be centered within Legend Area.3. Please use black ink in filling out this form to help us process your order.

Modified Gothic lettering (A thru Z). numerals (0 thru 9) and Symbols below available in 5/64, 7/64, 9/64, and 13/64.

Modified Gothic

**A**3

	*	٨	
	)	AF.	8
/BL	(	11	
STANDARD SYMBOLS AVAILABLE	/	×	→ ← C <sub>R</sub> 1/41/23/41/3 2/3 @
SA	11	4-	1/3
180	- 1	+1	3/4
SYN	4		1/2
2	?	+	1/4
DA	1	0	$c_{R}$
¥	••	%	4
S	••	% #	<b>→</b>
		¥	+
		\$	1

2nd Line

1st Line

Legend Description

Button ģ

Type Size Ink Color 7/64 9/64 13/64 Black White

5/64

Fig No

Customer Part No

LEGEND ORDER CHART

త ٧

8	
0	
2/3	NDS
← C <sub>R</sub> 1/41/23/41/3 2/3 @	LEGENDS
3/4	17
1/2	SPECIAL
1/4	SP
$_{R}^{C}$	
Ψ.	
<b>→</b>	
+	
1	

ial Legend Locations or Configura- NDARD legends will involve elivery time.	
NOTE: Use this area to show special Legend Locations or Configurations NOT shown above. NON-STANDARD legends will involve additional charges and increased delivery time.	

Fig.
Fig. "A"

ģ

**Manuals** 

(Date)

(Signature)

FO-74024-B

# **MML** Series

# Miniature Manual Line

**Manual Switches** 

	_	_	
Honeywell			

on, N o orie	MML ROCKER LEGEND ORDER GUIDE/PRODUCT SPECIFICATION (PG	Max Lines/Area Max Characters/Line Gustomer P.O. No.	5/64 7/64 9/64 13/64 5/64 7/64 9/64 13/64	2 1 1 1 3 2 2 1 MICHO SWITCH Sales Order	1 1 1 3 3 2 1 Customer:	3 2 2 1 4 3 3 2	Instructions   Instructions   Instructions   1	<ul> <li>nucrate regenus desired — Do not exceed maximums shown in Legena Order</li> <li>Guide.</li> <li>For Proper Legend Orientation. MML housings (when viewed from front of panel) should</li> </ul>	have "MICRO SWITCH" logo oriented to the left. For other Orientation, indicate the Housing Logo Location in Special Legend Area. All legends will be centered within Legend Area.	LEGEND ORDER CHART	Ink Color Button Legend Description	9/64 13/64 Black White Qty 1st Line 2nd Line				
Figure 1		Figure	No 5/64 7/6	2	·	ဗ	2	tion. MML hou	have "MICRO SWITCH" logo oriented to the left Housing Logo Location in Special Legend Area. 2. All legends will be centered within Legend Area. 3. Please use plank ink in filling out this form to the		Type Size In	9/64 13/64 Bla				_

# Strip Mounting Frames



#### **MML61 ORDER GUIDE**

MIMIL	<u>.61K</u>
Orientation/Color	
For Rectangular* How MML61K Horizontal strip, black MML61G Vertical strip, black	· ·
For Square Housings MML61J Black	5
* * .4" x .6" housings only.	

No. of Stations One Two 2 Three 4 Four 5 Five 6 Six 7 Seven 8 Eight Nine 10 Ten

Note: Switches and indicators are ordered as

#### **FEATURES**


- Provides back of panel or printed wiring board mounting in a multi-unit strip of switches/indicators.
- Devices can be pre-wired prior to installation.
- Holes at each end of frame will accept No. 4 screws.
- Can be used for pushbutton or rocker type switches.

Example: MML61K5

Black 5-station strip mounting frame, horizontal orientation.


Manuals

# **Manual Switches**Bezels/Mounting Clips

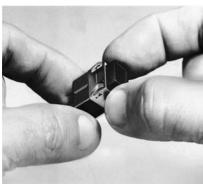

 Slip mounting clip over top of switch/ indicator housing.

MML72EEK (Black switch bezel, mounting clips on long sides)

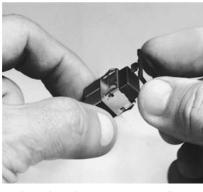

2. Snap bezel onto mounting clip.

Recommended panel thickness for panel mounted units is .050 to .094 in. (1,27 to 2,39 mm).

# TO ORDER MOUNTING CLIPS SEPARATELY

For Rectangular Housings: MML73EA (long sides) MML73EB (short sides)

**LEDs** 


#### LED APPLICATION INFORMATION

To insure stable conditions, suitable external control of the LED current must be provided. It is recommended that a minimum of 5 VDC open circuit voltage with an appropriate series resistance be used to drive LED devices. This minimizes current variation and its effect on temperature and forward voltage of the LED.

Maximum drive current is 30 mA. Reverse voltage breakdown of the LED's is 4 volts (min.).

Resistor values can be determined by supply voltage or current for LED:

$$Rs = \frac{E - V_f}{I_f}$$

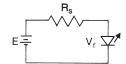

WHERE: Rs = Series Resistance

E = Supply Voltage

Vf = Forward Voltage

of LED

If = Circuit Current

#### **MML92 ORDER GUIDE**

LEDs should be the same color as the lenses they illuminate. They are packed 10 per listing, including stand-off spacers for use when solder terminating to a printed wiring board, per procedure 3 on page 74.

LED Type	Use To Illuminate	Catalog Listing	LED Color	Forward Characteristics Typ. @ 20mA	Max.	LED Manufacturers' Part Numbers
T-13/4	Rectangular button lens	MML92ERS MML92EGS MML92EYS	Red Green Yellow	1.7 V 2.1 V 2.1 V	Stanley: 2.0 V 2.5 V 2.5 V	ESBR5633 ESBG5633 ESAY5633
		MML92ERH MML92EGH MML92EYH	Red Green Yellow	2.2 V 2.3 V 2.2 V	Hewlett Packard: 3.0 V 3.0 V 3.0 V	HLMP-3366 HLMP-3568 HLMP-3466
T-1	Square button lens, MML24 rocker lens rectangular	MML92HRS MML92HGS MML92HYS	Red Green Yellow	1.7 V 2.1 V 2.2 V	Stanley: 2.0 V 2.5 V 2.5 V	ESBR3901 ESPY3901 ESAY3901
rectangular button lens		MML92HRH MML92HGH MML92HYH	Red Green Yellow	2.2 V* 2.3 V* 2.2 V	Hewlett Packard: 3.0 V 3.0 V 3.0 V	HLMP-1340 HLMP-1540 HLMP-1440

Long lead: Anode (+). Short lead: Cathode (-). \* @ 25 mA.

#### MML93 LED PWB RECEPTACLE ORDER GUIDE

LED Type	Use to Illuminate	Catalog Listing
T-13/4	Rectangular button lens or umbrella button lens	MML93K
T-1	Square button lens or MML24 rocker lens	MML93G

#### MML93 LED SOLDER TERMINAL ORDER GUIDE

LED Type	Use to Illuminate	Catalog Listing
T-1	Square button (base only)	MML93L
T-1	MML24 rocker lens (base only)	MML93R
T-1	Rectangular button (base and terminal)	MML93J

## **LEDs**

**Factory installed.** Certain MML switches and indicators can be furnished with LEDs **permanently** factory installed, where specified in the order guides.


#### LED INSTALLATION

# 1. With Printed Wiring Board Receptacle. (MML93K)


PWB receptacle enables T-1 <sup>3</sup>/<sub>4</sub> or T-1 LEDs to be added or replaced from behind the printed wiring board, without soldering. LEDs and receptacles are ordered separately. See page 75.

Printed wiring boards are not supplied.

**User installed.** LEDs can also be ordered separately and installed in these products by the user, per the procedures described below.

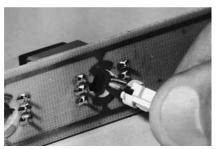

 Insert the LED/PWB receptacle assembly through a hole in the printed wiring board.

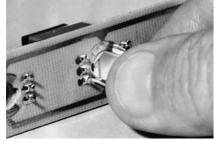

A 1/8-turn applied clockwise to the receptacle locks it in the printed wiring board and establishes the electrical connection.

# 2. With Solder Terminal Receptacle. (MML93J)

This receptacle attaches directly to the rear of panel-mounted units. It enables incandescent lamps to be added or replaced without rewiring. LEDs and receptacles are ordered separately.

This receptacle is for use with all rectangular pushbuttons and MML41 or MML46 rectangular indicators only.



1. Insert solder terminal receptacle into hole in base of panel mount unit.




2. A 1/8-turn clockwise applied to the receptacle locks it in the base.


# 3. By Soldering To Printed Wiring Board.

In this procedure, the housing is mounted on the printed wiring board after the T-1 ¾ LED has been seated.

This procedure can be used with any MML having PWB terminals.

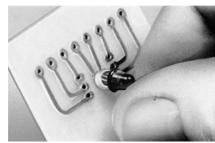


 Assemble stand-off spacer to LED terminals and seat on printed wiring board.

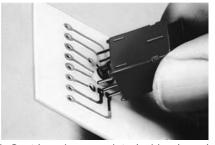

Seat housing on printed wiring board, with LED projecting into hole at the base of the housing.

#### By Soldering to Printed Wiring Board or Leadwire (MML44 indicators only).

T-1 3/4 LEDs are added to MML44 indicators via a procedure which is unique to this product. The LED is inserted from the top of the housing with the leadwires protruding through the housing base.

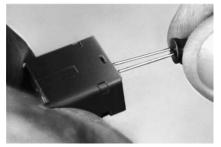

 Assemble LED to MML44 indicator, with the LED terminals protruding through assembly slot in the middle of housing base.



2. Use pencil eraser to snap LED securely in place.

# **Incandescent Lamp Assemblies**

#### MML91 LAMP/PWB RECEPTACLE ORDER GUIDE

Lamp Type	Use To Illuminate	Voltage	Catalog Listing Incl. Lamp & PWB Receptacle	Industry Lamp No.
T-1 ① (unbased)	Rectangular button lens	<b>5</b> 28	MML91C MML91DC	715 6838
T-1 @ (bi-pin)	Square button lens and MML24 rocker lens	5 28	MML91E MML91DE	7715 7839

MML91 LAMP/SOLDER RECEPTACLE ORDER GUIDE

Lamp Type	Use To Illuminate	Voltage	Catalog Listing Incl. Lamp & Solder Receptacle	Industry Lamp No.
T–1 ③	Rectangular	<b>5</b> 28	MML91D	7715
(bi-pin)	button lens		MML91DD	7839

Lamp Type	Use To Illuminate	Voltage	Catalog Listing @  Solder Receptacle	T-1 (Unbased) Lamp Only	Industry Lamp No.
T-1	Square	<b>5</b>	MML93L	MML91A	715
(unbased)	button lens	28	MML93L	MML91DA	6838
T-1	MML24	5	MML93R	MML91A	715
(unbased)	rocker lens	28	MML93R	MML91DA	6838

Notes:

① To order PWB receptacle separately, specify MML93H.
② To order PWB receptacle separately, specify MML93G.

Notes:

③ To order solder receptacles separately, specify MML93J.
④ Order solder receptacles and T-1 lamp listings for complete assembly.

# LED/Incandescent Lamp Receptacles

User installed. Certain MML switches and indicators will accept incandescent lamps, where specified in the order guides.

These lamps are ordered separately and installed by the user, per the procedures described below.

**LAMP INSTALLATION** 

#### 1. With Printed Wiring Board Receptacle for MML93G and MML93H only.

Use PWB receptacles to permit lamps to be added or replaced from behind the printed wiring board, without soldering.

These receptacles are for use with rectangular pushbuttons, square pushbuttons and MML24 rocker lens only.

Printed wiring boards are not supplied.

#### 2. With Solder Terminal Receptacle for MML93J bi-pin only

This receptacle attaches directly to the rear of panel-mounted units. It enables lamps to be added or replaced without rewiring.

This receptacle is for use with all rectangular pushbuttons and MML41 or MML46 rectangular indicators only.

#### 3. With Solder Terminal Receptacles for MML93L/93R Unbased Only or T-1 LED.

Use the receptacles shown at right to install T-1 LEDs or T-1 unbased lamps in panel-mounted MML21 square pushbutton switches and MML24 rocker switches.

#### Procedure:

- 1. Assemble LEDs or lamps to receptacles (leads first).
- 2. Snap receptacle into slots in housing
- 3. Solder directly to leads.




1. Insert the PWB receptacle/ incandescent lamp assembly through a hole in the printed wiring board.




2. A 1/8-turn applied clockwise to the receptacle locks it in the printed wiring board and establishes the electrical connection.




Insert solder terminal receptacle into hole in base of panel mount unit.

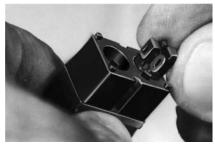

2. A 1/8-turn clockwise applied to the receptacle locks it in the base.

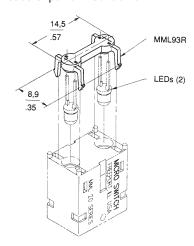

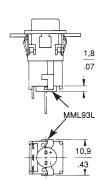

76


# **MML** Series

# Miniature Manual Line

**MOUNTING DIMENSIONS** (For reference only)

#### PANEL CUTOUTS FOR PUSHBUTTON SWITCHES AND INDICATORS/RECTANGULAR TYPE


#### INDIVIDUAL SNAP-IN PANEL MOUNT

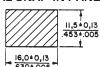



#### PANEL PUNCH FOR MML SERIES

A panel punch is manufactured by Greenlee-Textron Tool Co., Rockford, IL (815-926-3011).

#### INDIVIDUAL PRINTED WIRING BOARD (PWB) MOUNT

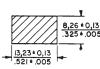

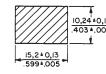

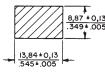

Pushbutton Plunger Thru Panel


Housing Thru Panel

Indicator Lens Thru Panel

#### MULTI-UNIT PRINTED WIRING BOARD (PWB) MOUNT

# PWB MOUNT (SWITCH SHOULDER THROUGH PANEL)

#### **Horizontal Mount**

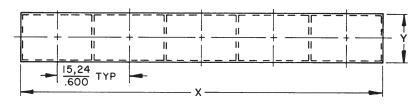

Establish tooling holes on X coordinate and use these holes to establish relationship between PWB and Panel

Terminals  $\frac{0,20}{.008} \times \frac{0,76}{.030}$ 


Recommended hole size in PWB  $\frac{1,17}{.046}$ 

N = Number of switches  $X = N-1 \times \frac{15,24}{.600} + \frac{15,11}{.595}$ 

 $Y = \frac{10,16}{.400}$ 

Example: N = 5 Switches  $X = 5-1 \times \frac{15,24}{.600} + \frac{15,11}{.595}$  $X = \frac{76,07}{2.995}$ 

#### Vertical Mount

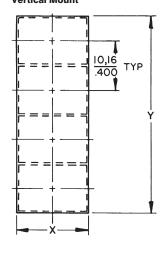

$$Y = N \times \frac{10,16}{.400}$$

$$X = \frac{15,11}{.595}$$

Example: N = 4 Y = 4 x  $\frac{10,16}{.400}$ Y =  $\frac{40,64}{1.600}$ 

# **MML** Series


# Miniature Manual Line


**MOUNTING DIMENSIONS** (For reference only)


#### PANEL CUTOUTS FOR PUSHBUTTON SWITCHES AND INDICATORS/SQUARE TYPE


# Individual Snap-in Panel Mount

#### **Individual Printed Wiring Board PWB Mount**

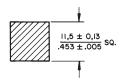

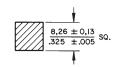

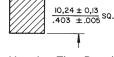

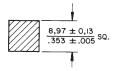


Pushbutton Plunger Thru Panel

Housing Thru Panel

Indicator Lens Thru Panel

See page 77 for panel punch manufacturer.

#### MULTI-UNIT PRINTED WIRING BOARD (PWB) MOUNT

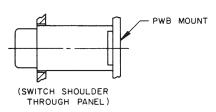


Establish tooling holes on X coordinate and use these holes to establish relationship between PWB and Panel

Terminals 
$$\frac{0,20}{.008} \times \frac{0,76}{.030}$$

Recommended hole size in PWB  $\frac{1,17}{.046}$ 

#### **Horizontal Mounting**

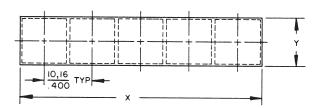

Formula:

N = Number of switches

$$X = N \times \frac{10,16}{.400}$$


$$Y = \frac{10,16}{.400}$$

Example: N = 5 Switches

$$X = 5 \times \frac{10,16}{.400}$$

$$X = \frac{50,80}{2.00}$$

#### **Vertical Mounting**

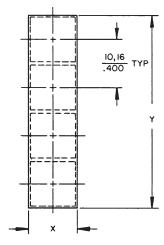

N = Number of Switches Formula:  $Y = N \times \frac{10,16}{N}$ 


$$X = \frac{10,16}{.400}$$

Example: N = 4  
Y = 4 x 
$$\frac{10,16}{.400}$$
  
Y =  $\frac{40,64}{1.600}$ 


# Miniature Manual Line

MOUNTING DIMENSIONS (For reference only)


# PRINTED WIRING BOARD MOUNT PUSHBUTTON SWITCHES/RECTANGULAR TYPE MML11 Switches PWB Pin Locations

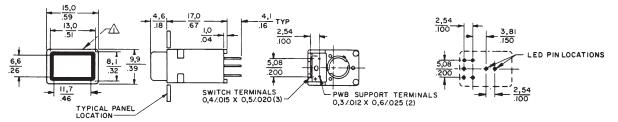


#### PWB Receptacle Installed (LED or Incandescent Lamp)

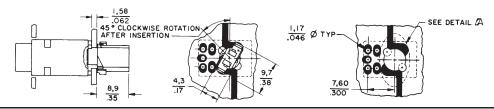


#### MML21 Switches PWB Pin Locations

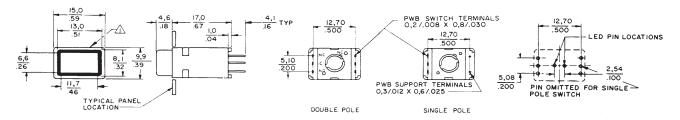

#### PWB Receptacle Installed (LED or Incandescent Lamp)

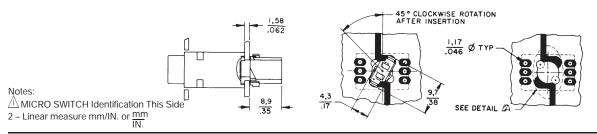

#### **MML31 Switches**

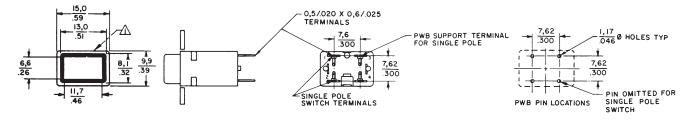



# Miniature Manual Line


MOUNTING DIMENSIONS (For reference only)

#### PRINTED WIRING BOARD MOUNT INDICATORS/RECTANGULAR TYPE


#### **MML41 Indicators**

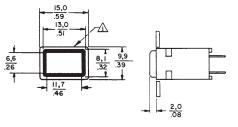

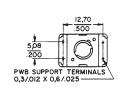


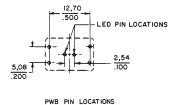


PWB Receptacle Installed (LED or Incandescent Lamp)

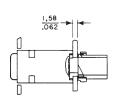




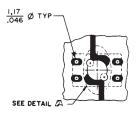


MML46 Indicators

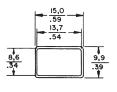


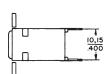





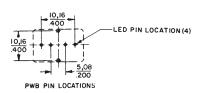


PWB Receptacle Installed (LED or Incandescent Lamp)

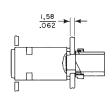

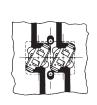

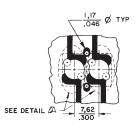

#### PWB Pad Location For Receptacle (LED or Incandescent Lamp)

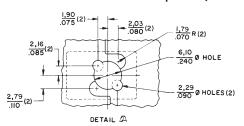


80

# Miniature Manual Line


**MOUNTING DIMENSIONS** (For reference only)

#### PANEL MOUNT PUSHBUTTON SWITCHES/RECTANUGLAR TYPE

**MML21 Switches** 

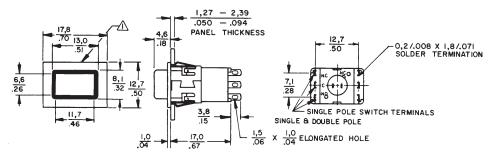

Solder Receptacle Installed (LED or Incandescent Lamp)

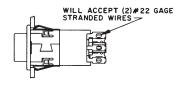




Notes:


MICRO SWITCH Identification This Side

2 – Linear measure mm/IN. or mm/IN.

Rotate 45° counter clockwise for removal from switch or indicator

#### **MML31 Switches**

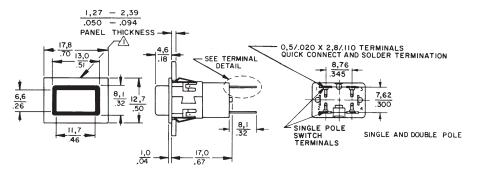

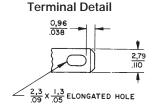

Manuals


Manual Switches MML Series

# Miniature Manual Line


MOUNTING DIMENSIONS (For reference only)

#### PANEL MOUNT INDICATORS/RECTANGULAR TYPE


#### **MML41 Indicators**

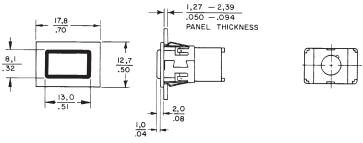


Solder Receptacle Installed (LED or Incandescent Lamp)

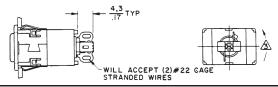

#### **MML43 Indicators**

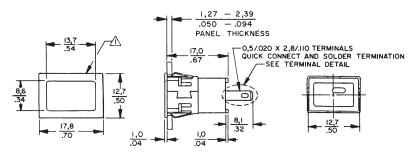




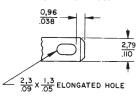


Notes:

MICRO SWITCH Identification This Side 2 – Linear measure mm/IN. or mm/IN

#### **MML46 Indicators**

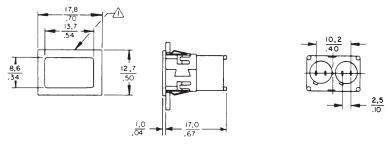

#### Solder Receptacle Installed (LED or Incandescent Lamp)

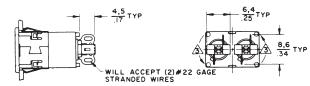


# Miniature Manual Line


MOUNTING DIMENSIONS (For reference only)

#### PRINTED WIRING BOARD MOUNT PUSHBUTTON SWITCHES AND INDICATORS/SQUARE TYPE


#### **MML21 Switches**

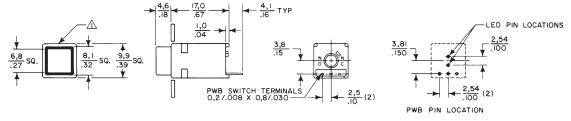


#### PWB Receptacle Installed (LED or Incandescent Lamp)

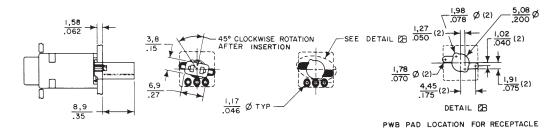

#### **MML46 Indicators**

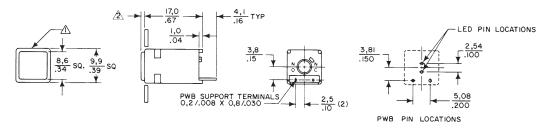


#### PWB Receptacle Installed (LED or Incandescent Lamp)

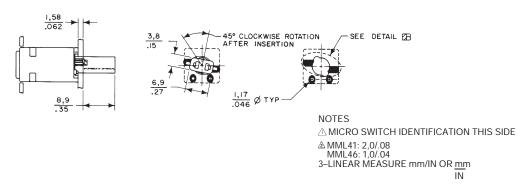


#### PANEL MOUNT PUSHBUTTON SWITCHES/SQUARE TYPE

#### **MML21 Switches**

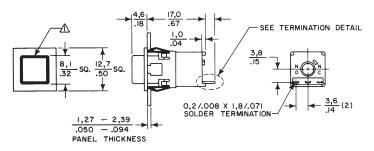

#### **Termination Detail**

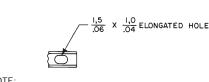


NOTE: To install LED or lamp, use MML93L receptacle shown on page 76.

Manual


# Miniature Manual Line

MOUNTING DIMENSIONS (For reference only)

**LENSES** 

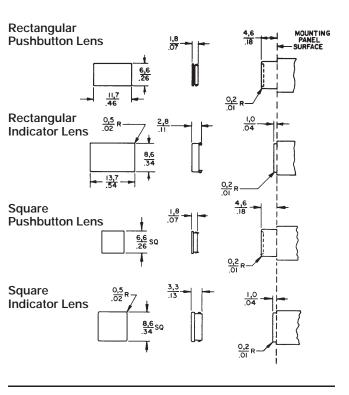

#### **PWB SUPPORT BRACKETS**

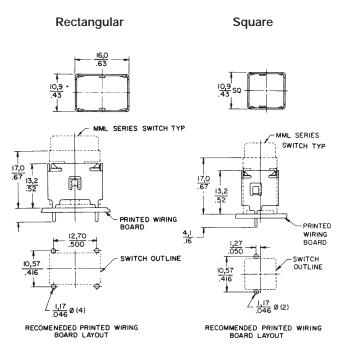


# **MML** Series

# Miniature Manual Line

**MOUNTING DIMENSIONS** (For reference only)


#### PANEL CUTOUTS FOR PWB MOUNT PADDLE AND ROCKER SWITCHES

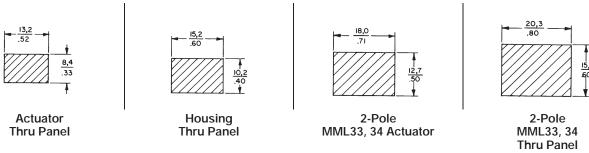


**Housing Thru Panel** 

See page 77 for panel punch manufacturer.

#### **MML24 Rocker Switches**

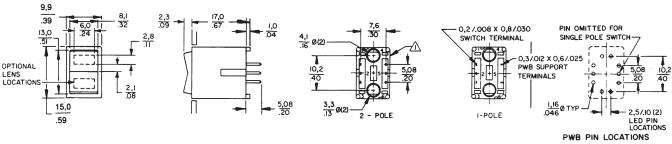


With PWB Receptacle Installed (LED or Incandescent Lamp)

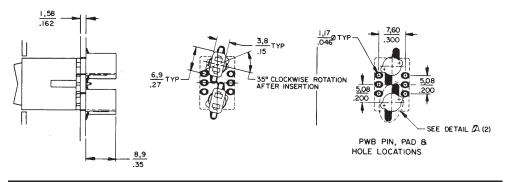

Notes:

2 – Linear measure mm/IN. or  $\frac{mm}{IN}$ .



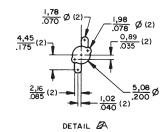

PWB PAD LOCATION FOR RECEPTACLE


#### **Manual Switches MML** Series


# Miniature Manual Line

MOUNTING DIMENSIONS (For reference only)

PANEL MOUNT ROCKER SWITCHES

#### **MML24 Rocker Switches**

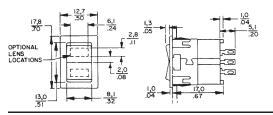

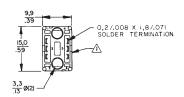

NOTE: To install LED or lamp, use MML93R receptacle shown on page 75.