Flame Resistant (Equivalent to UL-94 Standard V-0) FR Double Layer Tubing

TRB Series




45

● — 20 m roll □ — 100 m reel

Suitable for air and water piping in environments where sparks from spot welders, etc., may be a problem.

Double layer design using flame resistant resin (equivalent to UL-94 Standard V-0) for outer layer.





Sectional view of FR double layer tubing

Model

Model		TRB0604	TRB0806	TRB1075	TRB1209	
Inner tubing O.D. (mm)		6	8	10	12	
Inner tubing I.D. (mm)		4	6	7.5	9	
Outer layer thickness (mm)		1	1	1	1	
External layer color (epoc	Black (B)	<u> </u>	_		•	
	White (W)	<u> </u>				
	Red (R)	<u> </u>	•	<u> </u>		
	Blue (BU)	<u> </u>				
	Yellow (Y)	<u> </u>				
	Green (G)	─	•			

15

Min. bending radius (mm)					


Specifica									
Fluid	Air/Water								
Max. operating 20°		1.0	0	1.	0	1.0		1.0	0
pressure (MP		1.0	0	0.	8	0.	8	0.8	В
pressure (iii)	60°C	0.8	8	0.	6	0.	6	0.6	ŝ
Recommende	FR One-touch fittings: KR-W2 series								
Ambient and fluid temperature		-20 to +60°C (Water: 0 to 60°C) (No freezing)							
Material	Inner tubing	Nylon 12							
wateriai	Outer layer		PVC (Equivalent to UL-94 Standard V-0)						

28


35

Note) The color of all inner tubing is black.

Max. Operating Pressure

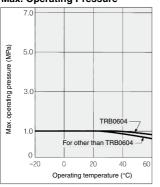

How to Order



Note) The color of the outer layer of all tubing is opaque.

Installation on One-touch Fittings

⚠Caution

Length of tubing to be inserted into One-touch fittings is indicated on the outer layer of TRB tubing. Cut the tube according to this indication, (Step 1) and then strip off the outer layer (Step 2) for installing into fittings.





Cut internal and external layers



Strip off external layer only

⚠ Precautions

Be sure to read this before handling the products.

Refer to back page 50 for Safety Instructions and pages 13 to 17 for Fittings and Tubing Precautions.

 Applicable for general industrial water. Please consult with SMC if using for the other kind of fluid. Also, the surge voltage pressure must be under the maximum operating pressure.

If the surge pressure exceeds the maximum operating pressure, it will result in damage to fittings and tubing

2. Abnormal temperature rise caused by adiabatic compression may result in the tube bursting.

KQ2

KQB2

KM

KF

M H/DL

KC

KK

KK130

DM KDM

KB

KR KA

KQG2

KG KFG2

MS

KKA

KP

LQ MQR

T IDK

ØSMC