

FEDL22Q53X-02

Issue date: Jun 23, 2020

ML22Q532 / ML22Q533 / ML22Q535

4-Channel Mixing Speech Synthesis LSIs with Built-in Flash Memory for Automotive

Overview

ML22Q532/ML22Q535/ML22Q535 is a 4-channel mixing speech synthesis LSI with a serial audio interface and a built-in flash-memory for sound data.

It adopts a HQ-ADPCM^{*1}, 16-bit D/A converter, and low-pass filter for high sound quality, and incorporates a 1.0W mono speaker amplifier for driving speakers directly. It is also equipped with a function to detect failure.

The functions necessary for sound output are integrated into a single chip, so that sound functions can be realized simply by adding this LSI.

• Memory capacity and maximum sound production time (HQ-ADPCM*1 algorithm, registered phrase 1024)

Product Name	Flash memory capacity	Maximum s	sound production	time (sec)
		f _s =8.0kHz	$f_s = 16.0 \text{kHz}$	$f_s = 32.0 \text{kHz}$
ML22Q532	2Mbits	80	40	20
ML22Q533	4Mbits	161	81	40
ML22Q535	16Mbits	652	326	163

Analog Signal FLASH MEMORY Filter 16bit MIX Speaker Decode MIX DAC **AMP** Volume SAI Speaker Line HOST **AMP AMP** MCU I^2C Sound Check SPI

Application Circuit





■ Feature

• Sound data

Speech synthesis algorithm: The algorithm can be specified for each phrase.

HQ-ADPCM/4bit ADPCM2/8bit non-linear PCM /

8bit Straight PCM/16bit Straight PCM

Sampling frequency: The sampling frequency can be specified for each phrase.

10.7/21.3kHz, 6.4/12.8/25.6kHz, 8.0/16.0/32.0kHz, 11.025/22.05/44.1kHz, 12.0/24.0/48.0kHz

Maximum number of phrases: 4096 Phrases

• Edit ROM function

• Playback function

Repeat function: LOOP command Mixing-function: Up to 4-channel *1

Volume adjustment function: CVOL command 128 levels (including off-state)

AVOL command 16 levels (including off-state)

• Serial audio interface (slave)

PCM format: 8bit Straight PCM/16bit Straight PCM

Sampling frequency: 8.0/16.0/32.0kHz,

11.025/22.05/44.1kHz, 12.0/24.0/48.0kHz

Data length: 8bit/16bit BCLK frequency: 32fs to 64fs

LRCLK transfer mode

LRCLK forward/reverse selectable 1-bit delay ON/OFF selectable MSB first/LSB first selectable

• Low-pass filter

• 16-bit D/A converter

• Speaker amplifier: Class AB 1. 0W 8Ω (SPV_{DD} =5V, Ta=25 0 C)

• Line amplifier output: $10k\Omega$ driving (Exclusive operation from speaker amplifier output)

• External analog sound input (with analog mixing function)

• MCU command interface: Clock Synchronous Serial Interface/I²C Interface (Slave)

• Failure detection function

Playback sound error detection

Speaker short detection: Speaker pin ground fault detection, speaker pin short detection

Speaker disconnection detection

Thermal detection Clock error detection Flash memory error detection

Clock backup function

Master clock frequency:
 Power-supply voltage
 4.096MHz, 4.000MHz
 2.7V to 5.5V*2

 $DV_{DD},\ \mbox{SPV}_{DD}/\mbox{SPOV}_{DD}$ and IOV_{DD} can be set independently.

 $(SPV_{DD}=SPOV_{DD}\geq DV_{DD})$ -40 °C to +105 °C*3

Operating temperature range:Package:

48-pin TQFP (7mm x 7mm, 0.5mm pitch)

• Ordered Part Name: ML22Q53X-NNNTB, ML22Q53X-xxxTB (48-pin TQFP) *4


*1 Mixing with SAI is limited by the sampling frequency. Refer to the "Function description".

*2 Handle V_{DDR} pin in two different ways depending on the voltage range 2.7-3.6V or 3.3-5.5V. Refer to the "Application Circuit".

^{*3} The operating time of the speaker amplifier may be limited depending on the average ambient temperature (Ta) used.

^{*4} The NNN is blanked. xxx represents ROM code number.

- Pin Configuration (TOP VIEW)
- ML22Q53X-NNNTB/ML22Q53X-xxxTB

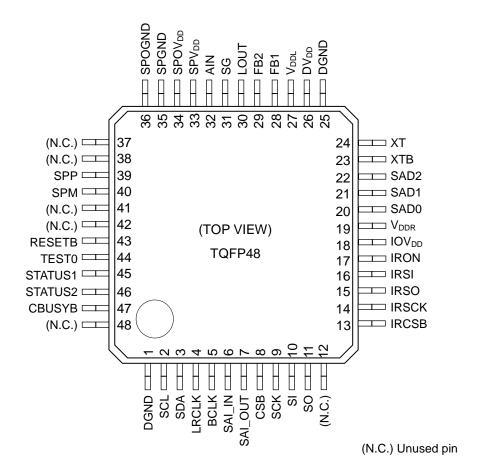

ML22Q53X

■ Pin Description

Pin	Symbol	I/O	Attribute	Description	Initial value *1
1,25	DGND	G	-	Digital ground pin.	_
2	SCL	ı	-	I ² C slave serial clock pin. When using an I ² C, be sure to insert a pull-up resistor between DV _{DD} pin. Accessing with clock synchronous serial interface at the same time is prohibited.	Н
3	SDA	Ю	-	I ² C slave serial data input/output pin. When using an I ² C, be sure to insert a pull-up resistor between DV _{DD} pin. Output: Nch MOS OPEN DRAIN output Input: High-impedance input Accessing with clock synchronous serial interface at the same time is prohibited.	Н
4	LRCLK	I	-	SAI word clock input pin.	L
5	BCLK	I	-	SAI bit clock input pin.	L
6	SAI_IN	I	-	SAI bit data input pin. The data are loaded at the rising edges of BCLK.	L
7	SAI_OUT	0	-	SAI bit data output pin. Output data at the falling edge of BCLK.	L
8	CSB	I	Negative	Clock synchronous serial interface chip select pin. The SCK and SI inputs are accepted only when this pin is at the "L" level. Accessing with I ² C slave interface at the same time is prohibited.	Н
9	SCK	I	-	Clock synchronous serial interface clock input pin. Accessing with I ² C slave interface at the same time is prohibited.	L
10	SI	ı	-	Clock synchronous serial interface data input pin. Data is fetched in synchronization with SCK. Accessing with I ² C slave interface at the same time is prohibited.	L
11	SO	0	-	Clock synchronous serial interface data output pin. When the CSB pin is at an "L" level, data is output in synchronization with SCK. When the CSB pin is at an "H" level, this pin enters a high-impedance state. Accessing with I ² C slave interface at the same time is prohibited.	Hi-Z
13	IRCSB	ı	Negative	Flash memory interface chip select input pin. Input the "H" level during non-access and the "L" level during access. Setting the IRON pin to "H" enables input.	Н
14	IRSCK	I	-	Flash memory interface serial clock input pin. Setting the IRON pin to "H" enables input.	Н
15	IRSO	0	-	Flash memory interface serial data output pin. Setting the IRON pin to "H" enables output.	Hi-Z ^{*2}
16	IRSI	ı	-	Flash memory interface serial data input pin. Setting the IRON pin to "H" enables input.	L
17	IRON	I	Positive	Pin to enable the flash memory interface. When this bit is set to "L", the flash memory interface pin is disabled. A pull-down resistor is internally connected to the LSI. Set this bit to "L" during playback operation using flash memory. Setting this bit to "H" allows rewriting of the flash memory using the flash memory interface. Set this bit to "H" for onboard rewriting.	L

Set this bit to "H" for onboard rewriting.

*1 Initial value at reset input and power-down. The pin whose IO is "I" indicates a fixed level from outside.

^{*2} IRON pin "L" setting status

ML22Q53X

Pin	Symbol	I/O	Attribute	Description	Initial value *1
18	IOV _{DD}	Р	-	Flash memory interface power supply pin. Connect to DV _{DD} pin even when not using flash memory interface. Connect a bypass capacitor between this pin and the DGND pin.	
19	V_{DDR}	0	-	3.0V regulator outputs. Used as a power supply for flash memory. Connect a capacitor between this pin and DGND pin as close as possible. Connect this pin to the DV_{DD} pin when $DV_{DD} = 2.7$ to 3.6V.	L
20	SAD0	ı	_	I^2 C slave address select pin.	<u> </u>
21	SAD0	i	_	I ² C slave address select pin.	
22	SAD2	i	_	I ² C slave address select pin.	
23	ХТВ	0	Negative	Crystal or ceramic resonator connection pin. When an external clock is used, leave it open and capacitor is not required when a crystal or ceramic resonator is connected. When using a resonator, connect it as close as possible. Leave it open when not in use.	Н
24	XT	I	Positive	Crystal or ceramic resonator connection pin. A feedback resistor of about $1M\Omega$ is built in between the XT pin and the XTB pin. To use an external clock, input from this pin. Delete the capacitor when a crystal or ceramic resonator is connected. When using a resonator, connect it as close as possible. Leave it open when not in use.	L
26	DV_DD	Р	-	Digital power supply pin. Connect a bypass capacitor between this pin and the DGND pin.	_
27	V _{DDL}	0	-	2.5V regulator output pin. Used as internal power supply. Connect a capacitor between this pin and DGND pin as close as possible.	L
28	FB1	I	-	Analog input pin 1 for playback sound error detection.	L
29	FB2	I	-	Analog input pin 2 for playback sound error detection.	L
30	LOUT	0	-	This pin is used exclusively for line amplifier output.	L
31	SG	0	-	Reference voltage output pin for the built-in speaker amplifier. Connect a capacitor between this pin and SPGND pin.	L
32	AIN	I	-	Speaker amplifier analog signal input pin. Initially, input is disabled.	L
33	SPV _{DD}	Р	-	Power supply pin for speaker amplifier. Connect a bypass capacitor between this pin and the SPGND pin.	_
34	SPOV _{DD}	Р	-	Power supply pin for the speaker amplifier output circuit. Set it at the same potential as the SPV _{DD} pin.	_
35	SPGND	G	-	Speaker amplifier ground pin.	_
36	SPOGND	G	-	Ground pin for the speaker amplifier output circuit. Set it at the same potential as the SPGND pin.	_
39	SPP	0	-	Positive output pin of the speaker amplifier. Line amplifier outputs are also available with AMODE command.	L
40	SPM	0	-	Negative output pin of the speaker amplifier.	Hi-Z

^{*1} Initial value at reset input and power-down. The pin whose IO is "I" indicates a fixed level from outside.

ML22Q53X

Pin	Symbol	I/O	Attribute	Description	Initial value *1
43	RESETB	I	Negative	Reset input pin. The LSI is initialized by the "L" level input. After a reset is input, all the circuits stop operating and enter the power-down state. At power-on, input an "L" level to this pin. After the power supply voltage stabilizes, set this pin to an "H" level. A pull-up resistor is internally connected to the LSI.	(*²)
44	TEST0	I	Positive	Input pin for testing. A pull-down resistor is internally connected to the LSI. Fix to the DGND.	L
45	STATUS1	0	-	Status/error output pin 1. Execute OUTSTAT command to select BUSYB ^{*3} and NCR ^{*3} in each channel, or errors. The initial value is BUSYB ^{*3} of channel 0, and output data is "H" level.	Н
46	STATUS2	0	-	Status/error output pin 2. Execute OUTSTAT command to select BUSYB*3 and NCR*3 in each channel, or errors. The initial value is BUSYB*3 of channel 0, and output data is "H" level.	Н
47	CBUSYB	0	Negative	Command processing status signal output pin. An "L" level is output during command processing. Be sure to input a command with this pin at an "H" level.	(^{*2})
12,37, 38,41, 42,48	N.C.	-	-	Unused pin. Leave open.	Hi-Z

^{*1} Initial value at reset input and power-down. The pin whose IO is "I" indicates a fixed level from outside.

■ Termination of Unused Pins

This section explains how to terminate unused pins.

Symbol	Recommended pin termination
SCL	Connect to the DV _{DD} .
SDA	Connect to the DVDD.
SAD0	
SAD1	Connect to the DGND.
SAD2	
LRCLK	
BCLK	Connect to the DGND.
SAI_IN	
CSB	Connect to the DV _{DD} .
SCK	Connect to the DGND.
SI	Connect to the DOND.
IRON	Connect to the DGND.
XT	Leave open.
XTB	Leave open.
FB1	Connect to the SPGND.
FB2	Connect to the St GND.
AIN	Connect to the SPGND.
TEST0	Connect to the DGND.
N.C.	Leave open.
SAI_OUT	
SO	
LOUT	
SPP	Leave open.
SPM	
STATUS1	
STATUS2	

^{*2 &}quot;L" at reset, "H" at power-down

^{*3} For NCR, BUSYB, refer to the description of "RDSTAT command".

■ I/O Equivalent Circuit

Classifi cation	Circuit	Overview
A		Attribute: Input Power: DV _{DD} Function: CMOS inputs with pull-down Applicable pin: TEST0
В		Attribute: Input Power: IOV _{DD} Function: CMOS inputs with pull-down Applicable pin: IRON
С		Attribute: Input Power: DV _{DD} Function: CMOS inputs with pull-up Applicable pin: RESETB
D		Attribute: Input Power: DV _{DD} Function: CMOS inputs Applicable pins: SI SCK, CSB, SAD0, SAD1, SAD2, LRCLK, BCLK, SAI_IN
E		Attribute: Input Power: IOV _{DD} Function: CMOS inputs Applicable pins: IRCSB, IRSCK

Classifi	0	
cation	Circuit	Overview
F		Attribute: Input/output Power: DV _{DD} Function: CMOS inputs Function: CMOS outputs Applicable pins: STATUS1, STATUS2, CBUSYB, SO, SAI_OUT
G		Attribute: Input/output Power: IOV _{DD} Function: CMOS inputs Function: CMOS outputs Applicable pin: IRSI
Н		Attribute: Input/output Power: IOV _{DD} Function: CMOS inputs with pull-down Function: CMOS outputs Applicable pin: IRSO
I	XTB XTB XTT XTT	Attribute: Oscillator circuit Power: DV _{DD} Function: 4.096M, 4.000MHz oscillation Applicable pins: XT, XTB

Classifi	Circuit	Overview
J	analog入力 SG	Attribute: Analog Power: SPOV _{DD} Function: Sound output Applicable pins: SPP, SPM
К	analog入力 SG	Attribute: Analog Power: SPOV _{DD} Function: Sound output Applicable pin: LOUT
L		Attribute: Analog Power: SPV _{DD} Function: Sound input Applicable pins: AIN, FB1, FB2
M		Attribute: Input Power: DV _{DD} Function: Nch Open Drain Applicable pins: SCL, SDA

ML22Q53X

■ Electrical characteristics

Absolute maximum rating

			DGND=SPGND=SPOGND=0V,	Ta=25°C
Parameter	Symbol	Condition	Rating	Unit
Power supply voltage 1	DV _{DD} IOV _{DD} SPV _{DD} SPOV _{DD}	_	-0.3 to +6.0	V
Power supply voltage 2	V_{DDR}	_	-0.3 to +4.6	V
Input voltage 1	V _{IN1}	_	-0.3 to DV _{DD} +0.3	V
Input voltage 2	V_{IN2}	_	-0.3 to IOV _{DD} +0.3	V
Input voltage 3	V _{IN3}	Applies to the FB1 and FB2 pins.	-0.3 to SPV _{DD} +0.3	V
Allowable loss	P _D	When the LSI is mounted on JEDEC 4-layer board. SPV _{DD} = SPOV _{DD} = 5V	1000	mW
Output short-circuit current	los	Applies to pins other than SPM,SPP,V _{DDL} and V _{DDR} pins.	10	mA
		Applies to SPM and SPP pins.	500	mA
		Applies to the V _{DDL} /V _{DDR} pin.	50	mA
Storage temperature	T _{STG}	_	-55 to +150	°C

Recommended operating conditions

DGND=SPGND=SPGND									
Parameter	Symbol	Condition		Range					
DV _{DD} , IOV _{DD} , SPV _{DD} *1, SPOV _{DD} *1 Power-supply voltage	$\begin{array}{c} DV_DD \\ IOV_DD \\ SPV_DD \\ SPOV_DD \end{array}$		2.7 to 3.6 / 3.3 to 5.5			V			
Operating temperature	Тор	_	-40 to +105			°C			
Master clock frequency	food	_	Min.	Typ. 4.096	Max.	MHz			
iviaster clock frequency	fosc	_	Typ -5%	4.000	Typ +5%	IVII IZ			

^{*1} SPV_{DD}=SPOV_{DD}\ge DV_{DD}

• Flash memory condition

Parameter	Symbol	Condition	Range	Unit
Operating temperature	т.	At write/erase	0 to +70	°C
Operating temperature	I OP	At read	-40 to +105	°C
Number of rewrites	C_{EP}	_	100	Time
Data retention period	Y _{DR}		10	Year

ML22Q53X

DC characteristics

SPV_{DD}=SPOV_{DD}=IOV_{DD}=IOV_{DD}=2.7 to 5.5V, DGND=SPGND=SPOGND=0V, Ta=-40 to +105°C, Load capacitance of output pin =15pF(Max.) Condition Typ.*1 Parameter Symbol Applicable pin Min. Max. Unit LRCLK/BCLK/SAI_IN/ CSB/SCK/SI/ "H" input voltage 1 V_{IH1} SAD0/SAD1/SAD2/ $0.8 \times DV_{DD}$ $\mathsf{DV}_{\mathsf{DD}}$ ٧ SDA/SCL/ XT/RESETB/TEST0 IRCSB/IRSCK/ "H" input voltage 2 0.8×IOV_{DD} IOV_{DD} V V_{IH2} IRSI/IRON LRCLK/BCLK/SAI_IN/ CSB/SCK/SI/ "L" input voltage 1 V_{IL1} SAD0/SAD1/SAD2/ 0 $0.2 \times DV_{DD}$ ٧ SDA/SCL/ XT/RESETB/TEST0 IRCSB/IRSCK/IRSI/ 0.2×IOV_{DD} V "L" input voltage 2 V_{IL2} 0 **IRON** "H" output voltage 1 V_{OH1} DV_{DD} -0.4 V $I_{OH} = -50\mu A$ **XTB** SAI_OUT/ SO/ "H" output voltage 2 V_{OH2} $I_{OH} = -1mA$ DV_{DD} -0.4 ٧ CBUSYB/STATUS1/ STATUS2 "H" output voltage 3 V_{OH3} $I_{OH} = -1mA$ $IOV_{DD}\text{-}0.4$ ٧ **IRSO** "L" output voltage 1 $V_{\underline{OL1}}$ $I_{OL} = 50 \mu A$ 0.4 XTB SAI_OUT/ SO/ "L" output voltage 2 $I_{OL} = 2mA$ 0.4 ٧ V_{OL2} CBUSYB/STATUS1/ STATUS2 "L" output voltage 3 ٧ V_{OL3} $I_{OL} = 2mA$ 0.4 **IRSO** "L" output voltage 4 V_{OL4} $I_{OL} = 3mA$ SDA/SCL 0.4 V Output leakage VOH=DV_{DD} SDA/SCL/ 10 μΑ I_{OOH1} current 1 (in high-impedance state) SO VOL=DGND -10μΑ I_{OOL1} (in high-impedance state) Output leakage VOH=IOV_{DD} μΑ **IRSO** 10 I_{OOH2} current 2 (in high-impedance state) VOL=DGND I_{00L2} -10μΑ (in high-impedance state) "H" input current 1 $V_{IH} = DV_{DD}$ 8.0 20 μΑ I_{IH1} XT5.0 RESETB/ LRCLK/BCLK/SAI_IN/ "H" input current 2 $V_{IH} = DV_{DD}$ 10 μΑ I_{1H2} CSB/SCK/SI/ SDA/SCL "H" input current 3 $V_{IH} = DV_{DD}$ 500 1000 μΑ I_{IH3} TEST0 20 $V_{IH} = IOV_{DD}$ 10 "H" input current 4 I_{1H4} IRCSB/IRSCK/IRSI μΑ "H" input current 5 $V_{\text{IH}} = IOV_{\text{DD}}$ 500 1000 μΑ $I_{\text{IH}5}$ **IRON** 20 "L" input current 1 I_{IL1} $V_{IL} = DGND$ XT -20-5.0-0.8μΑ LRCLK/BCLK/SAI_IN/ CSB/SCK/SI/ SDA/SCL/ "L" input current 2 $V_{IL} = DGND$ -10μΑ I_{IL2} IRCSB/IRSCK/IRSI/ IRON/ TEST0 "L" input current 3 $V_{IL} = DGND$ **RESETB** -400 -100 -2 μΑ I_{IL3}

ML22Q53X

Parameter	Symbol	Cond	lition	Applicable pin	Min.	Typ. ^{*1}	Max.	Unit
During playback Current consumption	I _{DDO}	f _{OSC} =4.0 Fs=48kHz During H0 playb SPP/SPM loa	z, f=1kHz, QADPCM pack No output	-	_	_	55 ^{*3}	mA
	I _{DDS}	$DV_{DD}=$ $IOV_{DD}=$	Ta=-40 to +55°C	_	_	1 ^{*3}	10.0 ^{*3}	μA
Power-down		$SPV_{DD}=$ $SPOV_{DD}=$ $3.3V\sim5.5V$	Ta=-40 to +105°C	-	_	1 ^{*3}	30.0 ^{*3}	μA
Current consumption		$DV_{DD}=$ $IOV_{DD}=$	Ta=-40 to +55°C	_	_	6*2*3	20.0*3	μA
		$SPV_{DD}=$ $SPOV_{DD}=$ $V_{DDR}=$ $2.7V\sim3.6V$	Ta=-40 to +105°C	<u> </u>	_	6 ^{*2*3}	80.0 ^{*3}	μА

^{*1} Typ.: DV_{DD}=SPV_{DD}=SPOV_{DD}=IOV_{DD}=5.0V,DGND=SPGND=0V,Ta=25°C *2 Typ.: DV_{DD}=SPV_{DD}=SPOV_{DD}=IOV_{DD}=3.0V,DGND=SPGND=0V,Ta=25°C

^{*3} Total values of the DV_DD pin, SPV_DD pin, $\mathrm{SPOV}_\mathrm{DD}$ pin, and IOV_DD pin

ML22Q53X

Analog Part Characteristics

SPV_{DD}=SPOV_{DD}=IOV_{DD}=IOV_{DD}=2.7 to 5.5V, DGND=SPGND=SPOGND=0V, Ta=-40 to +105°C, Load capacitance of output pin =15pF(Max.) Symbol Parameter Condition Min. Тур. Max. Unit Ta=-40 to +70°C 3.89 4.096 4.31 MHz RC4MHz Frc Ta=-40 to +105°C 3.68 4.096 4.51 MHz AIN pin input resistance Input gain 0dB 30 R_{AIN} 10 20 $k\Omega$ SPV_{DD}×2/3 AIN pin input voltage range V_{AIN} Vp-p $SPV_{DD} = 3.3 \text{ to } 5.5V$ Line amplifier output When $1/2SPV_{DD} \pm 1$ mA is 100 R_{LA1} Ω resistance1*1 applied $SPV_{DD} = 2.7 \text{ to } 3.6V$ Line amplifier output When $1/2SPV_{DD} \pm 1$ mA is $R_{\text{LA2}} \\$ 300 Ω resistance2*1 applied Line amplifier For SPGND 10 kΩ R_LA output-load-resistance *1 Line amplifier Output Voltage $V_{AO} \\$ No output load SPV_{DD} /6 SPV_{DD}x5/6 ٧ Range *1 0.95x 1.05x ٧ SPV_{DD} /2 SG pin output voltage V_{SG} SPV_{DD} /2 SPV_{DD} /2 SG pin output resistance $R_{\text{SG}} \\$ 57 96 135 $k\Omega\,$ SPP/SPM pins Output-Load 6 8 Ω R_{LSP1} Resistance To the SPP and SPM pins Class AB speaker amplifier ROCDAB 0.1 6 Ω Short circuit detection 4.5V≤SP_{VDD}≤5.5V $SPV_{DD} = SPOV_{DD} = 5.0V$, Speaker amplifier output power $f=1kHz R_{SPO}=8\Omega$, 8.0 W P_{SPO1} 1 THD=10% $SPV_{DD} = SPOV_{DD} = 3.0V$, Speaker amplifier output power P_{SPO2} $f=1kHz R_{SPO}=8\Omega$, 0.1 0.3 W THD=10% During no-signal SPM-SPP AVOL=0dB

8 Ω load

-50

Output offset voltage

 V_{OF}

50

m۷

^{*1} Applies to the SPP and LOUT pins when outputting LINE.

ML22Q53X

AC characteristic

 $SPV_{DD} = SPOV_{DD} \geq DV_{DD} = IOV_{DD} = 2.7 \text{ to } 5.5 \text{V}, \ DGND = SPGND = SPOGND = 0 \text{V}, \ Ta = -40 \text{ to } +105 ^{\circ}\text{C}, \ Load \ capacitance \ of \ output \ pin } = 15 pF(Max.)$

SPV _{DD} =SPOV _{DD} =IOV _{DD} =2.		DGND=SPGND=SPOGND=0V, Ta=-40 to +105	C, Luau ca		Julpul pin = 1	opr(iviax.)
Parameter	Symbol	Condition	Min.	Тур.	Max.	Unit
Master clock duty cycle	f _{duty}	<u> </u>	40	50	60	%
RESETB input pulse width	t _{RST}	_	10	_	_	μs
Reset noise rejection pulse width	t _{NRST}	RESETB pin	_	_	0.1	μs
		f _{OSC} = 4.096MHz				
Command input interval time	t _{INTC}	After input the first command at	0	_	_	μs
·		two-times command input mode				·
		f _{OSC} = 4.096MHz				
Command input enable time	t _{cm}	During continuous playback	_	_	10	ms
·	0	at SLOOP input				
At PUP command input		•				
CBUSYB "L" level output time	t _{PUP}	4.096MHz external clock input	_	_	8	ms
		4.096MHz external clock input				
		POP="L"				
At AMODE command input	t _{PUPA1}	AEN0="L"→"H"	35	37	39	ms
CBUSYB "L" level output time	PUPAT	AEN1 = "L"	33	37	33	1113
		AVOL = -4dB is selected				
		4.096MHz external clock input				
		DAMP="L",POP="H"		74	76	
At AMODE command input	١.	· ·	70			
CBUSYB "L" level output time	t _{PUPA2}	AEN1="L"→"H"	72			ms
•		(AEN0= "L": SPP-pin line amplifier output)				
		(AEN0= "H": LOUT pin line amplifier output)				
		4.096MHz external clock input				
At AMODE command input		DAMP="L",POP="L"			36	
CBUSYB "L" level output time	t _{PUPA3}	AEN1="L"→"H"	32	34		ms
CBOSTB L level output time		(AEN0= "L": SPP-pin line amplifier output)				
		(AEN0= "H": LOUT pin line amplifier output)				
At PDWN command input		f _ 4 006MHz			10	
CBUSYB "L" level output time	t _{PD}	f _{OSC} = 4.096MHz	_	_	10	μs
At AMADE command innut		4.096MHz external clock input				
At AMODE command input	t _{PDA1}	POP="L"	106	108	110	ms
CBUSYB "L" level output time		AEN1="L",AEN0="H"→"L"				
		4.096MHz external clock input				
		DAMP="L",POP="H"				
At AMODE command input	t _{PDA2}	AEN1="H"→"L"	143	145	147	ms
CBUSYB "L" level output time	I DAZ	(AEN0= "L": SPP-pin line amplifier output)				
		(AEN0= "H": LOUT pin line amplifier output)				
		4.096MHz external clock input				
		DAMP="L",POP= "L"				
At AMODE command input	t	· ·	102	105	107	ma
CBUSYB "L" level output time	t _{PDA3}	AEN1="H"→"L"	103	105	107	ms
		(AENO= "L": SPP-pin line amplifier output)				
ODLIOVO III II	.	(AEN0= "H": LOUT pin line amplifier output)			4.0	
CBUSYB "L" level output time 1*1	t _{CB1}	$f_{OSC} = 4.096MHz$	_	_	10	μs
CBUSYB "L" level output time 2*2	t _{CB2}	f _{OSC} = 4.096MHz	_	_	3	ms
CBUSYB "L" level output time 3*3	t _{CB3}	FAD="L" at f _{OSC} = 4.096MHz	_	_	200	μs
	1350	FAD="H" at fosc = 4.096MHz	_	_	10	ms

^{*1} Applies when inputting commands except the timings after PUP, PDWN, PLAY, or START command is input.

^{*2} Applies when inputting PLAY, START, MUON command.

^{*3} Applies when inputting STOP command.

ML22Q53X

AC Characteristics (Clock Synchronous Serial Interface)

 $SPV_{DD} = SPOV_{DD} \geq DV_{DD} = IOV_{DD} = 2.7 \text{ to } 5.5 \text{V}, \ DGND = SPGND = SPOGND = 0 \text{V}, \ Ta = -40 \text{ to } +105 ^{\circ}\text{C}, \ Load \ capacitance \ of \ output \ pin = 15pF(Max.)$

Parameter		Condition	Min.	Тур.	Max.	Unit
CSB input enable time from IRON falling edge	t _{EIRON}	_	1000	_	1	ns
CSB hold time from IRON rising edge	t _{IRONH}	_	1000	_		ns
SCK setup time from CSB falling edge	t _{SCKS}	_	100	_	1	ns
SCK input enable time from CSB falling edge	tesck	_	100	_		ns
SCK hold time from CSB rising edge	t _{CSH}	_	100	_		ns
Data floating time from CSB rising edge	t _{DOZ}	RL=3KΩ	_	_	100	ns
Data setup time from SCK	t _{DIS}	_	50	_		ns
Data hold time from SCK	t _{DIH}	_	50	_		ns
Data output delay time from SCK	t _{DOD}	_	_	_	90	ns
SCK "H" level pulse width	tsckh	_	100	_		ns
SCK "L" level pulse width	t _{SCKL}	_	100	_		ns
CBUSYB output delay time from SCK	t _{DBSY}	_	_	_	90	ns

<When rewriting the flash memory using the clock synchronous serial interface>

 $SPV_{DD} = SPOV_{DD} \geq DV_{DD} = IOV_{DD} = 2.7 \text{ to } 5.5V, \ DGND = SPGND = SPOGND = 0V, \ Ta = -40 \text{ to } +105^{\circ}C, \ Load \ capacitance \ of \ output \ pin = 15pF(Max.)$

- 55 - 55 55 - 55 - 7		- ,				
Parameter	Symbol	Condition	Min.	Тур.	Max.	Unit
CSB input enable time from IRON falling edge	t _{EIRON}	_	1000	_	_	ns
CSB hold time from IRON rising edge	t _{IRONH}	_	1000	_	_	ns
SCK setup time from CSB falling edge	t _{SCKS}	_	125	_	_	ns
SCK input enable time from CSB falling edge	t _{ESCK}	_	125	_	_	ns
SCK hold time from CSB rising edge	t _{CSH}	_	125	_	_	ns
Data floating time from CSB rising edge	t _{DOZ}	RL=3KΩ	_	_	125	ns
Data setup time from SCK	t _{DIS}	_	50	_	_	ns
Data hold time from SCK	t _{DIH}	_	50	_	_	ns
Data output delay time from SCK	t _{DOD}	_	_	_	110	ns
SCK "H" level pulse width	tsckh	_	125	_	_	ns
SCK "L" level pulse width	t _{SCKL}	_	125	_		ns

ML22Q53X

• AC Characteristics (I²C Interface:Fast Mode 400kHz)

 $SPV_{DD} = SPOV_{DD} \geq DV_{DD} = IOV_{DD} = 2.7 \text{ to } 5.5V, DGND = SPGND = SPOGND = 0V, Ta = -40 \text{ to } +105^{\circ}C, Load capacitance of output pin = 15pF(Max.)$

Parameter	Symbol	Min	Max.	Unit
SCL clock frequency	t _{SCL}	0	400	kHz
SCL hold time (start/restart condition)	t _{HD;STA}	0.6	_	μs
SCL clock "L" level time	t _{LOW}	1.3	_	μs
SCL clock "H" level time	t _{HIGH}	0.6	_	μs
SCL setup time (restart condition)	t _{SU;STA}	0.6	_	μs
SDA hold time	t _{HD;DAT}	0	_	μs
SDA setup time	t _{SU;DAT}	0.1	_	μs
SDA setup time (stop condition)	t _{su;sto}	0.6	_	μs
Bus free time	t _{BUF}	1.3	_	μs
Capacitive load on each bus line	Cb	_	400	pF

ML22Q53X

• AC Characteristics (SAI Interface (Slave))

 $SPV_{DD} = SPOV_{DD} \geq DV_{DD} = IOV_{DD} = 2.7 \text{ to } 5.5 \text{V}, \ DGND = SPGND = SPOGND = 0 \text{V}, \ Ta = -40 \text{ to } +105 ^{\circ}\text{C}, \ Load \ capacitance \ of \ output \ pin = 15pF(Max.)$

Parameter	Symbol	Condition	Min.	Тур.	Max.	Unit
SAI_BCLK period	tC_BCLK	_	32fs	_	64fs	Hz
SAI_BCLK "H" period	tHW_BCLK	_	100	_	_	ns
SAI_BCLK "L" period	tLW_BCLK	_	100	_	_	ns
SAI_LRCLK hold time	tH_LRCLK	_	80	_	_	ns
SAI_LRCLK setup time	tSU_LRCLK	_	80	_	_	ns
SAI_SDOUT delay time	tD_SDO *1	_	_	_	80	ns
SAI_SDIN setup time	tSU_SDI	_	20	_	_	ns
SAI_SDIN hold time	tH_SDI	_	20	_	_	ns

^{*1} tD_SDO is the time based on the slower change of SAI_BCLK or SAI_LRCLK.

ML22Q53X


• AC Characteristics (Flash Memory Interface)

 $SPV_{DD} = SPOV_{DD} \geq DV_{DD} = IOV_{DD} = 2.7 \text{ to } 5.5 \text{V}, \ DGND = SPGND = SPOGND = 0 \text{V}, \ Ta = -40 \text{ to } +105 ^{\circ}\text{C}, \ Load \ capacitance \ of \ output \ pin = 15pF(Max.)$

Parameter	Symbol	Condition	Min.	Тур.	Max.	Unit
IRCSB enable time from IRON falling edge	t _{EIRON}	_	1000	_	_	ns
IRCSB hold time from IRON rising edge	t _{IRONH}	_	1000	_	_	ns
IRSCK enable time from IRCSB falling edge	t _{ICSS}	_	100	_	_	ns
IRSCK hold time from IRCSB rising edge	t _{ICSH}	_	100	_	_	ns
Data setup time from IRSCK rising edge	t _{IDIS}	_	50	_	_	ns
Data hold time from IRSCK rising edge	t _{IDIH}	_	50	_	_	ns
Data delay time from IRSCK falling edge	t _{IDOD}	_	_	_	80	ns
IRSCK frequency	t _{ISCKF}	_	_	_	5	MHz
IRSCK "H" level pulse width	tisckh	_	100	_	_	ns
IRSCK "L" level pulse width	t _{ISCKL}	_	100	_	_	ns
IRSO delay time from IRON rising edge	t _{IFLH}	_	_	_	1	ms
IRSO delay time from IRON falling edge	t _{IFHL}	_	_	_	1	ms

■ Block diagram

The block diagram is shown below.

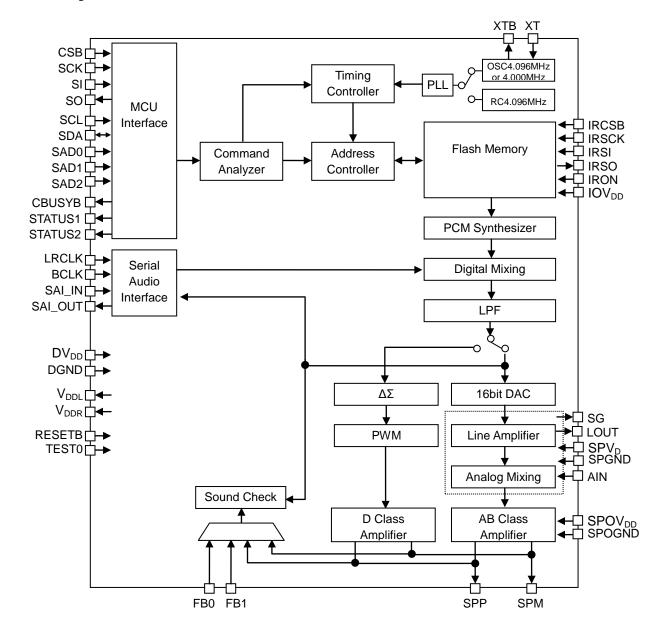

■ Function description

Clock Synchronous Serial Interface

The CSB, SCK, SI, and SO pins are used to input various command data and to read the status.

For command and data inputting, after "L" level is input to the CSB pin, data is input to the SI pin in MSB first in synchronization with the input clock signal of the SCK pin. The SI pin data is loaded into the LSI in synchronization with the SCK pin clock, and the command data is determined by the SCK pin clock of the eighth pulse.

When reading, after "L" level is input to the CSB pin, it is output from the SO pin in synchronization with the input clock signal of the SCK pin.

The selection of the rising or falling edge of the SCK pin clock depends on the state of the SCK pin at the falling edge of the CSB pin.

When the SCK pin is "H" at the falling edge of the CSB pin, the SI pin data is loaded into the LSI on the rising edge of the SCK pin clock, and the status signal is output from the SO pin on the falling edge of the SCK pin clock.

When the SCK pin is "L" at the falling edge of the CSB pin, the SI pin data is loaded into the LSI on the falling edge of the SCK pin clock, and the status signal is output from the SO pin on the rising edge of the SCK pin clock.

When the CSB pin is fixed to "L" level, the SI pin data is loaded into the LSI on the rising edge of the SCK pin clock, and the status signal is output from the SO pin at the falling edge of the SCK pin clock.


However, if unexpected pulses are input to the SCK pin due to noise, etc., the count of the number of SCK pin clocks may be shifted, and normal command input may not be performed.

The serial interface can be returned to the initial state by setting the CSB pin to "H" level.


When the CSB pin is "H" level, the SO pin becomes a high impedance state.

Accessing with I²C slave interface at the same time is prohibited.


Command data input timing: SCK rising edge operation (When the SCK is "H" at the falling edge of the CSB)




Command data input timing: SCK falling edge operation (When the SCK is "L" at the falling edge of the CSB)



Command data output timing: SCK falling edge operation (When the SCK is "H" at the falling edge of the CSB)



Command data output timing: SCK rising edge operation (When the SCK is "L" at the falling edge of the CSB)



• I²C Interface (Slave)

This serial interface conforms to the I²C bus specifications. It supports Fast modes and can transmit and receive data at 400kbit/s. The SCL and SDA pins are used to input various command data and to read the status. The slave addresses are set by the SAD0 to 2 pins.

When I²C is used, be sure to insert a pull-up resistor between SCL and SDA pins and DV_{DD} pin.


In the communication flow between the master and this device (slave) on the I²C bus, after the start condition is set, the slave address (upper 3 bits of the slave address are set by the SAD0 to 2 pins) is entered in the first 7 bits, the data direction is determined in the 8th bit (when the 8th bit is "0", data is written from the master, and data is read from the master when "1") and communication is performed in byte units thereafter. At this time, acknowledgment is required for each byte. Accessing with clock synchronous serial interface at the same time is prohibited.

The I²C communication flow/timing chart is shown below.

◆ Command flow when writing data (1-byte command)

Start condition Slave address +W(0) Write data (ex. Command 1st byte) Stop condition


- Timing chart when writing data. (1 byte command)

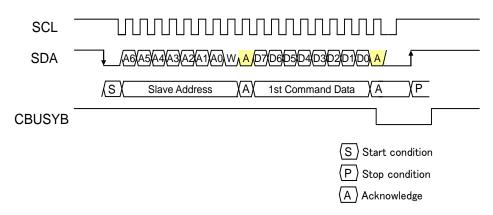

Command flow when writing data (2-byte command)

Start condition Slave address +W(0) Write data (ex. Command 1st byte) Write data (ex. Command 2nd byte) Stop condition


- Timing chart when writing data. (2 byte command)

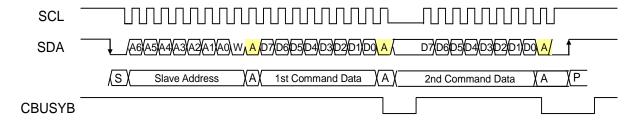

Command flow when writing data (3-byte command)

Start condition
Slave address +W(0)
Write data (ex. Command 1st byte)
Write data (ex. Command 2nd byte)
Write data (ex. Command 3rd byte)
Stop condition

- Timing chart when writing data. (3 byte command)

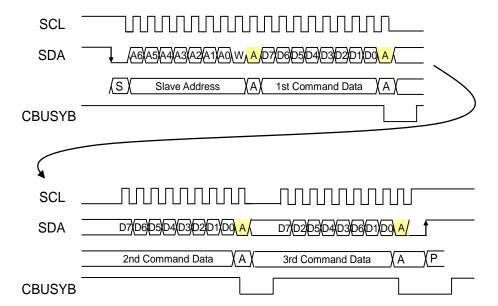


Command flow when reading data

Start condition Slave address +W(0) RDSTAT Command Stop condition

Start condition Slave address + R(1) Read data (ex. Status read) Stop condition

- Timing chart when reading data.

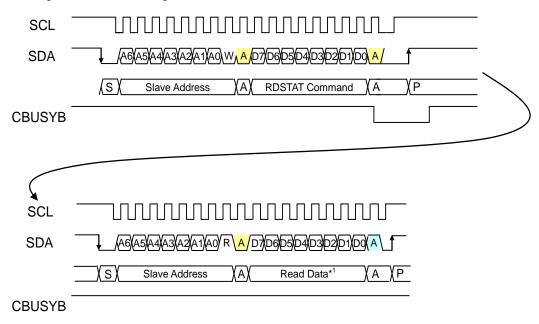

1 When the two-time input mode, the error state reading is 2 bytes

The data read flow is used when data is read by RDSTAT/RDERR/RDVER commands. The data to be read is updated by inputting RDSTAT/RDERR/RDVER command. Be sure to enter the RDSTAT/RDERR/RDVER command before reading the internal status.

The slave address can be set as follows using the SAD2 to SAD0 pins.

SAD2	SAD1	SAD0	Lower 4 bits	Slave address
0	0	0	0101	000_0101
0	0	1	0101	001_0101
0	1	0	0101	010_0101
0	1	1	0101	011_0101
1	0	0	0101	100_0101
1	0	1	0101	101_0101
1	1	0	0101	110_0101
1	1	1	0101	111_0101

SAI (Serial Audio Interface)

SAI transfers digital sound data serially.

The sound data input from the SAI_IN pin can be played using the speaker amplifier or LINE amplifier.

Furthermore, not only can it e mixed with the sound data in the flash memory and played back by the speaker amplifier or LINE amplifier, but it can also be output from SAI_OUT pin.


Various serial data formats are supported by a combination of command settings.

A WSLI, DLYI and MSBI are used to represent the supported formats.


For WSLI, DLYI and MSBI, refer to the "SAIRCON command".

When using SAI, set the analog power-up state with the AMODE command.


<DLYI="0", ISSCKI="0" / DLYO="0", ISSCKO="0", MSBI="0">

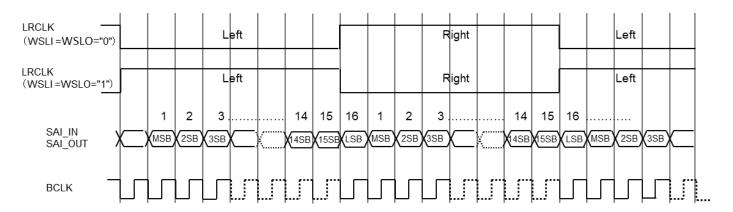


<DLYI="0", ISSCKI="1" / DLYO="0", ISSCKO="1", MSBI="0">

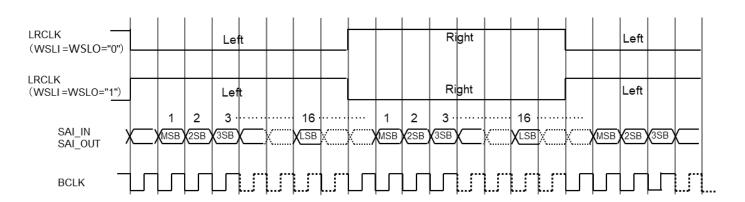

<DLYI="1", ISSCKI="1" / DLYO="1", ISSCKO="1", MSBI="0">

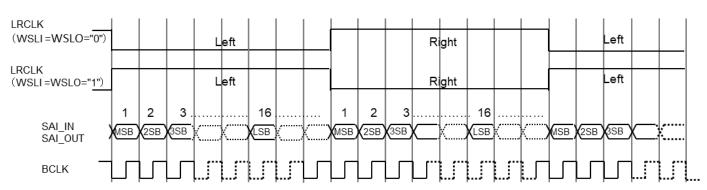


<DLYI="0", ISSCKI="0" / DLYO="0", ISSCKO="0", MSBI="1">

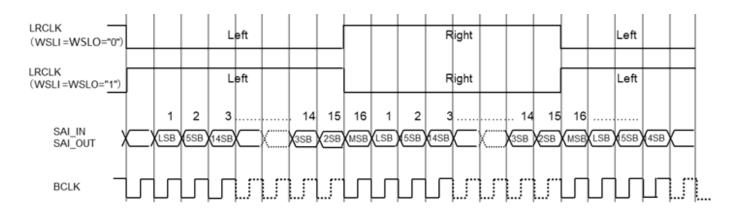

Volume Settings (Differences Between AVOL and CVOL and PAN)

The volume can be set with four commands CVOL, PAN, AVOL and AMODE.

The CVOL can set the volume of each channel, the PAN can set the volume of each channel (Lch/Rch) output to the SAI_OUT pin, the AVOL can set the volume after channel mixing, and the AMODE can set the input gain to the amplifier. By using the fade function with FADE command, the volume can be adjusted stepwise when the volume is changed with CVOL and PAN.

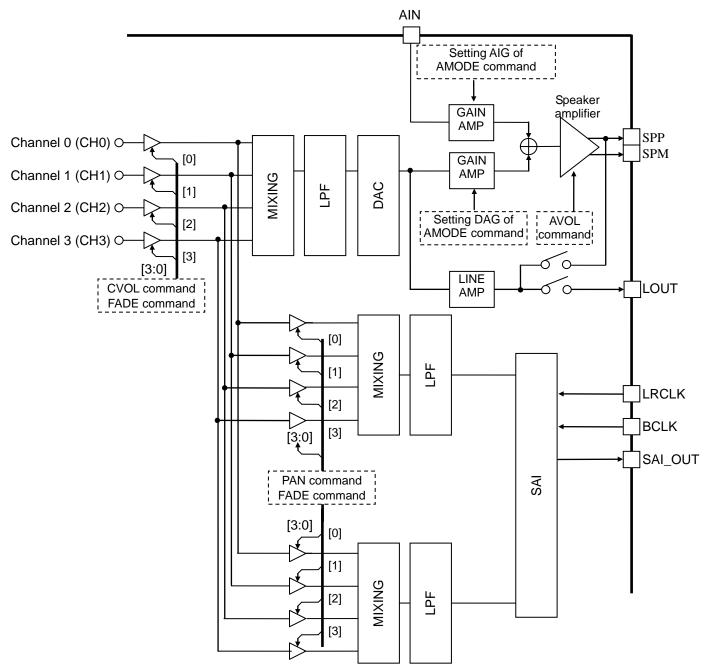

Speech synthesis algorithm

This LSI contains five algorithm types to match the characteristic of playback sound: 4-bit ADPCM2 algorithm, HQ-ADPCM algorithm, 8-bit straight PCM algorithm, and 16-bit straight PCM algorithm. Key feature of each algorithm is described in the table below.

Speech synthesis algorithm	Compression rate*1	Feature
HQ- ADPCM	1/5	4bit ADPCM algorithm is improved. Adopting variable bit length enables high sound quality and high data compression. Suitable for sound effects with sharp changes in waveforms or for pulsed waveforms.
4-bit ADPCM2	1/4	LAPIS original 4bit ADPCM algorithm is improved. Better followability to the waveform improves the sound quality. Suitable for human voices, animal crying, and natural sounds.
8-bit non-linear PCM	1/2	This algorithm enables playing back a sound with 10-bit equivalent quality in the center of the waveform. Suitable for low-amplitude sounds that are easily distorted.
8-bit straight PCM	1/2	This algorithm has excellent followability to the waveform in all sound areas. Suitable for sound effects with sharp changes in waveforms or for pulsed waveforms.
16-bit straight PCM	1	This algorithm has excellent followability to the waveform in all sound areas. Suitable for sound effects with sharp changes in waveforms or for pulsed waveforms.

^{*1:} When using the same sampling frequency.

Memory Allocation and Creating Sound Data

The flash memory is partitioned into four data areas: sound (i.e., phrase) control area, test area, sound area, and edit ROM area.

The sound control area manages the sound data in the ROM. It contains data for controlling the start/stop addresses of sound data for 4,096 phrases, use/non-use of the edit ROM function and so on.

The test area contains data for testing.

The sound area contains actual waveform data.

The edit ROM area contains data for effective use of sound data. For the details, refer to the section of "Edit ROM Function".

The edit ROM area is not available if the edit ROM is not used.

The Sound data is created using a dedicated tool (Speech LSI Utility).

Configuration of Flash Memory Data (4Mbit)

<u>-</u>	
0x00000	
	Test area
0x0007F	
0x00080	Sound control area (*) (The number of phrases can be set
0x0207F	with the dedicated tools.)
0x02080	
	Sound area
	Edit ROM area
	Depends on creation of sound
0x7FFFF	data.

(*) When the number of phrases is set to 1024

The number of phrases can be set from 1024 to 4096 in 1024 units using the dedicated tools.

Playback time and memory capacity

The playback time depends on the number of phrases, memory capacity, sampling frequency, and playback algorithm. The relationship is shown below. However, this is the playback time when the edit ROM function is not used.

$$Playback \ Time = \frac{-1.024 \times (Memory \ Capacity \ (kbit) - (0.0625 \times Number \ of \ Phrases) - 0.625)}{Sampling \ frequency \ (kHz) \times bit \ length} \qquad (sec)$$

When the number of phrases is 1024, the sampling frequency is 16kHz, and the HQ-ADPCM algorithm is selected, the playback time will be approximately 81 seconds.


Edit ROM Function

With the edit ROM function, multiple phrases can be played in succession. The following functions can be configured using the edit ROM function:


- Continuous playback: There is no limit to the continuous playback count that can be specified. It depends on the memory capacity only.
- Silence insertion: 20 to 1024 ms

Using the edit ROM function enables an effective use of the flash memory capacity. Below is an example of the ROM configuration in the case of using the edit ROM function.

Examples of Phrases Using the Edit ROM Function

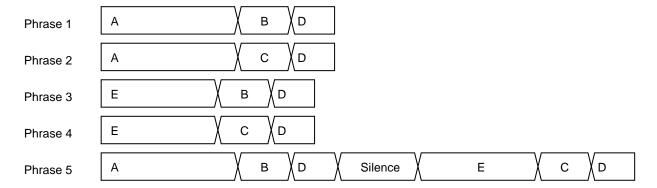

Example of Sound data Where the Contents Above Are Stored in ROM

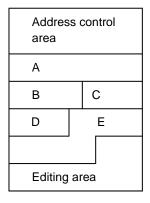

Mixing function

Up to 4 channels mixing playback is possible at the same time. Commands with channel designation can set channels independently.

◆ Restrictions when using Serial Audio Interface(SAI).

When the serial audio interface (SAI) is not used, there is no limitation to the maximum number of mixing in each speech synthesis algorithm.

<When the serial audio interface (SAI) is not used>

Sampling frequency (kHz)	Speech synthesis algorithm	Maximum mixing number	Playable channels (o: Playable/x: Not playable)					
(KI IZ)	aigontiiii	mixing number	CH0	CH1	CH2	CH3		
	4-bit ADPCM2							
	HQ-ADPCM							
All sampling	8-bit non-linear PCM	4	0	0	0	0		
frequency	8-bit straight PCM							
	16-bit straight PCM							

When the serial audio interface (SAI) is used, there are some limitations to the maximum number of mixing and playable channels depending on the sampling frequency.

<When the serial audio interface (SAI) is used>

Sampling frequency	Speech synthesis	Maximum	Playable channels (o: Playable/x: Not playable)					
(kHz)	algorithm	mixing number	CH0	CH1	CH2	CH3		
	4-bit ADPCM2		0	0	0	×		
	HQ-ADPCM		0	0	0	×		
12.0/24.0/48.0	8-bit non-linear PCM	3* ²	0	0	0	×		
11.025/22.05/44.1	8-bit straight PCM		0	0	0	×		
	16-bit straight PCM		0	0	0	×		
	SAI* ¹	2	0	0	0	×		
	4-bit ADPCM2		0	0	0	0		
	HQ-ADPCM		×	×	×	×		
	8-bit non-linear PCM	4* ³	0	0	0	0		
8.0/16.0/32.0	8-bit straight PCM]	0	0	0	0		
	16-bit straight PCM		0	0	0	0		
	SAI* ¹	2	0	0	0	0		

^{*1} When both Lch and Rch are used by SAI, two channels are used by SAI. When only one of Lch or Rch is used, one channel is used for SAI.


When mixing at the sampling frequencies of 8.0/16.0/32.0kHz with using Serial Audio Interface(SAI), HQ-ADPCM cannot be used.

^{*2} When two channels are used in SAI, one channel can be used, and when one channel is used in SAI, two channels can be used.

^{*3} When two channels are used in SAI, two channels can be used, and when one channel is used in SAI, three channels can be used.

Waveform clamp precautions for mixing

When mixing, the clamp may be generated as shown in the figure below due to the calculation of the synthesis. If the clamp is known to be generated in advance, adjust the volume of each channel by CVOL and PAN commands.

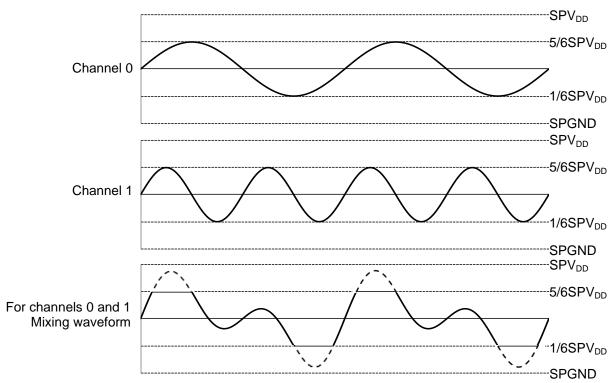

If the result of mixing channels 0 and 1 exceeds from the $1/6SPV_{DD}$ to 5/6SPVDD level (as indicated by the broken line), the sound quality may be reduced by clamping. Waveforms when AVOL is set to 0.0dB.

◆ Different sampling frequency mixing algorithm

It is not possible to perform channel mixing by a different sampling frequency group.

Note that when channel synthesis is performed on a sampling frequency group other than the selected sampling frequency group, playback will be faster or slower. When either LEN or REN is set to "1" by the SAI (serial audio interface) SAICH command, the frequency is fixed to the frequency group of the SAI selected by the SAICON command.

The following table lists the frequency groups that can be used when mixing different sampling frequency groups.

```
6.4kHz, 12.8kHz, 25.6kHz ... (Group 1)
8.0kHz, 16.0kHz, 32.0kHz ... (Group 2)
11.025kHz, 22.05kHz, 44.1kHz ... (Group 3)
12.0kHz, 24.0kHz, 48.0kHz ... (Group 4)
10.7kHz, 21.3kHz ... (Group 5)
```

The figure below shows the operation image when a sampling frequency group with different sampling frequency group is played back.

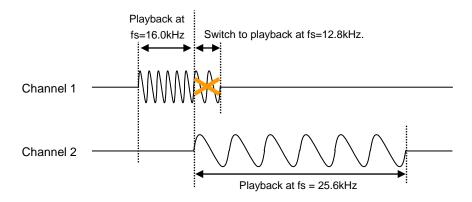


Figure 1) Case where a phrase is played at a sampling frequency belonging to a different sampling frequency group during playback on channels 1 and 2

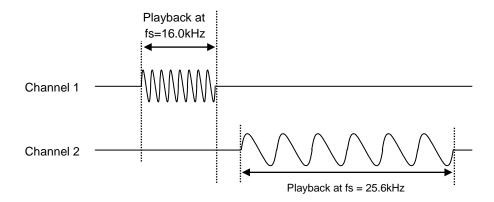


Figure 2) Case where a phrase is played at a sampling frequency belonging to a different sampling frequency group after playback is finished at the other channel

ML22Q53X

• Misoperation detection and failure detection functions

Misoperation detection and failure detection functions can be set with SAFE command. The error detection status can be read by the RDERR command, and the error bit indicating the error detection status can be cleared by the ERRCL command. In addition, OUTSTAT command can be used to send whether an error is detected or not to the STATUS1 pin or STATUS2 pin. For SAFE, RDERR, ERRCL and OUTSTAT commands, refer to the "Command" section. Misoperation detection and failure detection are shown below.

- Command error detection
- Speaker disconnection detection
- LSI temperature error detection
- SPP pin and SPM pin short detection
- Flash memory error detection
- Watchdog timer overflow detection
- RST counter overflow detection
- Detects the stop of clock input from a crystal resonator or ceramic resonator.
- Detects disconnection/short-circuit of the BCLK.
- Detects disconnection/short-circuit of the LRCLK.
- Detects disconnection/short-circuit of the SAI_IN.
- Mixing number error detection
- Playback sound error detection

◆ Command error detection

This LSI detects two command errors: phrase number error and command error. Use the WCMEN bit of the SAFE command to set command error detection.

① Phrase number error.


Set the number of phrases (1024, 2048, 3072 or 4096) to use when creating sound data in the Speech LSI Utility. If you specify a phrase that exceeds the number of phrases specified by the Speech LSI Utility with the PLAY2 or FADR2 command, an error in the command is detected and the error bit (WCMERR) is set to "1".

② Command error.

This LSI has a function to input various commands and data two-times to prevent malfunction due to noise at the serial interface pin. The setting of the two-times input mode is made at power-up. Refer to the "PUP command" for the setting method.

In the two-times input mode, the command data is input two-times in succession, and it is valid only when the input data matches. If a mismatch occurs during the second data input after the first data input, an error in the command is detected and the error bit (WCMERR) is set to "1", and the command entered is ignored.

Error bit (WCMERR) can be read with RDERR command. Also, error bit (WCMERR) can be cleared by ERRCL command.




^{*1} Misoperation detection and failure detection outputs are selected by OUTSTAT command.

Speaker disconnection detection

Set the speaker disconnection detection with the DCDEN bit of the SAFE command.

The speaker connection status of the SPP and SPM pins is checked when the analog power-up is activated in speaker amplifier output mode by AMODE command. When the disconnection of the speaker is detected, the error bit (DCDERR) is set to "1".

Error bit (DCDERR) can be read with RDERR command. Also, error bit (DCDERR) can be cleared by ERRCL command.

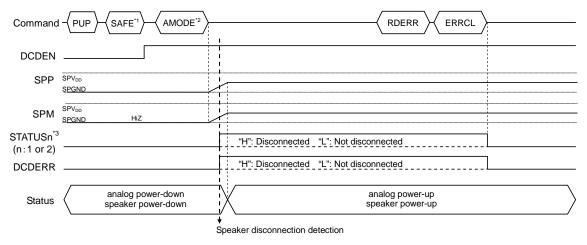

- *1 Set DCDEN = "1"
- *2 Analog power-up in speaker amplifier output mode
- *3 Misoperation detection and failure detection outputs are selected by OUTSTAT command.


LSI temperature error detection

Set the LSI temperature error detection with the TSDEN bit of the SAFE command.

When the TSDEN bit is set to "1" by the SAFE command, LSI temperature error detection starts. When the TSDEN bit is set to "0", LSI temperature error detection ends.

When the LSI becomes 130°C or more, the error bit (TSDERR) becomes "1".

Error bit (TSDERR) can be read with RDERR command. Also, error bit (TSDERR) can be cleared by ERRCL command.

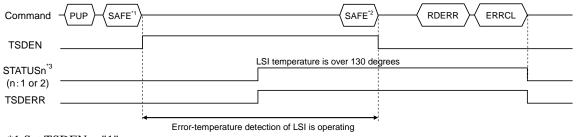

- *1 Set TSDEN = "1"
- *2 Set TSDEN = "0"
- *3 Misoperation detection and failure detection outputs are selected by OUTSTAT command.

◆ SPP pin and SPM pin short detection

Set the SPP pin and SPM pin short detection with the SPDEN bit of the SAFE command.


Detects short circuit between SPP pin and SPM pin, or SPP pin and GND (ground fault), or SPM pin and GND (ground fault). Can be used when $SPV_{DD} \ge 4.5V$. Operation is started by analog power-up in the speaker amplifier output mode by the AMODE command, and operation is terminated by power-down in the speaker amplifier output mode by the AMODE command.

After inputting SAFE command, start the analog power-up operation by AMODE command within 10ms.

When a short-circuit is detected, the error bit (SPDERR) is set to "1". When using a class D amplifier with the DAMP bit of AMODE command set to "1", if the PWM output is fixed to "H" level for 62.5µs or longer, the error bit (SPDERR) is set to "1". At the same time, the speaker amplifier output pin (SPP/SPM) is forcibly turned off. Read the error bit (SPDERR) with the RDERR command, end playback, and perform analog power-down with the AMODE command. Then, use ERRCL command to clear the error bit (SPDERR).

To restart playback, use the AMODE command to analog power-up the speaker amplifier output mode and enter the PLAY command. However, if shorting to ground continues, the error bit (SPDERR) is set to "1" and the speaker amplifier output pin (SPP/SPM) is forcibly turned off simultaneously.

Short detection prevents damage to LSI. However, the detection circuit is effective in preventing damage due to unexpected accidents. It does not support continuous short operation or transient use.

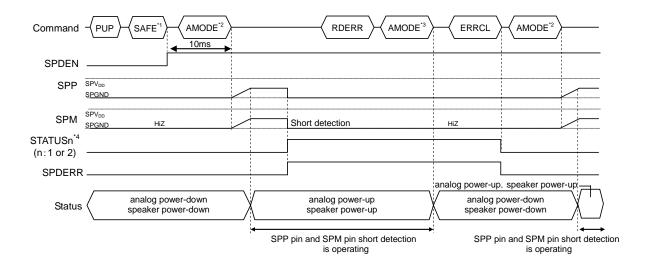

- *1 Set 1 SPDEN = "1"
- *2 Analog power-up in speaker amplifier output mode
- *3 Analog power-down in speaker amplifier output mode
- *4 Misoperation detection and failure detection outputs are selected by OUTSTAT command.

LAPIS Semiconductor Co., Ltd.

ML22Q53X

◆ Flash memory error detection

Set the Flash memory error detection with the ROMEN bit of the SAFE command. It is possible to detect two kinds of errors.

① Flash memory read data error

When an error is detected in the read data from the flash memory, the error bit (ROMERR) is set to "1". At the same time, playback of the corresponding channel is stopped.

If the error bit (ROMERR) is set to "1" after the PUP command and before the PLAY command or START command starts playback, this LSI may have error at the time of start. In such cases, initialize this LSI by moving the LSI to the power-down mode by resetting the LSI by the RESETB pin or by using PDWN command.

② Access outside the flash memory address range

If the flash memory is accessed outside the flash memory address range, an error is detected and the error bit (ROMERR) is set to "1".

At the same time, playback of the corresponding channel is stopped.

Error bit (ROMERR) can be read with RDERR command. Error bit (ROMERR) can be cleared by ERRCL command.

◆ Watchdog timer overflow detection

A communication error between the HOST MCU and this LSI (disconnection or short-circuit of the MCU command interface, etc.) can be detected.

Set the watchdog timer overflow detection with WDTEN bit of the SAFE command.

When the detection operation is started, the detection does not stop even if the WDTEN bit is set to "0".


After the detection operation starts, clear the WDT counter with the WDTCL command before the WDT counter overflows.

When the WDT counter overflows (for the first time), the error bit (WDTERR) is set to "1".

Error bit (WDTERR) can be read with RDERR command. In addition, the error bit (WDTERR) can be cleared by the ERRCL command after the WDTCL command.

The count time of the WDT counter is 2s the initial value. The counting time can be set to 125ms, 500ms, 2s, 4s. In addition, it is possible to shift to the command wait state after power-up by the second overflow of the WDT counter.

The count time and the second overflow operation can be set with the dedicated tools (Speech LSI Utility).

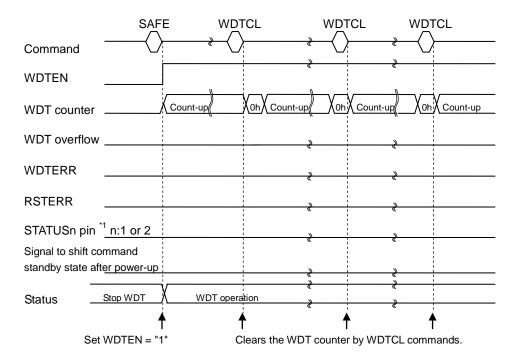


^{*1} Misoperation detection and failure detection outputs are selected by OUTSTAT command.

Recommended Operation Flow of Watchdog Timer


The operation when no WDTCL command is entered is as follows.

< When "Transition to the command standby state after power-up" is selected by the second overflow of the WDT counter >

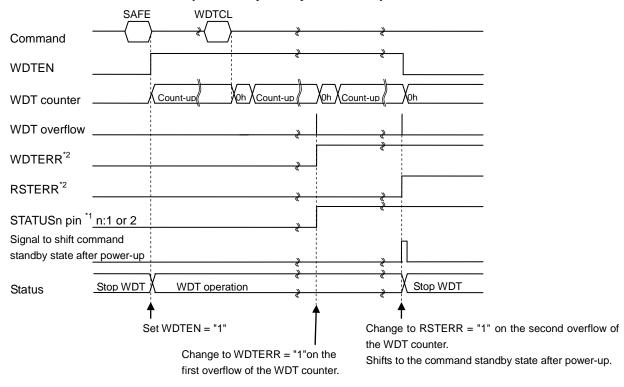

- *1 Misoperation detection and failure detection outputs are selected by OUTSTAT command.
- *2 Even if transferring to the command standby state after power-up by the second overflow of the WDT counter, the states of WDTERR bit and RSTERR bit remain. The state configured by OUTSTAT command also remains.

< When "Transition to the command standby state after power-up" is not selected by the second overflow of the WDT counter >

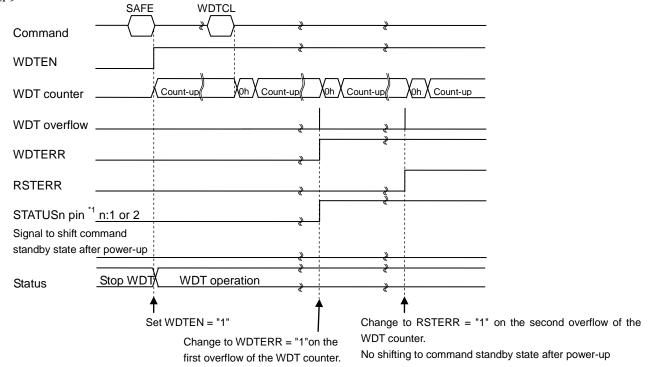

*1 Misoperation detection and failure detection outputs are selected by OUTSTAT command.

◆ RST counter overflow detection

By using the RST counter overflow detection, it is possible to shift the LSI to the command standby state after power-up after misoperation detection and failure detection occurs.

When the overflow detection of RST counter is set by RSTEN bit of SAFE command, the detection operation will start.

When the detection operation is started, the detection does not stop even if the RSTEN bit is set to "0".

The RST counter starts counting up after misoperation detection and failure detection occurs.

If the RST counter is cleared with the ERRCL command before it overflows, it stops until the next error occurs.


When the RST counter overflows, the error bit (RSTERR) is set to "1".

Error bit (RSTERR) can be read with RDERR command. Also, error bit (RSTERR) can be cleared by ERRCL command.

The count time of the RST-counter is 2s, the initial-value. The counting time can be set to 125ms, 500ms, 2s, or 4s.

Set the counting time and overflow operation (shift to the command standby state after power-up) with the dedicated tools (Speech LSI Utility).


The operation when RSTEN is set to "1" is as follows.

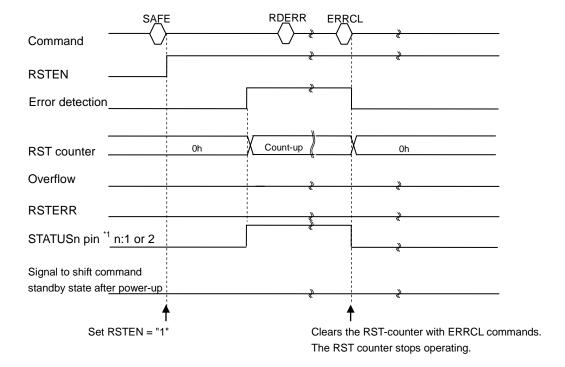


^{*1} Misoperation detection and failure detection outputs are selected by OUTSTAT command.

The operation when no ERRCL command is entered is as follows.

< When "Transition to the command standby state after power-up" is selected by the overflow of the RST counter >

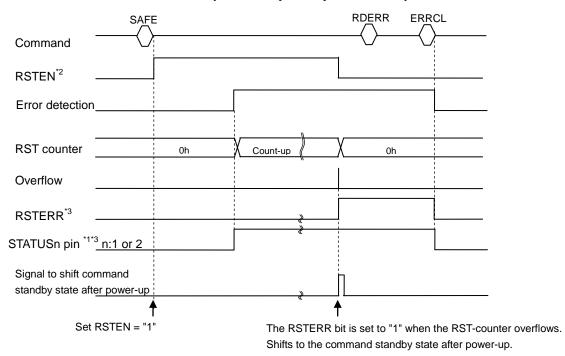

- *1 Misoperation detection and failure detection outputs are selected by OUTSTAT command.
- *2 If transferring to the command standby state after power-up is executed by the overflow of the RST counter, each bit of SAFE command is cleared. Also, error bits readable by RDERR command are cleared by ERRCL command.
- *3 Even if transferring to the command standby state after power-up is executed by the overflow of the RST counter, error bits readable by RDERR command and the state configured by OUTSTAT command remain.
- < When "Transition to the state after PUP command input" is not selected by the overflow of the RST counter >

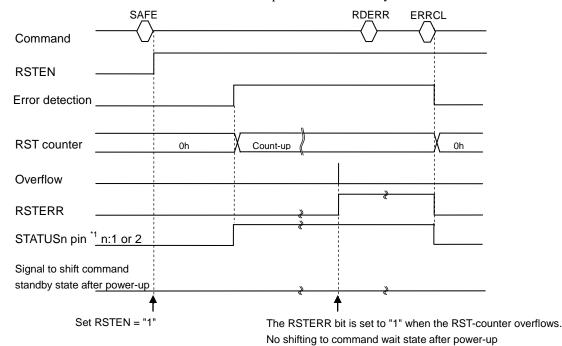

*1 Misoperation detection and failure detection outputs are selected by OUTSTAT command.

Detects the stop of clock input from a crystal resonator or ceramic resonator.


Set the "Detects the stop of clock input from a crystal resonator or ceramic resonator" with the OSCEN bit of the SAFE command.

When the clock input from the crystal resonator or the ceramic resonator is stopped, the error bit (OSCERR) is set to "1". At the same time, the clock backup function is activated and the clock is automatically switched to the RC oscillator circuit (4.096MHz).

Error bit (OSCERR) can be read with RDERR command. However, if the RDERR command (first byte) is inputted before the crystal or ceramic resonator stops and switches to RC oscillation (about 500μs), the CBUSYB pin will remain "L". Therefore, read the command after the CBUSYB pin becomes "H". Also, error bit (OSCERR) can be cleared by ERRCL command. However, if the clock input from the crystal resonator or the ceramic resonator continues to be stopped while the OSCEN bit of the SAFE command is "1", the error bit (OSCERR) is set to "1".


When the crystal resonator or the ceramic resonator stops and switches to RC oscillation, playback may become abnormal. Therefore, after confirming that the error bit (OSCERR) is "1", enter STOP command to stop playback.

If the clock input from the crystal resonator or the ceramic resonator is stopped while the OSCEN bit is "0", the error bit (OSCERR) does not change to "1", but the clock backup function is activated and the clock backup circuit is automatically switched to the RC oscillator circuit (4.096MHz).

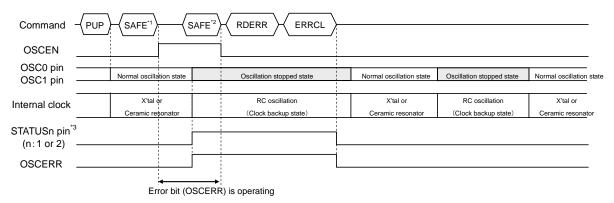

- *1 Set OSCEN = "1"
- *2 Set OSCEN = "0"
- *3 Misoperation detection and failure detection outputs are selected by OUTSTAT command.

<When the OSCEN bit of SAFE command continue to be "1">

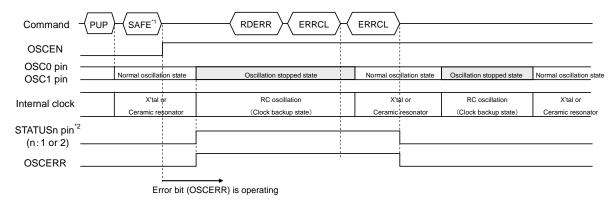


- *1 Set OSCEN = "1"
- *2 Misoperation detection and failure detection outputs are selected by OUTSTAT command.

◆ Detects disconnection/short circuit of BCLK.

Set the "Detects disconnection/short circuit of BCLK" with the BCKEN bit of the SAFE command.

When the BCLK is stopped, the error bit (BCKERR) is set to "1".

Error bit (BCKERR) can be read with RDERR command. Also, error bit (BCKERR) can be cleared by ERRCL command.

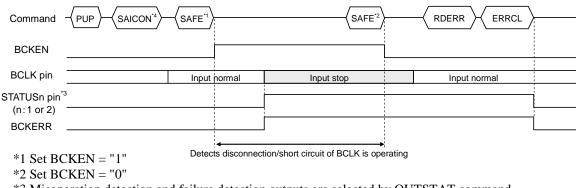


^{*3} Misoperation detection and failure detection outputs are selected by OUTSTAT command.

◆ Detects disconnection/short circuit of LRCLK.

Set the "Detects disconnection/short circuit of LRCLK" with the LRCKEN bit of the SAFE command.

When the LRCLK is stopped, the error bit (LRCKERR) is set to "1".

Error bit (LRCKERR) can be read with RDERR command. Also, error bit (LRCKERR) can be cleared by ERRCL command.

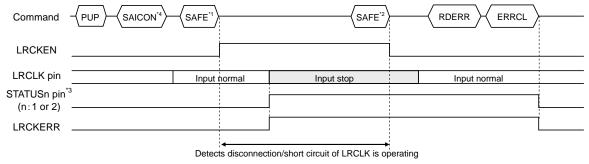

^{*1} Set LRCKEN = "1"

< When SAFE command LRCKEN bit is "0" >

Disconnection or short circuit of LRCLK is not detected.

When LRCLK is faster than 5%, SAICH is initialized and the recorder stops playing.*5 At that time, the error bit (LRCKERR) keeps "0".

< When SAFE command LRCKEN bit is "1" >

Disconnection or short circuit of LRCLK is detected.

When LRCLK is faster than 5%, SAICH is initialized and the recorder stops playing.*5 At that time, the error bit (LRCKERR) changes "1".

*5 : The unit does not recover even if a normal LRCLK is input after stopping playback. Enter MUON command → SAICH command after inputting a normal LRCLK.

^{*4} Set OUTEN = "1" or INEN = "1"


^{*2} Set LRCKEN = "0"

^{*3} Misoperation detection and failure detection outputs are selected by OUTSTAT command.

^{*4} Set OUTEN = "1" or INEN = "1"

Detects disconnection/short circuit of SAI_IN.

Set the "Detects disconnection/short circuit of SAI_IN" with the SAIINEN bit of the SAFE command. When SAI_IN does not change for more than 1.8 seconds (min.), the error bit (SAIINERR) is set to "1". Error bit (SAIINERR) can be read with RDERR command. Also, error bit (SAIINERR) can be cleared by ERRCL command. When OUTEN is set to "1" and INEN is set to "0" by the SAICON command, the SAI_IN input is disabled. Therefore, set SAIINEN to "0".

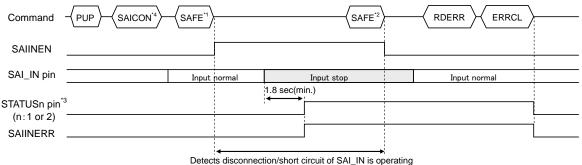

- *1 Set SAIINEN = "1"
- *2 Set SAIINEN = "0"
- *3 Misoperation detection and failure detection outputs are selected by OUTSTAT command.
- *4 Set INEN = "1"

◆ Mixing number error detection

When using the serial audio interface (SAI), the sampling frequency limits the maximum number of mixings and playable channels. If the setting exceeds the limit, it will be detected as a mixing error.

Set the mixing error detection with the MIXEN bit of the SAFE command.

- ① When FS3 to FS0 =12/24/48 kHz or 11.025/22.05/44.1kHz is set by the SAICON command, and either LEN or REN is set to "1" by the SAICH command, specifying channel 3 and inputting the PLAY, PLAY2, START, or MUON command sets the error bit (MIXERR) to "1". Also, the input command is ignored.
- ② If FS3 to FS0=12/24/48kHz or 11.025/22.05/44.1kHz is set by the SAICON command, and if the Rch or Lch side selects channel 3 (CH3) by the SAICH command and either LEN or REN is set to "1", the error bit (MIXERR) is set to "1". Also, the entered SAICH command is ignored.

Error bit (MIXERR) can be read with RDERR command. Also, error bit (MIXERR) can be cleared by ERRCL command.


For mixing restriction when using serial audio interface (SAI), refer to "Restrictions when using Serial Audio Interface (SAI)" in the chapter on mixing function.

Playback sound error detection

The playback sound error detection function detects error when the sound being played back by this LSI sounds different from the expected sound due to distortion, etc.


The error is detected by fetching the output of the speaker of this LSI from inside or outside of the LSI and comparing it with the playback data.

Connect the FB1 and the FB2 to the SPP and SPM to detect errors in the playback sound outside the LSI.

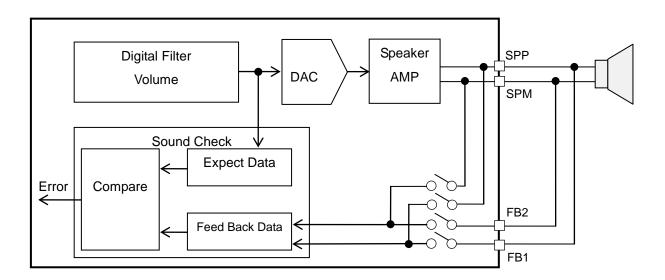

Flash memory rewrite function


The flash memory can be rewritten in the following two ways.

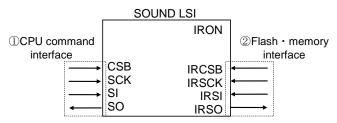

① Rewrite using the clock synchronous serial interface of the MCU command interface

By using the CSB, SCK, SI and SO pins, which are clock synchronous serial interfaces of the MCU command interface the flash memory can be rewritten. When the PUP command and FDIRECT command are entered with the IRON pin set to "L", direct access to the flash memory is enabled from the CSB, SCK, SI and SO pins.

When returning to the normal mode, insert a reset to initialize (RESETB pin is "L" level.) or shut off the power.

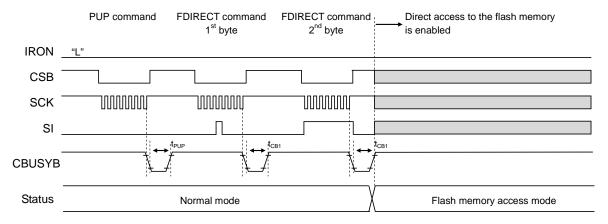


For the PUP command, refer to the "PUP command" in the "Command" section. For the FDIRECT command, refer to the "FDIRECT command" in the "Command" section.

2 Rewrite using flash memory interface

The flash memory can be rewritten using the IRON, IRCSB, IRSCK, IRSI and IRSO pins that is the flash memory interface. When the PUP command and FDIRECT command are entered with the IRON pin set to "H", direct access to the flash memory is enabled from the IRCSB, IRSCK, IRSI and IRSO pins.


When returning to the normal mode, insert a reset to initialize (RESETB pin is "L" level.) or shut off the power.

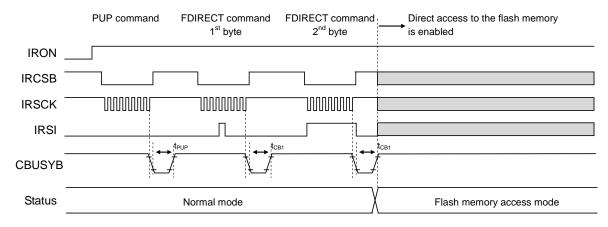

For the PUP command, refer to the "PUP command" in the "Command" section. For the FDIRECT command, refer to the "FDIRECTcommand" in the "Command" section.


The Chip Erase, Status Read, Program and Read of the flash memory are described on the next page.

• Chip Erase




Confirm that BUSY is "0" by Status Read after Chip Erase.

• Status Read

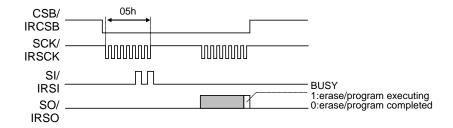


• Program

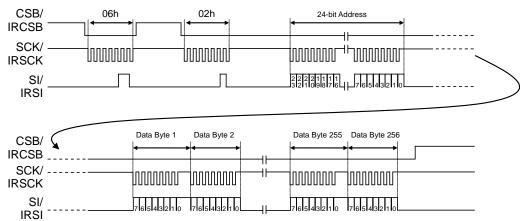


Confirm that BUSY is "0" by Status Read after Program.

• Read

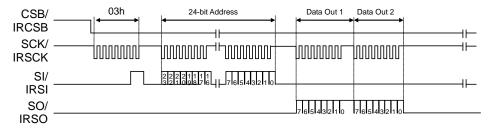

- Timing chart
- Common
- ♦ Power-on timing

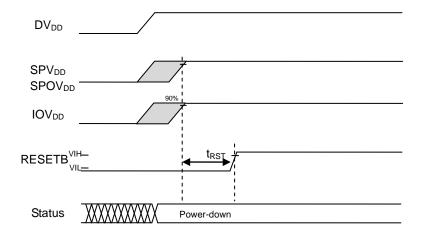

After the power is turned on, the device enters the power-down state.

Start up in the order of DV_{DD}, SPV_{DD} and IOV_{DD} or DV_{DD}, IOV_{DD} and SPV_{DD}.


It is possible that the DV_{DD} and SPV_{DD} start up at the same time and then the IOV_{DD} starts up, or the DV_{DD} and IOV_{DD} starts up at the same time and then the SPV_{DD} starts up.

The DV_{DD} , SPV_{DD} and IOV_{DD} can also start up at the same time.

 t_{RST} is specified based on the last power-on pin.

Be sure to input "L" to the RESETB pin before inputting the first command after power-on. Be sure to enter "L" at the RESETB pin when the DV_{DD} is below the (recommended) operating voltage range.


◆ Power-off timing

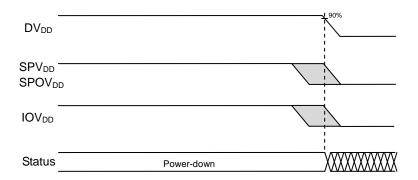

Shut down in the order of IOV_{DD} , SPV_{DD} , and DV_{DD} or SPV_{DD} , IOV_{DD} , and DV_{DD} . It is possible that the IOV_{DD} shuts down and then the SPV_{DD} and DV_{DD} shuts down at the same time, or the SPV_{DD} shuts down and then the IOV_{DD} and DV_{DD} shut down at the same time. The DV_{DD} , SPV_{DD} and IOV_{DD} can also shut down at the same time.


Shut down each power supply after changing to the power down status with PDWN commands.

♦ Reset input timing

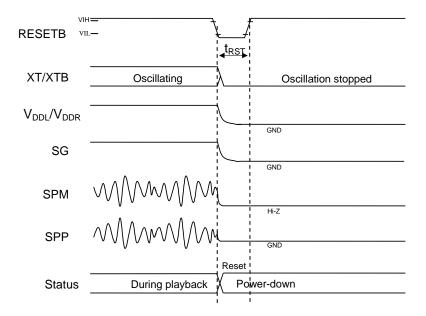


The same timing is applied when a reset is input during command standby.


◆ SAI interface timing (slave)

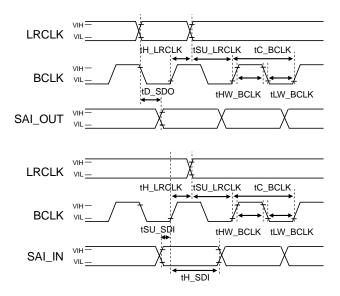


◆ Flash memory interface timing

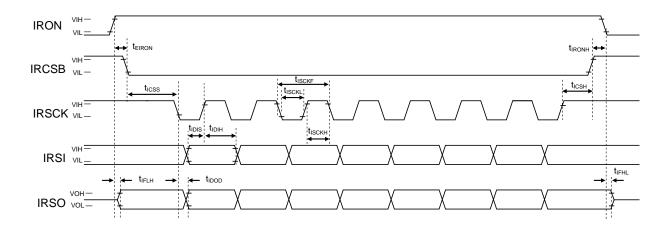


- Clock synchronous serial
- ◆ Clock Synchronous Serial Interface Timing (SCK Initial Value = "H" Level)

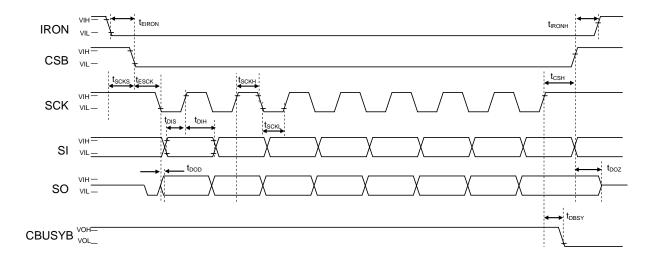

◆ Clock Synchronous Serial Interface Timing (SCK Initial Value = "L" Level)

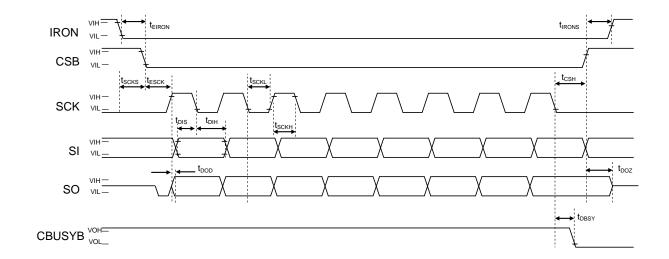


Power-up timing

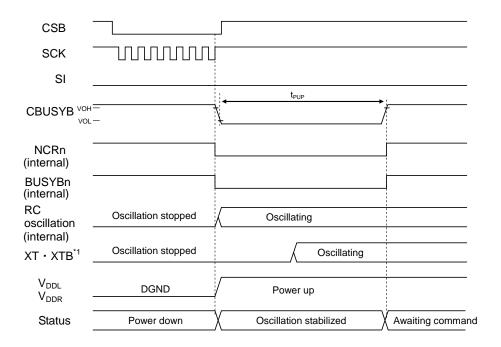


^{*1} When using a crystal or ceramic resonator

◆ Power-down timing

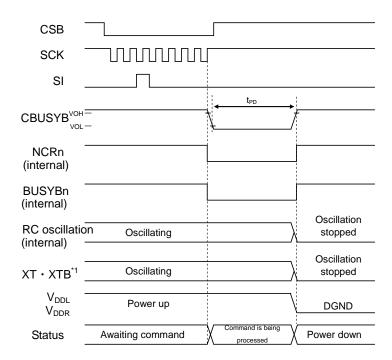


^{*1} When using a crystal or ceramic resonator


• Speaker amplifier power-up timing (DAMP bit = "0", AEN1 bit = "0", AEN0 bit = "0" \rightarrow "1")

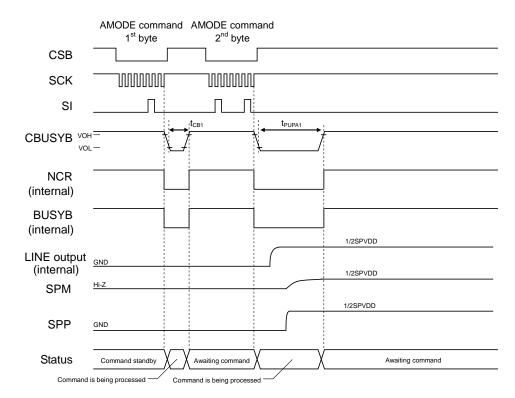


♦ Line amplifier power-up timing (DAMP bit = "0", POP bit = "1", AEN1 bit = "0" \rightarrow "1", AEN0 bit = "0")

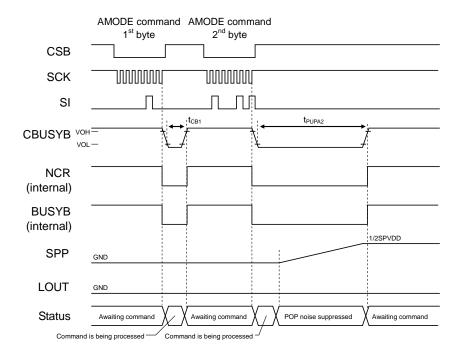


◆ Line amplifier power-up timing (DAMP bit = "0", POP bit = "0", AEN1 bit = "0" → "1", AEN0 bit = "0")

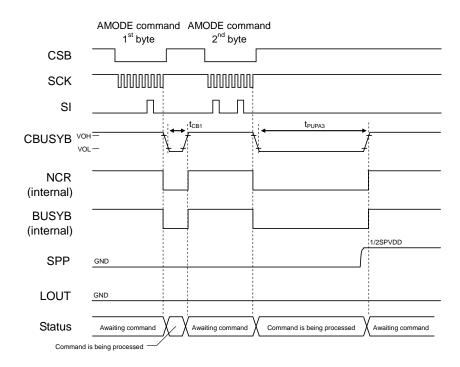


♦ Line amplifier power-up timing (DAMP bit = "0", POP bit = "1", AEN1 bit = "0" \rightarrow "1", AEN0 bit = "0" \rightarrow "1")

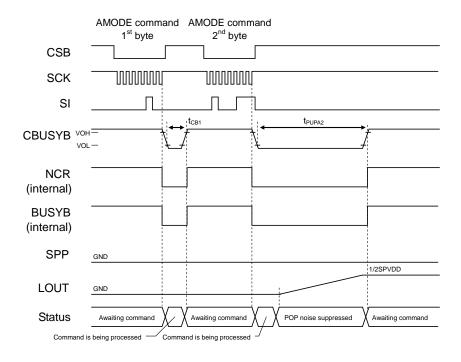


♦ Line amplifier power-up timing (DAMP bit = "0", POP bit = "0", AEN1 bit = "0" \rightarrow "1", AEN0 bit = "0" \rightarrow "1")

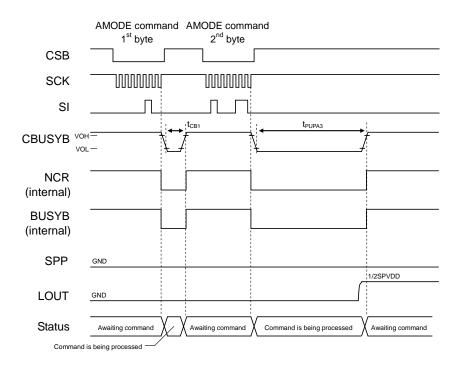


• Speaker amplifier power-down timing (DAMP bit = "0", AEN1 bit = "0", AEN0 bit = "1" \rightarrow "0")

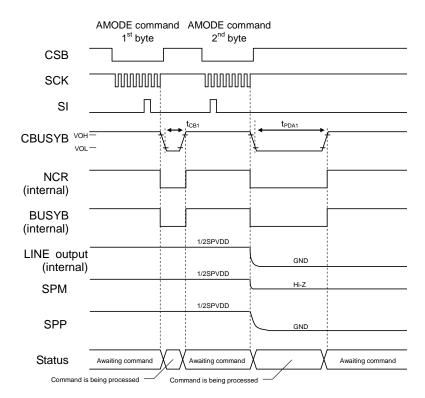


◆ Line amplifier power-down timing (DAMP bit = "0", POP bit = "1", AEN1 bit = "1" → "0", AEN0 bit = "0")

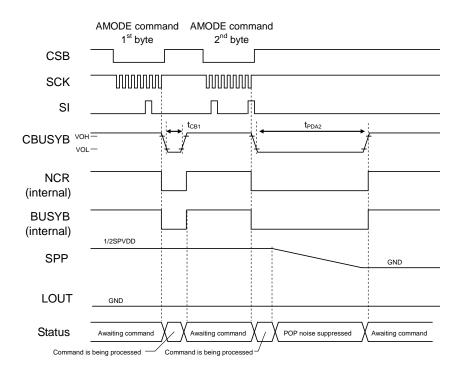


◆ Line amplifier power-down timing (DAMP bit = "0", POP bit = "0", AEN1 bit = "1" → "0", AEN0 bit = "0")

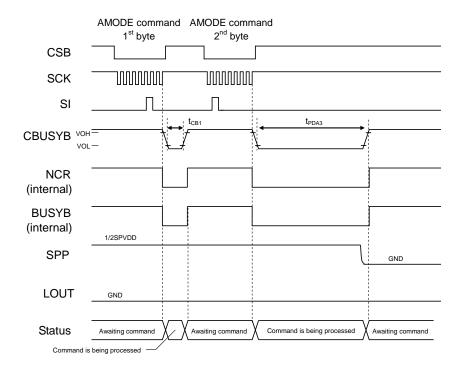


♦ Line amplifier power-down timing (DAMP bit = "0", POP bit = "1", AEN1 bit = "1" \rightarrow "0", AEN0 bit = "1" \rightarrow "0")

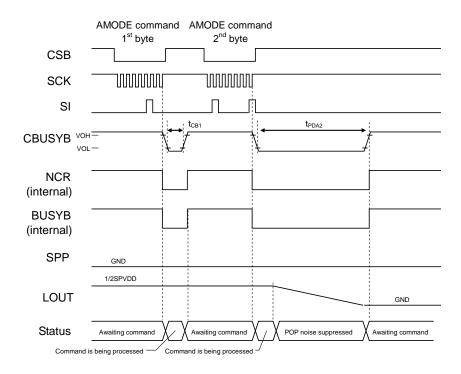


♦ Line amplifier power-down timing (DAMP bit = "0", POP bit = "0", AEN1 bit = "1" \rightarrow "0, AEN0 bit = "1" \rightarrow "0")

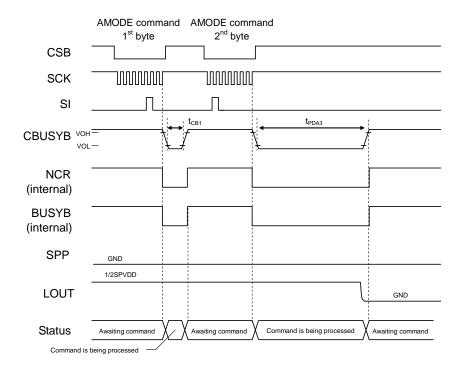


◆ FDIRECT command timing

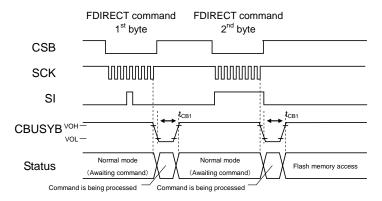

◆ WDTCL command timing

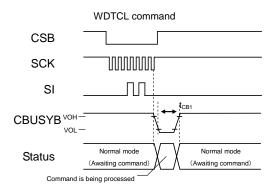


Change volume timing by AVOL command

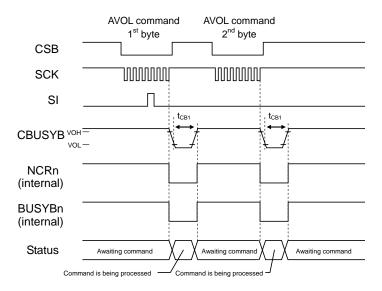


Speaker amplifier volume setting by AVOL commands is valid only when Class AB speaker amplifier is used. When a Class D speaker amplifier is used, the setting value is ignored and +0.0dB is selected.


FADE command timing

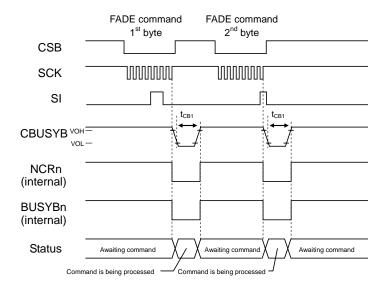

◆ Setting playback phrases using FADR command

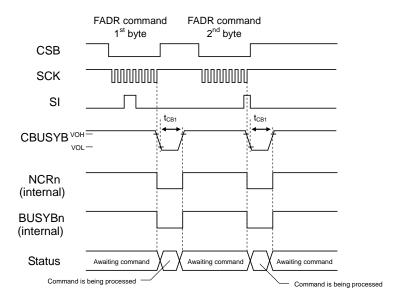

Playback start timing by PLAY command

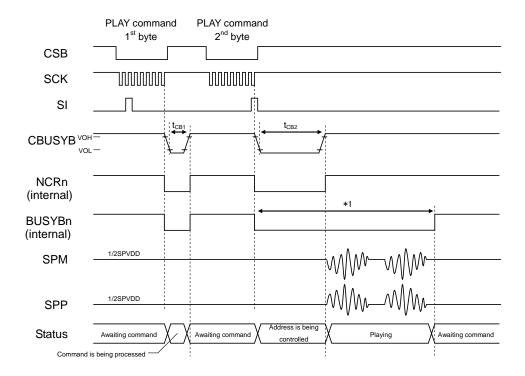


When the first byte of the PLAY command is input, the device waits for the input of the second byte after the command processing time (t_{CB1}) . When the second byte is entered, the address data of the phrase to be played after the command processing time (t_{CB2}) is read from the flash memory.

When the phrase address data is read, the specified phrase starts playback, and when playback is completed, the BUSYB signal of the playback channel becomes "H" level.

The NCR signal goes to the "L" level during playback preparation, and goes to the "H" level when playback preparation is completed and playback starts. When the NCR signal of the playback channel becomes "H" level, the PLAY command of the next phrase to be played can be accepted.

*1 The length of the "L" interval in the BUSYBn is (tCB2+ sound production time).


◆ Continuous playback timing by PLAY command

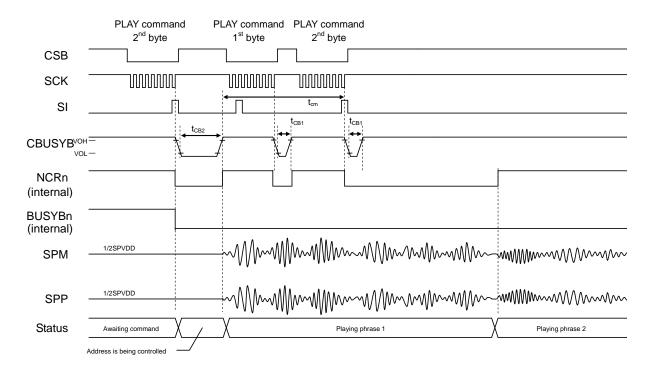

When making continuous playbacks, input the PLAY command for the next phrases within the specified time period (tcm) after the NCR of the corresponding channel changes to "H" level, so that the LSI playbacks the next phrases without silence sounds after the current phrase playback ends.

When the playback is not continuous, input the PLAY command for the next phrases after confirming the playback is completed by RDSTAT command, etc.

Playback start timing by START command

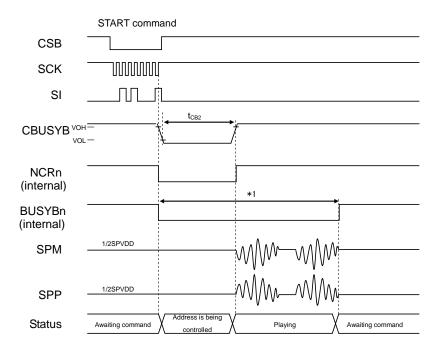


When the START command is input, the address data of the phrase to be played after the command processing time (t_{CB2}) is read from the flash memory. When the phrase address data is read, the specified phrase starts playback, and when playback is completed, the BUSYB signal of the playback channel becomes "H" level.

The NCR signal goes to the "L" level during playback preparation, and goes to the "H" level when playback preparation is completed and playback starts. When the NCR signal of the playback channel becomes "H" level, the START command of the next phrase to be played can be accepted.

*1 The length of the "L" interval in the BUSYBn is (tCB2+ sound production time).


◆ Continuous playback timing by START command

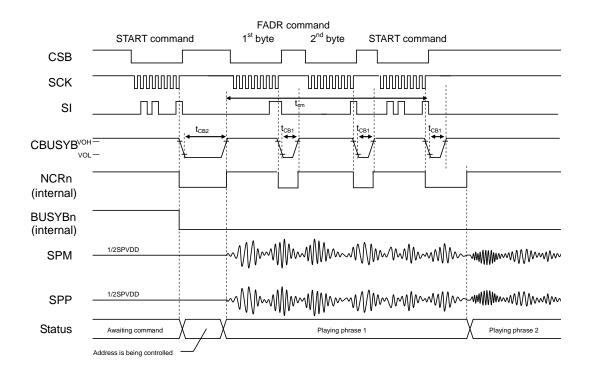


When making continuous playbacks, input the START command for the next phrases within the specified time period (tcm) after the NCR of the corresponding channel changes to "H" level, so that the LSI plays back the next phrases without silence sounds after the current phrase playback ends.

When the playback is not continuous, input the START command for the next phrases after confirming the playback is completed by RDSTAT command, etc.

◆ STOP command (when the FAD bit is "L")

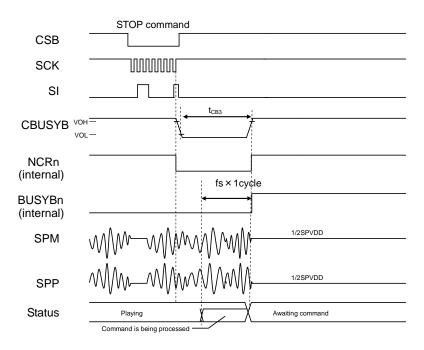


◆ STOP command (when the FAD bit is "H")

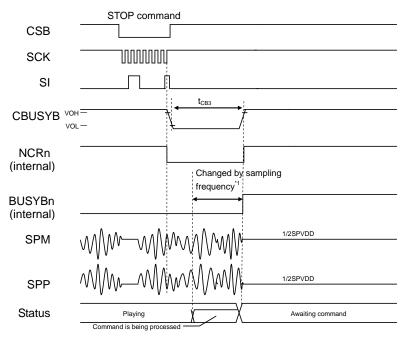

*1 The duration of the BUSYBn varies depending on the sampling frequency groups.

At 10.7/21.3kHz : Approx. 3ms At 6.4/12.8/25.6kHz : Approx. 5ms At 8.0/16.0/32.0kHz : Approx. 4ms At 11.025/22.05/44.1kHz : Approx. 2.9ms At 12.0/24.0/48.0kHz : Approx. 2.7ms

Playback start timing by MUON command

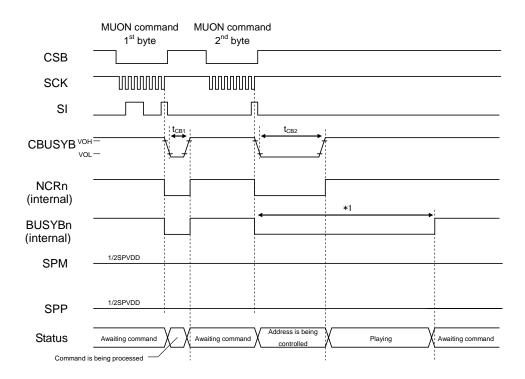


When the first byte of the MUON command is input, the device waits for the input of the second byte after the command processing time (t_{CB1}). When the second byte is entered, the silence time is calculated after the command processing time (t_{CB2}). When the calculation of the silence duration is completed, the calculated silence is played back, and when the playback is completed, the BUSYB signals of the playback channels become "H" level.

The NCR signal becomes "L" level during playback preparation, and becomes "H" level when playback preparation is completed and playback starts. When the NCR signal of the playback channel becomes "H" level, the PLAY command of the next phrase to be played can be accepted.

*1 The length of the "L" interval of the BUSYBn is (tCB2+ silence playback time).

Continuous playback timing by MUON command

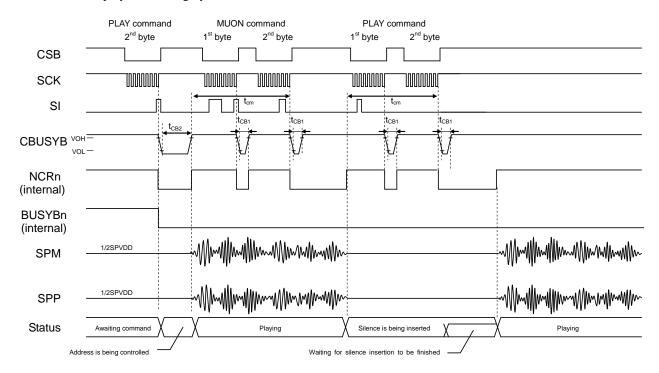

After the PLAY command is input, the CBUSYB signal and NCR signal change to "H" level when the address management of phrase 1 is completed and start playing back. Input the MUON command after the CBUSYB signal changed to "H" level. After the MUON command is received, the LSI is in a state waiting for the end of playback of phrase 1 and the NCR signal remains "L" level until the end of playback.

When the playback of phrase 1 ends, playback of the silence sound starts and the NCR signal changes to "H" level. After the NCR signal of the corresponding channel changes to "H" level, send the PLAY command again to playback the phrase 1. The NCR signal changes to "L" level again after the PLAY command is received and the LSI is in a state waiting for the end of the playback of silence sound.


After ending the playback of silence sound and starting the playback of phrase 1, the NCR signal changes to "H" level and LSI is in state that accepts the next PLAY or MUON command.

The BUSYB signal remains "L" level until the sequence of playback is completed.

When making continuous playbacks, input the MUON/PLAY/START command for the next phrases within 10ms (tcm) after the NCR of the corresponding channel changes to "H" level.


When the playback is not continuous, input the MUON/PLAY/START command for the next phrases after confirming the playback is completed by RDSTAT command, etc.

◆ Repeat playback setting/release timing by SLOOP/CLOOP command

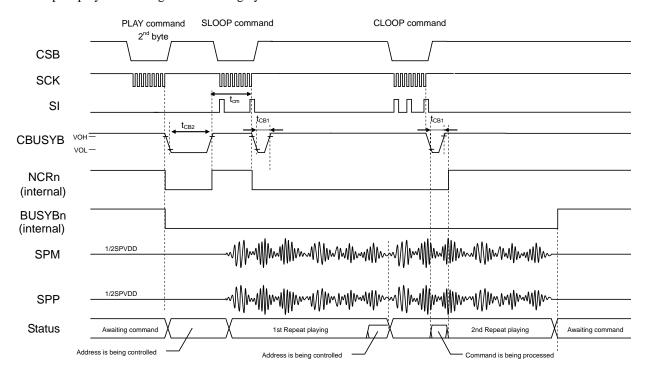


The SLOOP command is valid only during playback. After the PLAY command is input, input the SLOOP command within the specified period (t_{cm}) after the NCR of the corresponding channel becomes "H" level. This enables the SLOOP command and repeats playback. While the repeat playback mode is set, the NCR signal is "L" level.

♦ Change volume timing by CVOL command

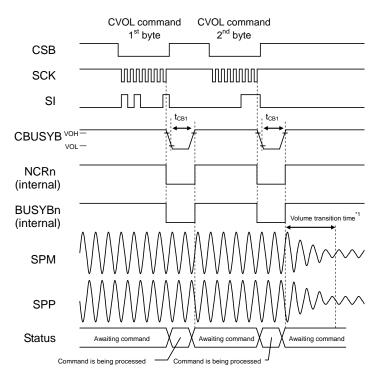


*1 Refer to the "FADE command" for more information on volume-transition time.


◆ RDSTAT command timing

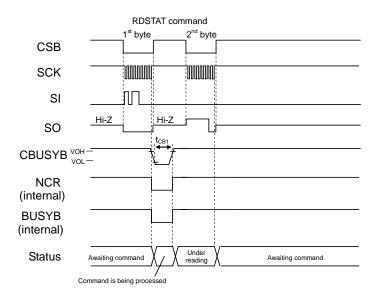


◆ RDVER command timing

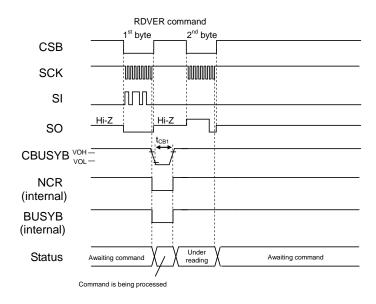


◆ RDERR command timing

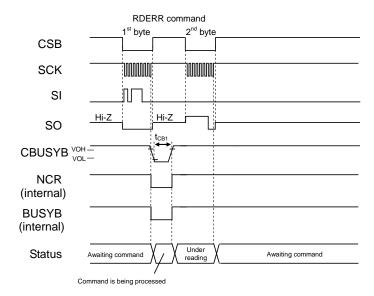


◆ OUTSTAT command timing

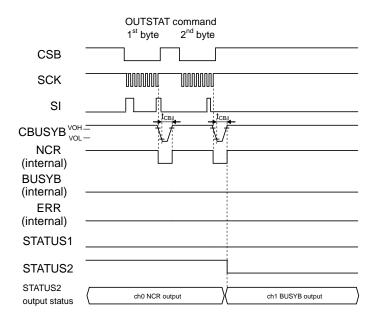


◆ SAFE command timing

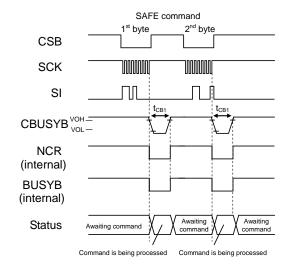


◆ ERRCL command timing

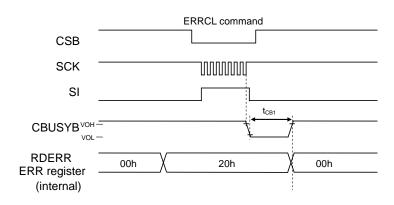

◆ Setting timing of playback phrases by FADR2 command

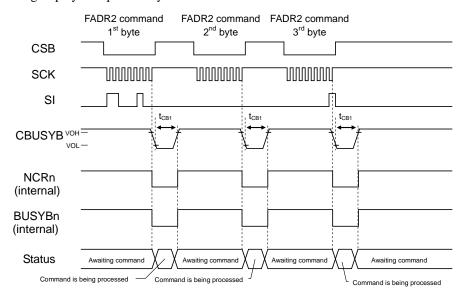

Playback start timing by PLAY2 command

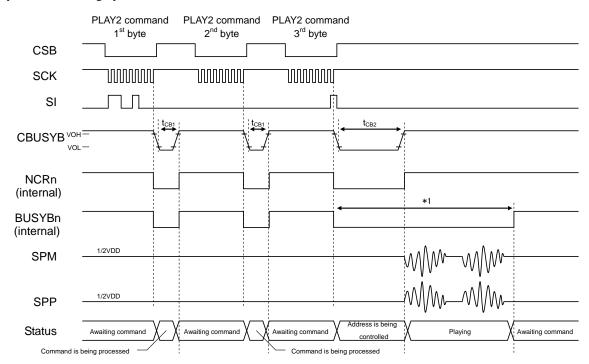


When the first byte of the PLAY command is input, the 2nd byte waits for input after the command processing time (t_{CB1}), and when the 2nd byte is input, the 3rd byte waits for input after the command processing time (t_{CB1}). When the third byte is entered, the address data of the phrase to be played after the command processing time (t_{CB2}) is read from the flash memory. When the phrase address data is read, the specified phrase is played back, and when playback is completed, the BUSYB signal of the playback channel becomes "H" level.


The NCR signal goes to the "L" level during playback preparation, and goes to the "H" level when playback preparation is completed and playback starts. When the NCR signal of the playback channel becomes "H" level, the PLAY command of the next phrase to be played can be accepted.

*1 The length of the "L" interval in the BUSYBn is (tCB2+ sound production time).


◆ Change volume timing by PAN command

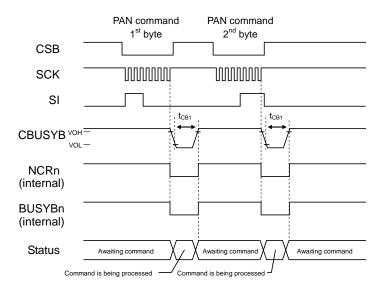


SAICH command timing

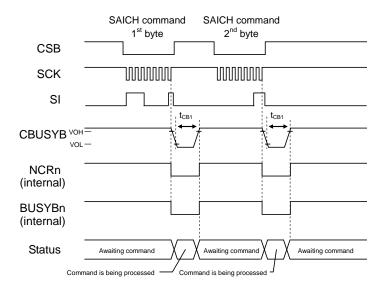


◆ SAICON command timing

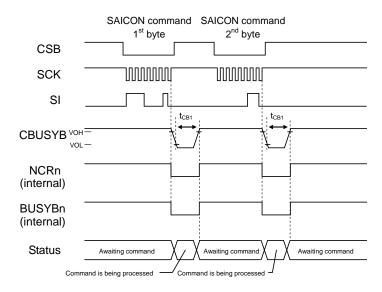


◆ SAITCON command timing

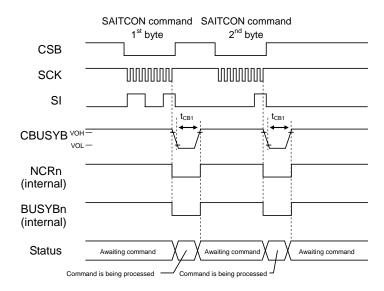


◆ SAIRCON command timing

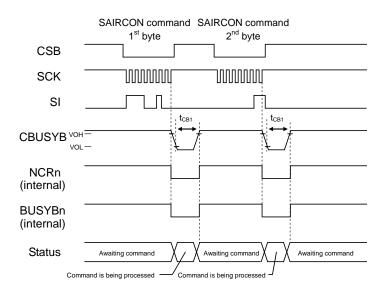


◆ SAIMOD command timing

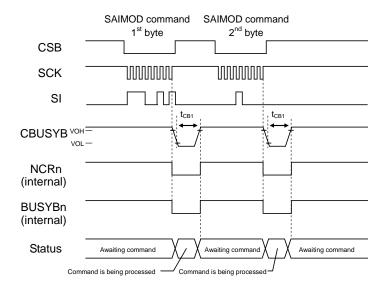


Setting timing by playback sound error detection command

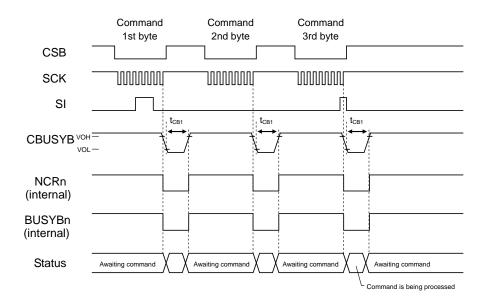

- I²C Interface (Slave)
- ◆ I²C Interface Timing

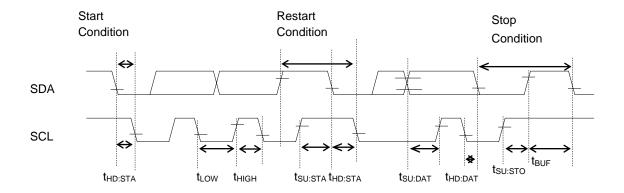


♦ Power-up timing

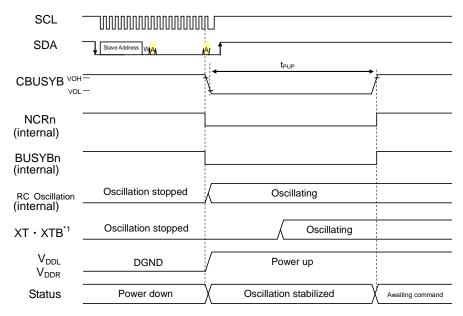


*1 When using a crystal or ceramic resonator

Power-down timing

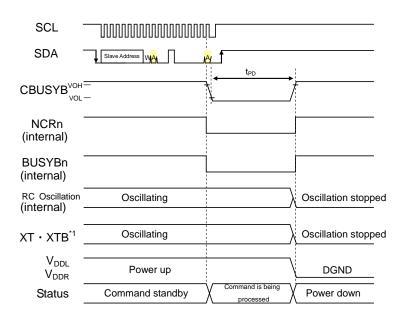


^{*1} When using a crystal or ceramic resonator


• Speaker amplifier power-up timing (DAMP bit = "0", AEN1 bit = "0", AEN0 bit = "0" \rightarrow "1")

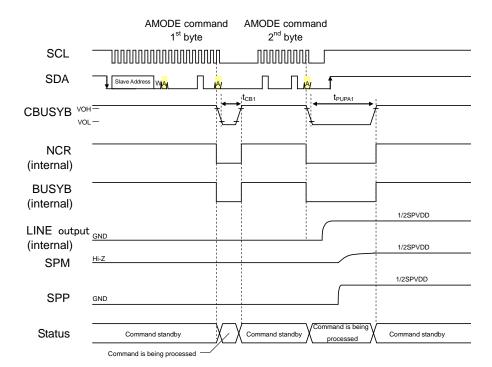


♦ Line amplifier power-up timing (DAMP bit = "0", POP bit = "1", AEN1 bit = "0" \rightarrow "1", AEN0 bit = "0")

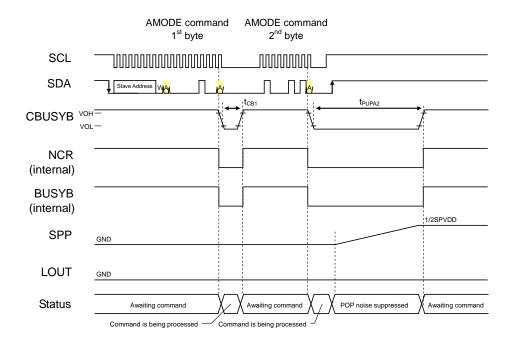


♦ Line amplifier power-up timing (DAMP bit = "0", POP bit = "0", AEN1 bit = "0" \rightarrow "1", AEN0 bit = "0")

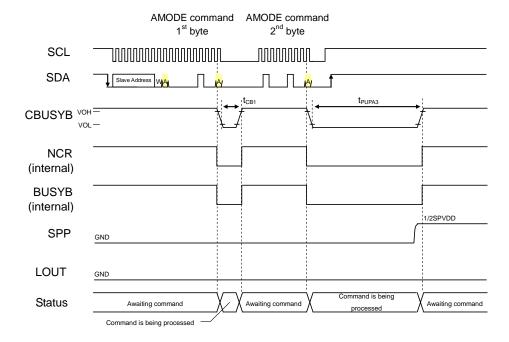


♦ Line amplifier power-up timing (DAMP bit = "0", POP bit = "1", AEN1 bit = "0" \rightarrow "1", AEN0 bit = "0" \rightarrow "1")

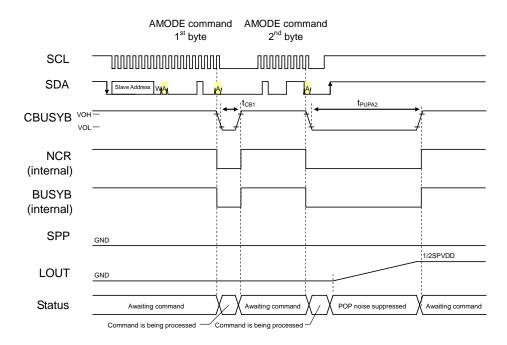


♦ Line amplifier power-up timing (DAMP bit = "0", POP bit = "0", AEN1 bit = "0" \rightarrow "1", AEN0 bit = "0" \rightarrow "1")

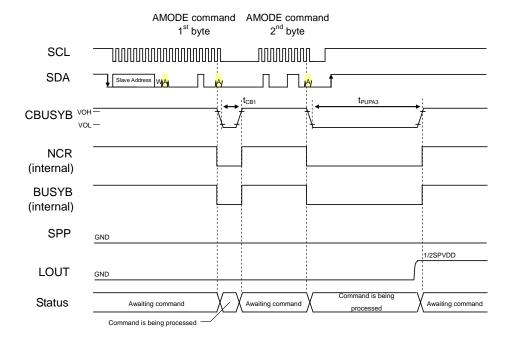


• Speaker amplifier power-down timing (DAMP bit = "0", AEN1 bit = "0", AEN0 bit = "1" \rightarrow "0")

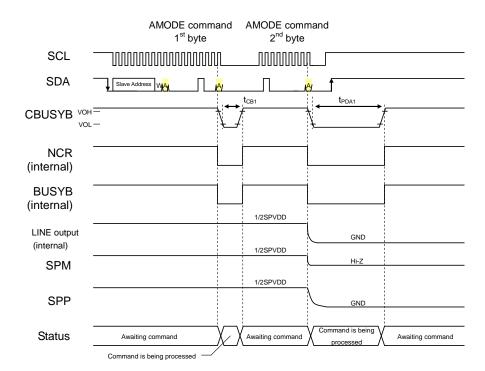


◆ Line amplifier power-down timing (DAMP bit = "0", POP bit = "1", AEN1 bit = "1" → "0", AEN0 bit = "0")

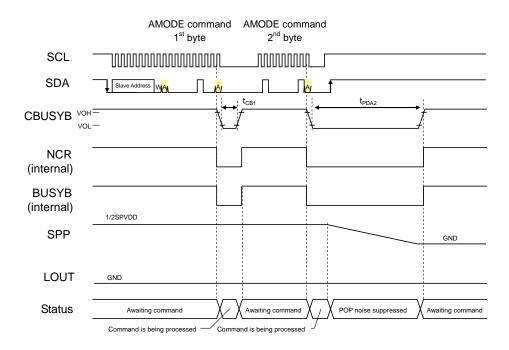


◆ Line amplifier power-down timing (DAMP bit = "0", POP bit = "0", AEN1 bit = "1" → "0", AEN0 bit = "0")

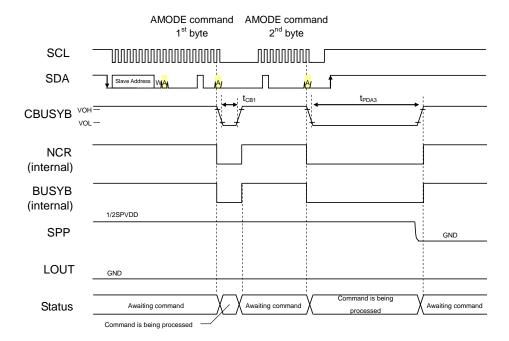


♦ Line amplifier power-down timing (DAMP bit = "0", POP bit = "1", AEN1 bit = "1" \rightarrow "0", AEN0 bit = "1" \rightarrow "0")

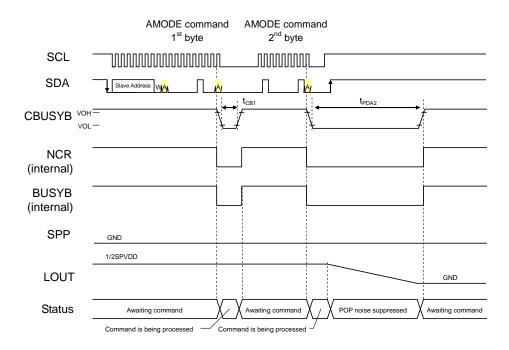


♦ Line amplifier power-down timing (DAMP bit = "0", POP bit = "0", AEN1 bit = "1" \rightarrow "0", AEN0 bit = "1" \rightarrow "0")

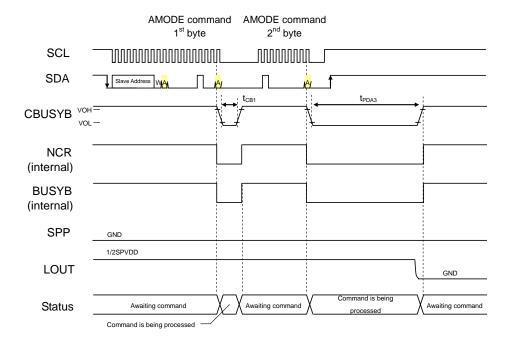

◆ WDTCL command timing

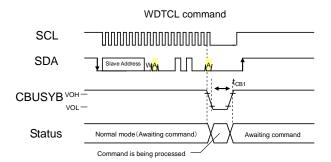


Change volume timing by AVOL command

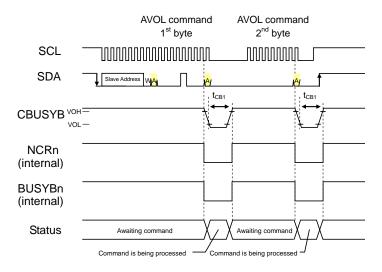


Speaker amplifier volume setting by AVOL commands is valid only when Class AB speaker amplifier is used. When a Class D speaker amplifier is used, the setting value is ignored and +0.0dB is selected.


◆ FADE command timing

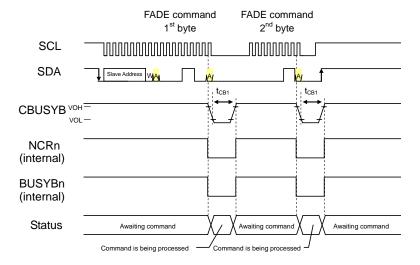

◆ Setting playback phrases using FADR command

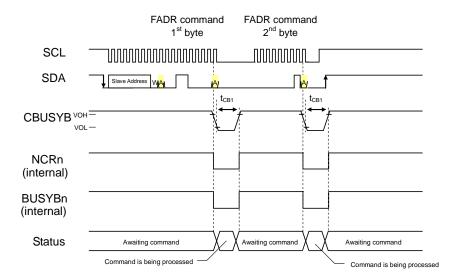

◆ Playback start timing by PLAY command

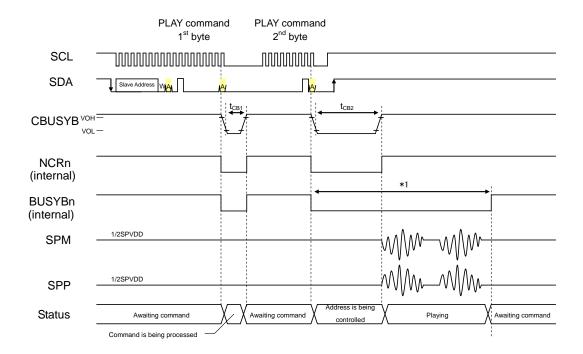


When the first byte of the PLAY command is input, the device waits for the input of the second byte after the command processing time (t_{CB1}) . When the second byte is entered, the address data of the phrase to be played after the command processing time (t_{CB2}) is read from the flash memory.

When the phrase address data is read, the specified phrase is played back, and when playback is completed, the BUSYB signal of the playback channel becomes "H" level.

The NCR signal goes to the "L" level during playback preparation, and goes to the "H" level when playback preparation is completed and playback starts. When the NCR signal of the playback channel becomes "H" level, the PLAY command of the next phrase to be played can be accepted.

*1 The length of the "L" interval in the BUSYBn is (t_{CB2}+ sound production time).


◆ Continuous playback timing by PLAY command

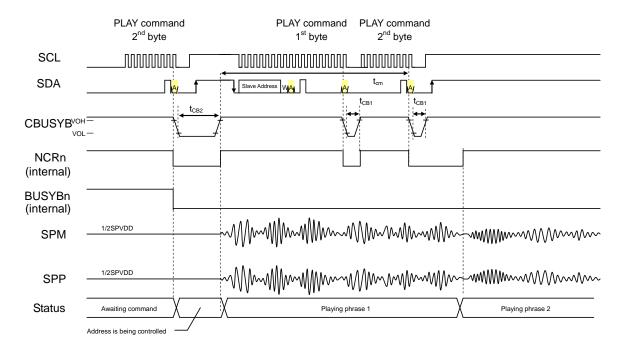

When making continuous playbacks, input the PLAY command for the next phrases within the specified time period (t_{cm}) after the NCR of the corresponding channel changes to "H" level, so that the LSI plays back the next phrases without silence sounds after the current phrase playback ends.

When the playback is not continuous, input the PLAY command for the next phrases after confirming the playback is completed by RDSTAT command, etc.

◆ Playback start timing by START command

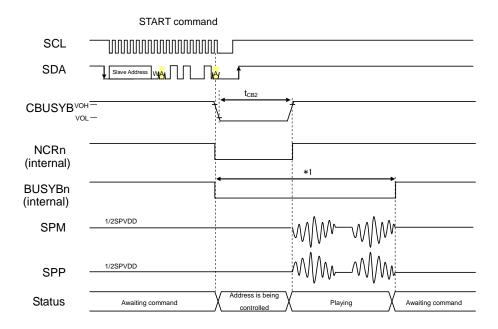


When the START command is input, the address data of the phrase to be played after the command processing time (t_{CB2}) is read from the flash memory. When the phrase address data is read, the specified phrase is played back, and when playback is completed, the BUSYB signal of the playback channel becomes "H" level.

The NCR signal goes to the "L" level during playback preparation, and goes to the "H" level when playback preparation is completed and playback starts. When the NCR signal of the playback channel becomes "H" level, the START command of the next phrase to be played can be accepted.

*1 The length of the "L" interval in the BUSYBn is (t_{CB2}+ sound production time).


Continuous playback timing by START command

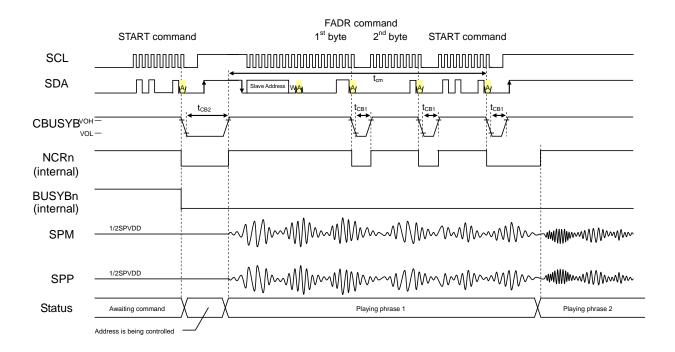


When making continuous playbacks, input the START command for the next phrases within the specified time period $(t_{\rm cm})$ after the NCR of the corresponding channel changes to "H" level, so that the LSI plays back the next phrases without silence sounds after the current phrase playback ends.

When the playback is not continuous, input the START command for the next phrases after confirming the playback is completed by RDSTAT command, etc.

◆ STOP command (when the FAD bit is "L")

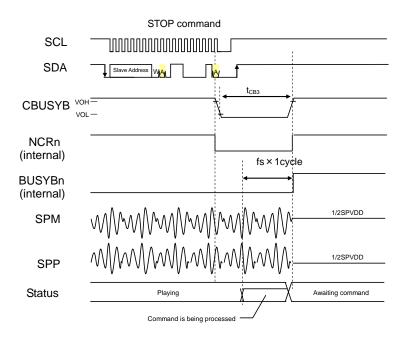


◆ STOP command (when the FAD bit is "H")

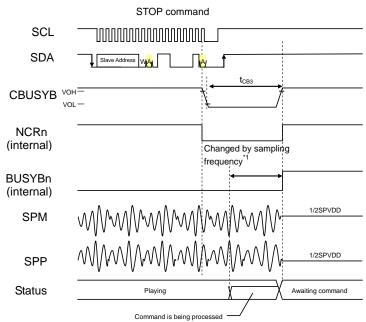

*1 The duration of the BUSYBn varies depending on the sampling frequency groups.

At 10.7/21.3kHz : Approx. 3ms At 6.4/12.8/25.6kHz : Approx. 5ms At 8.0/16.0/32.0kHz : Approx. 4ms At 11.025/22.05/44.1kHz : Approx. 2.9ms At 12.0/24.0/48.0kHz : Approx. 2.7ms Playback start timing by MUON command

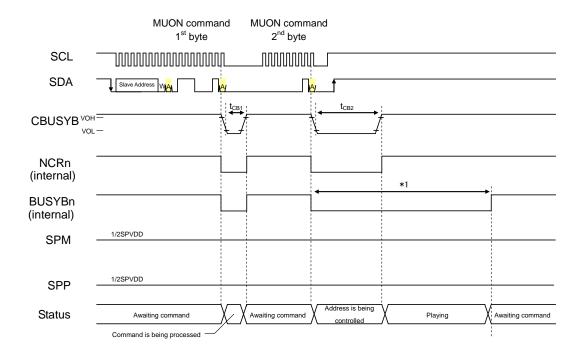


When the first byte of the MUON command is input, the device waits for the input of the second byte after the command processing time (tCB1). When the second byte is entered, the silence time is calculated after the command processing time (tCB2). When the calculation of the silence duration is completed, the calculated silence is played back, and when the playback is completed, the BUSYB signals of the playback channels become "H" level.

The NCR signal becomes "L" level during playback preparation, and becomes "H" level when playback preparation is completed and playback starts. When the NCR signal of the playback channel becomes "H" level, the PLAY command of the next phrase to be played can be accepted.

*1 The length of the "L" interval of the BUSYBn is (t_{CB2}+ silence playback time).

Continuous playback timing by MUON command

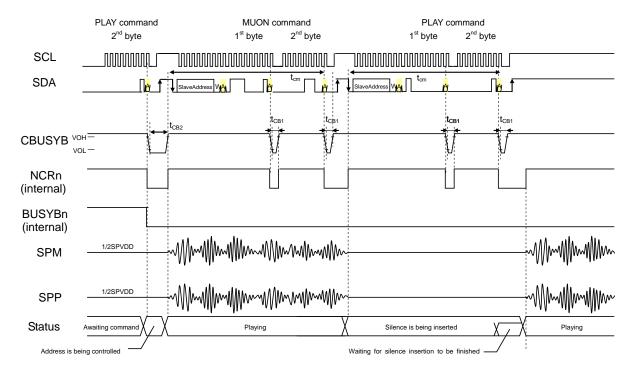

After the PLAY command is input, the CBUSYB signal and NCR signal change to "H" level when the address management of phrase 1 is completed and start playing back. Input the MUON command after the CBUSYB signal changed to "H" level. After the MUON command is received, the LSI is in a state waiting for the end of playback of phrase 1 and the NCR signal remains "L" level until the end of playback.

When the playback of phrase 1 ends, playback of the silence sound starts and the NCR signal changes to "H" level. After the NCR signal of the corresponding channel changes to "H" level, send the PLAY command again to playback the phrase 1. The NCR signal changes to "L" level again after the PLAY command is received and the LSI is in a state waiting for the end of the playback of silence sound.


After ending the playback of silence sound and starting the playback of phrase 1, the NCR signal changes to "H" level and LSI is in state that accepts the next PLAY or MUON command.

The BUSYB signal remains "L" level until the sequence of playback is completed.

When making continuous playbacks, input the MUON/PLAY/START command for the next phrases within 10ms (t_{cm}) after the NCR of the corresponding channel changes to "H" level.


When the playback is not continuous, input the MUON/PLAY/START command for the next phrases after confirming the playback is completed by RDSTAT command, etc.

◆ Repeat playback setting/release timing by SLOOP/CLOOP command

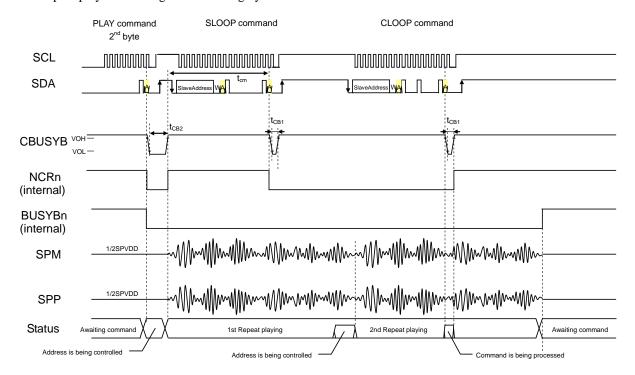


The SLOOP command is valid only during playback. After the PLAY command is input, input the SLOOP command within the specified period (t_{cm}) after the NCR of the corresponding channel becomes "H" level. This enables the SLOOP command and repeats playback. While the repeat playback mode is set, the NCR signal is "L" level.

Change volume timing by CVOL command

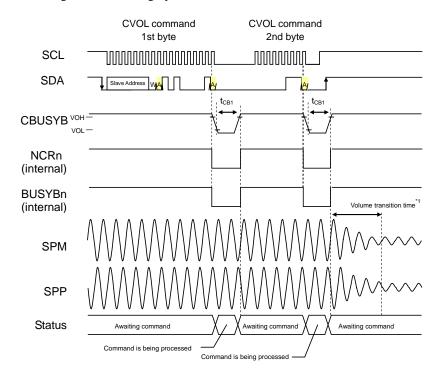


*1 Refer to the "FADE command" for more information on volume-transition time.


◆ RDSTAT command timing

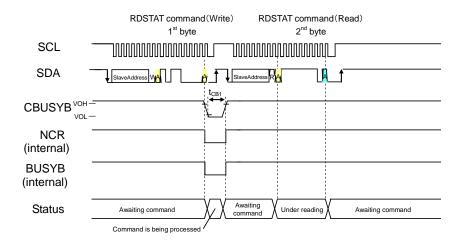


◆ RDVER command timing

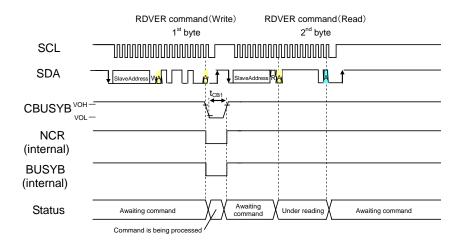


◆ RDERR command timing

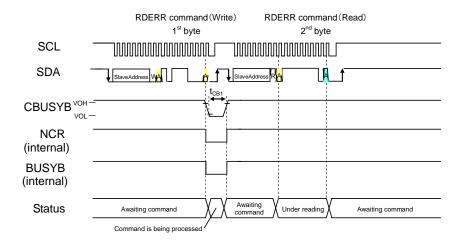


OUTSTAT command timing

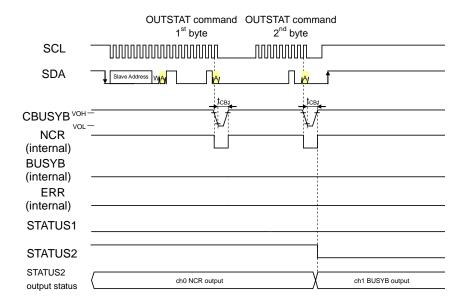


SAFE command timing

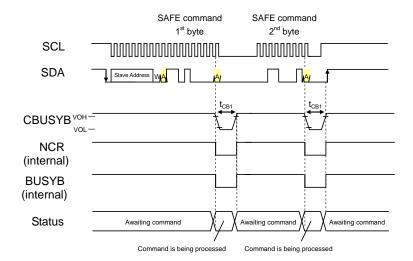


◆ ERRCL command timing

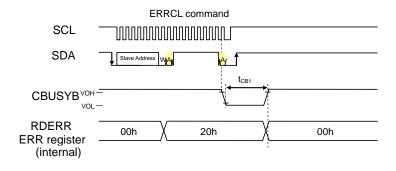

Setting timing of playback phrases by FADR2 command

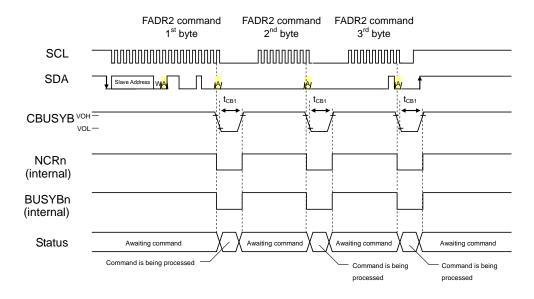

Playback start timing by PLAY2 command

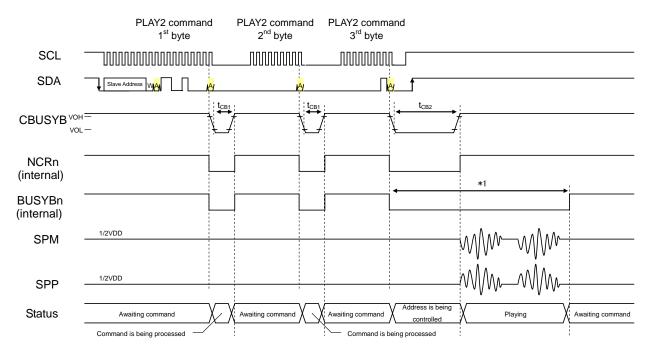


When the first byte of the PLAY command is input, the 2nd byte waits for input after the command processing time (t_{CB1}), and when the 2nd byte is input, the 3rd byte waits for input after the command processing time (t_{CB1}). When the third byte is entered, the address data of the phrase to be played after the command processing time (t_{CB2}) is read from the flash memory. When the phrase address data is read, the specified phrase is played back, and when playback is completed, the BUSYB signal of the playback channel becomes "H" level.


The NCR signal goes to the "L" level during playback preparation, and goes to the "H" level when playback preparation is completed and playback starts. When the NCR signal of the playback channel becomes "H" level, the PLAY command of the next phrase to be played can be accepted.

^{*1} The length of the "L" interval in the BUSYBn is (t_{CB2}+ sound production time).


◆ Change volume timing by PAN command

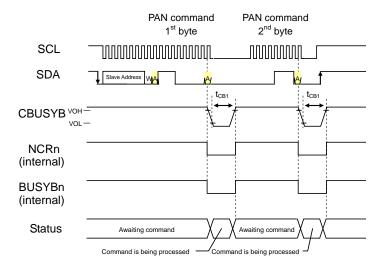


◆ SAICH command timing

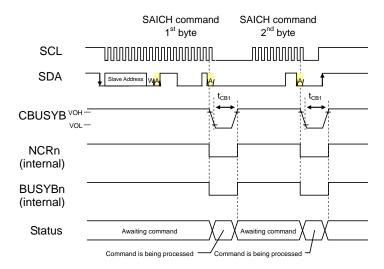


◆ SAICON command timing

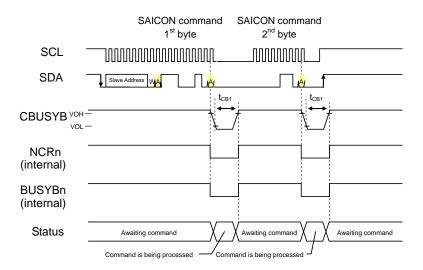


◆ SAITCON command timing

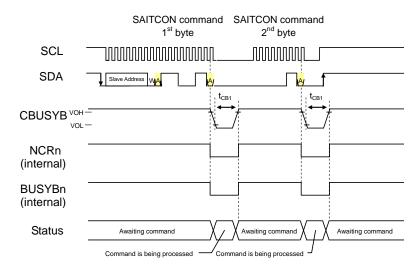


◆ SAIRCON command timing

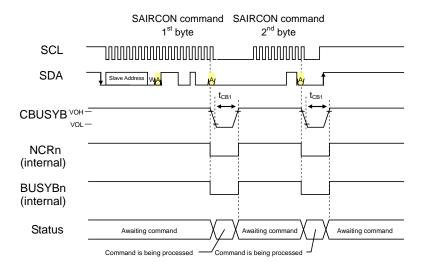

◆ SAIMOD command timing

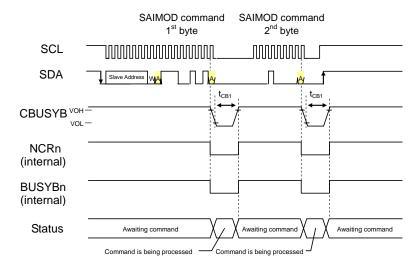

◆ Setting timing by playback sound error detection command

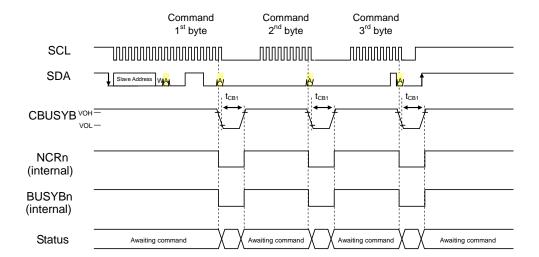

■ Command

Command list

Each command is configured in 1-byte (8-bit) units. The PUP, WDTCL, PDWN, START, STOP, SLOOP, CLOOP and ERRCL commands are configured by one byte, the FADR2 and PLAY2 command and playback sound error detection command group are configured by three bytes, and the other commands are configured by two bytes. Do not enter command that is not described in this manual. Enter the command with the CBUSYB "H".

Command name	D7	D6	D5	D4	D3	D2	D1	D0
PUP	0	0	0	0	0	0	0	WCM
	0	0	0	0	0	1	DAMP	HPF
AMODE	FAD	DAG1	DAG0	AIG1	AIG0	AEN1	AEN0	POP
11/01	0	0	0	0	1	0	0	0
AVOL	0	0	AV5	AV4	AV3	AV2	0	0
EADE	0	0	0	0	1	1	0	0
FADE	0	0	0	0	FCON2	FCON1	FCON0	FADE
EDIDECT	0	0	0	1	0	0	0	0
FDIRECT	PRT7	PRT6	PRT5	PRT4	PRT3	PRT2	PRT1	PRT0
WDTCL	0	0	0	1	0	1	0	0
PDWN	0	0	1	0	0	0	0	0
EADD	0	0	1	1	F9	F8	C1	C0
FADR	F7	F6	F5	F4	F3	F2	F1	F0
DLAV	0	1	0	0	F9	F8	C1	C0
PLAY	F7	F6	F5	F4	F3	F2	F1	F0
START	0	1	0	1	CH3	CH2	CH1	CH0
STOP	0	1	1	0	CH3	CH2	CH1	CH0
MUON	0	1	1	1	CH3	CH2	CH1	CH0
MUON	M7	M6	M5	M4	М3	M2	M1	MO
SLOOP	1	0	0	0	CH3	CH2	CH1	CH0
CLOOP	1	0	0	1	CH3	CH2	CH1	CH0
CVOL	1	0	1	0	CH3	CH2	CH1	CH0
CVOL	0	CV1	CV0	CV6	CV5	CV4	CV3	CV2
RDSTAT	1	0	1	1	0	0	0	0
RDSTAT	BUSYB3	BUSYB2	BUSYB1	BUSYB0	NCR3	NCR2	NCR1	NCR0
RDVER	1	0	1	1	0	1	0	0
KDVLK	VER7	VER6	VER5	VER4	VER3	VER2	VER1	VER0
	1	0	1	1	1	0	0	ERSEL
RDERR	OSCERR/ MIXERR	RSTERR/ SAIINERR	WDTERR/ LRCKERR	ROMERR/ BCKERR	SPDERR/	TSDERR/	DCDERR/	WCMERR/
OLITOTAT	1	1	0	0	0	0	0	0
OUTSTAT	0	PORT	STA1	STA0	CH3	CH2	CH1	CH0
	1	1	0	0	0	1	0	0
FADR2	0	0	C1	C0	F11	F10	F9	F8
	F7	F6	F5	F4	F3	F2	F1	F0
	1	1	0	0	1	0	0	0
PLAY2	0	0	C1	C0	F11	F10	F9	F8
	F7	F6	F5	F4	F3	F2	F1	F0
			l		^	^	_	
	1	1	0	1	0	0	0	ERSEL
SAFE	1 OSCEN/ MIXEN	1 RSTEN/ SAIINEN	0 WDTEN/ LRCKEN	ROMEN/ BCKEN	SPDEN/	TSDEN/	DCDEN/	WCMEN/ WVDIFEN

LAPIS Semiconductor Co., Ltd.

ML22Q53X

Command name	D7	D6	D5	D4	D3	D2	D1	D0
DAN	1	1	1	1	0	0	C1	C0
PAN	R3	R2	R1	R0	L3	L2	L1	L0
CAICH	1	1	1	0	0	0	0	1
SAICH	0	LC1	LC0	LEN	0	RC1	RC0	REN
CAICON	1	1	1	0	0	0	1	0
SAICON	FS3	FS2	FS1	FS0	0	1	INEN	OUTEN
CALTOON	1	1	1	0	0	0	1	1
SAITCON	BWO	0	0	MSBO	ISSCKO	AFOO	DLYO	WSLO
CAIDCON	1	1	1	0	0	1	0	0
SAIRCON	BWI	0	0	MSBI	ISSCKI	AFOI	DLYI	WSLI
0.4.11.4.0.15	1	1	1	0	0	1	0	1
SAIMOD	0	0	0	BSWP	0	0	0	MST

The playback sound error detection command group is a single command in three bytes, and can be read by setting the RW bit in the first byte to 0, and can be written by setting the RW bit to 1.

The following is the playback sound error detection command group.								
Command name	D7	D6	D5	D4	D3	D2	D1	D0
	0	0	0	1	1	RW	0	0
SCMODE	0	0	0	0	0	0	0	0
	1	0	0	0	0	0	AINDET	FBPATH
	0	0	0	1	1	RW	0	0
WVDIFTH	0	0	0	1	1	1	1	0
	WVDIFS	WVDIFS	WVDIFS	WVDIFS	WVDIFD	WVDIFD	WVDIFD	WVDIFD
	TH3	TH2	TH1	TH0	TH3	TH2	TH1	TH0

LAPIS Semiconductor Co., Ltd.

ML22Q53X

- Description of Command Functions
- ◆ PUP command

- Command 0	0	0	0	0	0	0	WCM
-------------	---	---	---	---	---	---	-----

The PUP command shifts from the power-down state to the command standby state.

Since only the PUP command is accepted when the LSI is in the power-down state, the command is ignored if another command is input.

To return to the power-down mode, enter the PDWN command.

The WCM bit is used to set the mode for inputting command and data two-times. When this bit is set to "1", the subsequent command and data inputs are set to the two-times input mode, and the command is accepted only when they match. If they do not match, the accepted command is discarded. Refer to the "RDSTAT command", "OUTSTAT command", and "SAFE command" for handling when a mismatch occurs.

Even if two-times input modes are used for the I²C interface, one-time input is used for the slave address input. If the slave address matches, ACK is returned. If the slave address does not match, NACK is returned. The command is input two-times.

WCM	Description
0	Do not use input mode two-times. (Initial value)
1	Use the two-times input mode

For the power-up timing by the PUP command, refer to the "Power-up timing" in the timing chart.

◆ AMODE command

Command

0	0	0	0	0	1	DAMP	HPF	1st byte
FAD	DAG1	DAG0	AIG1	AIG0	AEN1	AEN0	POP	2nd byte

The AMODE command sets the analog part.

The AMODE command is ignored during power-down, power-up transition, power-down transition and playback sound. When the PDWN command is input while powering up the analog parts, the LSI power downs on the setting condition when powering up the analog parts by the AMODE command. To perform power-down under a setting condition that differs from the power-up condition of the analog unit, set the AMODE command to set the power-down condition again.

To power up the analog part, set the CVOL command to 00h (initial value) and then enter the AMODE command.

The settings are initialized when the reset is released or when the PDWN command is inputted.

Each setting is as follows.

DAMP	Description
0	Use Class AB amplifier for speaker amplifier output.
1	Use Class D amplifier for speaker amplifier output.

When using line amplifier and using analog mixing from the AIN pin, set DAMP = "0" (Class AB amplifier is used). In this LSI, select DAMP = "0" (Class AB amplifier is used).

HPF	Description			
0	No high-pass filter is used.			
1	Use a high-pass filter with a cut-off frequency of 200Hz			

FAD	Description
0	Fade-out is not processed when inputting STOP command.
1	Fade out when inputting STOP command

The fade-out processing BUSYB signal becomes "L" and becomes "H" after processing is completed.

DAG1	DAG0	Description
0	0	Internal DAC signal input OFF
0	1	Internal DAC signal input ON (-6 dB)
1	0	Internal DAC signal input ON (0dB)
1	1	Internal DAC signal input ON (0dB) (setting prohibited)

The setting is enabled in the speaker amplifier output mode when using Class AB amplifier. Refer to the "Volume Settings" in the "Function description".

AIG1	AIG0	Description
0	0	Analog input from the AIN pin OFF
0	1	Analog input from AIN pin ON (-6 dB)
1	0	Analog input from AIN pin ON (0dB)
1	1	Analog input from AIN pin ON (0dB) (setting prohibited)

Input the sound signals to the AIN pin after CBUSYB pin becomes "H" by the AMODE command. The setting is enabled in the speaker amplifier output mode only when using Class AB amplifier. Refer to the "Volume Settings" in the "Function description".

POP	Description
0	Without pop noise suppression
1	With pop noise suppression

This bit is valid when line amplifier output is selected.

When power up with pop noise suppression, the line amplifier output rises from the DGND level to the SG level at the specified time (tPUPA2). When power down with pop noise suppression, the line amplifier output falls from the SG level to the DGND level at the specified time (tPDA2).

When power up without pop noise suppression, the line amplifier output rises from the DGND level to the SG level at the specified time (tPUPA3). When power down without pop noise suppression, the line amplifier output falls from the SG level to the DGND level at the specified time (tPDA3).

The settings of the AEN1/AEN0/POP bits for power-down and power-up of the analog section when the speaker amplifier output and line amplifier output are as follows.

Mode	AEN1	AEN0	POP	Description
Speaker amplifier	0	0	*1	In the power-down state or changeover to the power-down state.
output (Class AB amplifier)	0	1	*1	In the power-up state or changeover to the power-up state
	0	0	0	In the power-down state or changeover to the power-down state without Pop Noise Suppression
Line amplifier output	e amplifier output		0	In the power-up state or changeover to the power-up state without Pop Noise Suppression
(When using SPP pin)	0	0	1	In the power-down state or changeover to the power-down state with pop noise suppression
	1	0	1	In the power-up state or changeover to the power-up state with pop noise suppression
	0	0	0	In the power-down state or changeover to the power-down state without Pop Noise Suppression
Line amplifier output	1	1	0	In the power-up state or changeover to the power-up state without Pop Noise Suppression
(When using LOUT pin)	0	0	1	In the power-down state or changeover to the power-down state with pop noise suppression
	1	1	1	In the power-up state or changeover to the power-up state with pop noise suppression

^{*1} Settings can be enabled for both 0 and 1.

Pin states at AMODE power-down are as follows.

Analog output pin	Condition
V_{DDL}	2.5V(typ)
V_{DDR}	3.0V(typ)
SG	DGND
SPM	HiZ
SPP	SPGND
LOUT	DGND

The timing of AMODE command is shown in the timing chart.

[&]quot;Speaker amplifier power-up timing (DAMP bit "0", AEN1 bit "0", AEN0 bit "0"→ "1")"

[&]quot;Line amplifier power-up timing (DAMP bit = "0", POP bit = "1", AEN1 bit = "0" \rightarrow "1", AEN0 bit = "0") "

[&]quot;Line amplifier power-up timing (DAMP bit = "0", POP bit = "0", AEN1 bit = "0" \rightarrow "1", AEN0 bit = "0")"

[&]quot;Line amplifier power-up timing (DAMP bit "0", POP bit "1", AEN1 bit "0" \rightarrow "1", AEN0 bit = "0" \rightarrow "1")" "Line amplifier power-up timing (DAMP bit "0", POP bit "0", AEN1 bit "0" \rightarrow "1", AEN0 bit = "0" \rightarrow "1")"

[&]quot;Speaker amplifier power-down timing (DAMP bit "0", AEN1 bit "0", AEN0 bit "1"→"0")"

[&]quot;Line amplifier power-down timing (DAMP bit = "0", POP bit = "1", AEN1 bit = "1" \rightarrow "0", AEN0 bit = "0")"

[&]quot;Line amplifier power-down timing (DAMP bit = "0", POP bit = "0", AEN1 bit = "1" \rightarrow "0", AEN0 bit = "0")"

[&]quot;Line amplifier power-down timing (DAMP bit = "0", POP bit = "1", AEN1 bit = "1" \rightarrow "0", AEN0 bit = "1" \rightarrow "0")"

[&]quot;Line amplifier power-down timing (DAMP bit = "0", POP bit = "0", AEN1 bit = "1" \rightarrow "0, AEN0 bit = "1" \rightarrow "0")"

ML22Q53X

◆ AVOL command

 Command 	0	0	0	0	1	0	0	0	1st byte
	0	0	AV5	AV4	AV3	AV2	0	0	2nd byte

The AVOL command sets the volume of the speaker amplifier. This command can be input regardless of the NCR signal status.

The initial value after reset release is set to-4.0dB. Also, the setting values of the AVOL command are retained when the STOP command is inputted, but they are initialized when the power is down.

AV5-AV2	Description	AV5-AV2	Description
F	+12.0dB	7	-8.0dB
Е	+10.0dB	6	-12.0dB
D	+8.0dB	5	-18.0dB
С	+6.0dB	4	-26.0dB
В	+4.0dB	3	-34.0dB
Α	+2.0dB	2	Prohibited
9	+0.0dB	1	Prohibited
8	-4.0dB (initial value)	0	OFF

For timing of the AVOL command, refer to the "Change volume timing by AVOL command" in the timing chart.

ML22Q53X

◆ FADE command

 Command 	0	0	0	0	1	1	0	0	1st byte
	0	0	0	0	FCON2	FCON1	FCON0	FADE	2nd byte

The FADE command sets the Fade function. This command can be input regardless of the NCR signal status. By using the fade function, the volume changes stepwise when the volume is changed by the CVOL command or the PAN command.

FADE	Description				
0	Fade function disabled (initial value)				
1	Fade function enabled				

FCON2 to FCON0 set the volume that changes at every unit-time (sampling group period *1) when the volume is changed to the volume set by the CVOL command or the PAN command.

FCON2	FCON1	FCON0	Description
0	0	0	Volume change in 0 dB x 128/32768 steps
0	0	1	Volume change in 0 dB x 64/32768 steps
0	1	0	Volume change in 0 dB x 32/32768 steps
0	1	1	Volume change in 0 dB x 16/32768 steps
1	0	0	Volume change in 0 dB x 8/32768 steps
1	0	1	Volume change in 0 dB x 4/32768 steps
1	1	0	Volume change in 0 dB x 2/32768 steps
1	1	1	Volume change in 0 dB x 1/32768 steps

The smaller the voltage step that changes for each sampling frequency group, the less the pop noise, but the longer the transition time until the set volume is reached. The transition time is expressed by the following equation.

Volume-transition time for CVOL command

=|[Current CVOL setting]-[New CVOL setting]|

× [Sampling-frequency group *1]

 $\times \{264 \div (256 \div 2^{\text{FCON2-FCON0 setting}})\}^{*2}$

*1 Sampling frequency group

For the timing of the FADE command, refer to the "FADE command timing" in the timing chart.

^{*2} Rounding up after the decimal point

1st byte 2nd byte

LAPIS Semiconductor Co., Ltd.

ML22Q53X

◆ FDIRECT command

Command

0	0	0	1	0	0	0	0
PRT7	PRT6	PRT5	PRT4	PRT3	PRT2	PRT1	PRT0

The FDIRECT command controls accesses to the flash memory using the clock synchronous serial interface. Input the command after inputting the PUP command.

If the protection code of the flash memory area is not 0x69 and the protection codes (PRT7 to PRT0) entered in the second byte match the protection code set when creating sound data, the flash memory access mode is entered. After that, the flash memory can be accessed using the clock synchronous serial interface.

If the protection code set when creating sound data is 0x69, the flash memory does not change to flash memory access mode even if the code matches.

To cancel the flash memory access mode, insert a reset (RESETB = "L") and conduct initialization or turn off the power supply.

Do not enter this command because this command is ignored when this command is entered from the I²C interface.

For the protection codes of the flash memory area, refer to the "Speech LSI Utility Setting Items".

For the timing of the FDIRECT command, refer to the "FDIRECT command timing" in the timing chart.

ML22Q53X

♦ WDTCL command

. (Command	0	0	0	1	0	1	0	0	
-----	---------	---	---	---	---	---	---	---	---	--

The WDTCL command clears the watchdog timer counter (WDT counter). This command can be input regardless of the NCR signal status.

For information about the operation of the watchdog timer, refer to the "Misoperation detection and failure detection functions (Watchdog timer overflow detection)" in the "Function description".

For the timing of WDTCL command, refer to the "WDTCL command timing" in the timing chart.

ML22Q53X

◆ PDWN command

 Command 	0	0	1	0	0	0	0	0	
-----------------------------	---	---	---	---	---	---	---	---	--

The PDWN command is used to shift from the command standby state to the power-down state. The various settings are initialized, so the initial settings are required after power-up. It is invalid when the BUSYB signals of any channels are "L".

After inputting the PDWN command, oscillation stops following the elapse of the command processing time (t_{PD}) .

The states of the analog output pins during power-down are shown below.

Analog output pin	Condition
V_{DDL}	DGND
V_{DDR}	DGND
SG	DGND
SPM	HiZ
SPP	SPGND
LOUT	DGND

For the power-down timing by PDWN command, refer to the "Power-Down timing" in the timing chart.

ML22Q53X

◆ FADR command

Command

0	0	1	1	F9	F8	C1	C0	1st byte
F7	F6	F5	F4	F3	F2	F1	F0	2nd byte

The FADR command sets the channels and phrases to be played. This command can be input when the NCR signal of the corresponding channel is "H" level.

Playback is started by the START command after the playback phrases of each channel are specified.

The phrases (F9-F0) to be played back are specified when creating sound data. Set the phrase specified when creating.

This command can only set up to 0 to 1023 phrases. To specify 1024 phrases or more, use FADR2 command.

The channel settings are as follows:

C1	C0	Description
0	0	Channel 0
0	1	Channel 1
1	0	Channel 2
1	1	Channel 3

For the timing of the FADR command, refer to the "Setting playback phrases using FADR command" in the timing chart.

ML22Q53X

◆ PLAY command

Command

0	1	0	0	F9	F8	C1	C0	1st byte
F7	F6	F5	F4	F3	F2	F1	F0	2nd byte

The PLAY command is played by specifying channels and phrases. This command can be input when the NCR signal of the corresponding channel is "H" level.

The phrases (F9-F0) to be played back are specified when creating sound data. Set the phrase specified when creating. This command can only set up to 0 to 1023 phrases. To specify 1024 phrases or more, use PLAY2 command.

The channel settings are as follows:

C1	C0	Description
0	0	Channel 0
0	1	Channel 1
1	0	Channel 2
1	1	Channel 3

For the playback start timing by the PLAY command, refer to the "Playback start timing by PLAY command" in the timing chart.

For the timing of continuous playback, refer to the "Continuous playback timing by PLAY command" in the timing chart.

ML22Q53X

◆ START command

 Command 	0	1	0	1	CH3	CH2	CH1	CH0	1st byte
-----------------------------	---	---	---	---	-----	-----	-----	-----	----------

The START command starts playing back the specified channels. Specify the phrase to be played by the FADR command prior to entering the START command. Setting the CH0 to CH3 bit to 1 plays back the corresponding channel. This command can be input when the NCR signal of the corresponding channel is "H" level.

The channel settings are as follows:

Channeled	Description
CH0	When this bit is set to 1, channel 0 is played back.
CH1	When this bit is set to 1, channel 1 is played back.
CH2	When this bit is set to 1, channel 2 is played back.
CH3	When this bit is set to 1, channel 3 is played back.

Be sure to specify one of the channels for the channel setting (CH0-CH3).

Do not input it to "0" (all "0") with specifying nothing. If it is input with specifying nothing (all "0"), the command is ignored.

For the playback start timing by the START command, refer to the "Playback start timing by START command" in the timing chart.

For the timing of continuous playback, refer to the "Continuous playback timing by START command" in the timing chart.

ML22Q53X

◆ STOP command

 Command 	0	1	1	0	CH3	CH2	CH1	CH0	1st byte
-----------------------------	---	---	---	---	-----	-----	-----	-----	----------

The STOP command stops playing back the specified channel. Setting the CH0 to CH3 bit to "1" stops playback of the corresponding channel. When the corresponding channel stops playing back, the NCR and BUSYB signals become "H".

The STOP command can be input regardless of the status of the NCR during playback operation. However, following the elapse of CBUSYB "L" level output time 3 (tCB3), input the next command after confirming that the BUSYB signal becomes "H".

If the BUSYB signal does not become "H", enter the STOP command again.

Refer to the "Playback stop flow" in the command flowchart for more information.

The channel settings are as follows:

Channeled	Description
CH0	Setting this bit to 1 stops channel 0.
CH1	Setting this bit to 1 stops channel 1.
CH2	Setting this bit to 1 stops channel 2.
CH3	Setting this bit to 1 stops channel 3.

Be sure to specify one of the channels for the channel setting (CH0-CH3).

Do not input it to "0" (all "0") with specifying nothing. If it is input with specifying nothing (all "0"), the command is ignored.

For the timing of the STOP command, refer to the "STOP command (when the FAD bit is "L")" and "STOP command (when the FAD bit is "H")" in the timing chart.

◆ MUON command

Command

0	1	1	1	CH3	CH2	CH1	CH0	1st byte
M7	M6	M5	M4	МЗ	M2	M1	MO	2nd byte

The MUON command inserts silence between two phrases to be played. This command can be inputted when the NCR signal of the corresponding channel is "H" level.

Repeated playing back (the SLOOP command) of the MUON command is not possible.

The silence duration (t_{mu}) is specified by the M7-M0 bits and can be set from 20ms to 1,024ms in 252 steps at 4ms intervals. The equation for setting the silence duration (t_{mu}) is as follows.

However, set the silence setting (M7-M0) to 04h or more (t_{mu}≥20ms).

$$t_{mu}\!\!=\!\!(2^{7}\!\!\times\!(M7)\!+\!2^{6}\!\!\times\!(M6)\!+\!2^{5}\!\!\times\!(M5)\!+\!2^{4}\!\!\times\!(M4)\!+\!2^{3}\!\!\times\!(M3)\!+\!2^{2}\!\!\times\!(M2)\!+\!2^{1}\!\!\times\!(M1)\!+\!2^{0}\!\!\times\!(M0)\!+\!1)\!\!\times\!4ms$$

The channel settings are as follows:

Channeled	Description
CH0	Setting this bit to 1 inserts silence into channel 0.
CH1	Setting this bit to 1 inserts silence into channel 1.
CH2	Setting this bit to 1 inserts silence into channel 2.
CH3	Setting this bit to 1 inserts silence into channel 3.

Be sure to specify one of the channels for the channel setting (CH0-CH3).

Do not input it to "0" (all "0") with specifying nothing. If it is input with specifying nothing (all "0"), the command is ignored.

For the timing of the MUON command, refer to the "Playback start timing by MUON command" in the timing chart. For the timing of continuous playback, refer to the "Continuous playback timing by MUON command" in the timing chart.

ML22Q53X

◆ SLOOP command

 Command 	1	0	0	0	CH3	CH2	CH1	CH0	1st byte
-----------------------------	---	---	---	---	-----	-----	-----	-----	----------

The SLOOP command sets the repeat playback of the specified channel. Setting the CH0 to CH3 bit to 1 repeatedly plays back the corresponding channel. This command can be input when the NCR signal of the corresponding channel is "H" level.

When repeat playback is set, playback is repeatedly performed until the repeat playback setting is canceled by the CLOOP command or playback is stopped by the STOP command. Also, if the phrase has been edited, the edited phrase is played repeatedly.

The channel settings are as follows:

Channeled	Description
CH0	Setting this bit to 1 repeats playback on channel 0.
CH1	Setting this bit to 1 repeats playback on channel 1.
CH2	Setting this bit to 1 repeats playback on channel 2.
CH3	Setting this bit to 1 repeats playback on channel 3.

Be sure to specify one of the channels for the channel setting (CH0-CH3).

Do not input it to "0" (all "0") with specifying nothing. If it is input with specifying nothing (all "0"), the command is ignored.

For the timing of the SLOOP command, refer to the "Repeat playback setting/release timing by SLOOP/CLOOP command" in the timing chart.

ML22Q53X

◆ CLOOP command

 Command 	1	0	0	1	CH3	CH2	CH1	CH0	1st byte
-----------------------------	---	---	---	---	-----	-----	-----	-----	----------

The CLOOP command releases repeat playback of the specified channel. This command can be input regardless of the NCR signal status.

Setting the CH0 to CH3 bit to "1" cancels repeat playback of the corresponding channel. When repeat playback is released, the NCR signal becomes "H" level.

The channel settings are as follows:

Channeled	Description
CH0	Setting this bit to 1 cancels repeat playback on channel 0.
CH1	Setting this bit to 1 cancels repeat playback on channel 1.
CH2	Setting this bit to 1 cancels repeat playback on channel 2.
CH3	Setting this bit to 1 cancels repeat playback on channel 3.

Be sure to specify one of the channels for the channel setting (CH0-CH3).

Do not input it to "0" (all "0") with specifying nothing. If it is input with specifying nothing (all "0"), the command is ignored.

For the timing of the CLOOP command, refer to the "Repeat playback setting/release timing by SLOOP/CLOOP command" in the timing chart.

ML22Q53X

◆ CVOL command

CH2 CH0 Command 0 CH3 CH1 1st byte 0 CV1 CV0 CV6 CV5 CV4 CV3 CV2 2nd byte

The CVOL command sets the playback volume of the specified channel. This command can be input regardless of the NCR signal status.

Setting the CH0 to CH3 bit to 1 sets the volume of the corresponding channel.

The volume can be set at 128 levels.

The setting values are initialized when a reset is inserted (RESETB = "L") and PDWN command is input.

The CV1 and CV0 of the second bytes of the CVOL command are located at the top of the CV6 to CV2.

CV1,CV0, CV6-CV2	Description	CV1,CV0, CV6-CV2	Description	CV1,CV0, CV6-CV2	Description	CV1,CV0, CV6-CV2	Description
00	0.00dB (initial value)	08	-2.59dB	10	-6.31dB	18	-12.93dB
20	-0.07dB	28	-2.69dB	30	-6.45dB	38	-13.24dB
40	-0.14dB	48	-2.78dB	50	-6.60dB	58	-13.57dB
60	-0.21dB	68	-2.88dB	70	-6.75dB	78	-13.91dB
01	-0.28dB	09	-2.98dB	11	-6.90dB	19	-14.26dB
21	-0.36dB	29	-3.08dB	31	-7.06dB	39	-14.63dB
41	-0.43dB	49	-3.18dB	51	-7.22dB	59	-15.02dB
61	-0.50dB	69	-3.28dB	71	-7.38dB	79	-15.42dB
02	-0.58dB	0A	-3.38dB	12	-7.55dB	1A	-15.85dB
22	-0.65dB	2A	-3.49dB	32	-7.72dB	3A	-16.29dB
42	-0.73dB	4A	-3.59dB	52	-7.89dB	5A	-16.76dB
62	-0.81dB	6A	-3.70dB	72	-8.06dB	7A	-17.26dB
03	-0.88dB	0B	-3.81dB	13	-8.24dB	1B	-17.79dB
23	-0.96dB	2B	-3.92dB	33	-8.43dB	3B	-18.35dB
43	-1.04dB	4B	-4.03dB	53	-8.61dB	5B	-18.95dB
63	-1.12dB	6B	-4.14dB	73	-8.80dB	7B	-19.59dB
04	-1.20dB	0C	-4.25dB	14	-9.00dB	1C	-20.28dB
24	-1.28dB	2C	-4.37dB	34	-9.20dB	3C	-21.04dB
44	-1.36dB	4C	-4.48dB	54	-9.40dB	5C	-21.87dB
64	-1.44dB	6C	-4.60dB	74	-9.61dB	7C	-22.78dB
05	-1.53dB	0D	-4.72dB	15	-9.83dB	1D	-23.81dB
25	-1.61dB	2D	-4.84dB	35	-10.05dB	3D	-24.97dB
45	-1.70dB	4D	-4.97dB	55	-10.27dB	5D	-26.31dB
65	-1.78dB	6D	-5.09dB	75	-10.50dB	7D	-27.89dB
06	-1.87dB	0E	-5.22dB	16	-10.74dB	1E	-29.83dB
26	-1.96dB	2E	-5.35dB	36	-10.99dB	3E	-32.33dB
46	-2.04dB	4E	-5.48dB	56	-11.24dB	5E	-35.85dB
66	-2.13dB	6E	-5.61dB	76	-11.50dB	7E	-41.87dB
07	-2.22dB	0F	-5.74dB	17	-11.77dB	1F	-44.37dB
27	-2.31dB	2F	-5.88dB	37	-12.04dB	3F	-47.89dB
47	-2.41dB	4F	-6.02dB	57	-12.33dB	5F	-53.91dB
67	-2.50dB	6F	-6.16dB	77	-12.62dB	7F	OFF

The volume can also be set at 32 levels by fixing the CV1 and CV0 bits to "0".

CV6-CV2	Description	CV6-CV2	Description
00	0.00dB (initial value)	10	-6.31dB
01	-0.28dB	11	-6.90dB
02	-0.58dB	12	-7.55dB
03	-0.88dB	13	-8.24dB
04	-1.20dB	14	-9.00dB
05	-1.53dB	15	-9.83dB
06	-1.87dB	16	-10.74dB
07	-2.22dB	17	-11.77dB
08	-2.59dB	18	-12.93dB
09	-2.98dB	19	-14.26dB
0A	-3.38dB	1A	-15.85dB
0B	-3.81dB	1B	-17.79dB
0C	-4.25dB	1C	-20.28dB
0D	-4.72dB	1D	-23.81dB
0E	-5.22dB	1E	-29.83dB
0F	-5.74dB	1F	-44.37dB

The channel settings are as follows:

Channeled	Description
CH0	Setting this bit to 1 set the volume of channel 0.
CH1	Setting this bit to 1 set the volume of channel 1.
CH2	Setting this bit to 1 set the volume of channel 2.
CH3	Setting this bit to 1 set the volume of channel 3.

Be sure to specify one of the channels for the channel setting (CH0-CH3). When multiple channels are specified, the volume of the specified channels is set.

Do not input it to "0" (all "0") with specifying nothing. If it is input with specifying nothing (all "0"), the command is ignored.

For timing of the CVOL command, refer to the "Change volume timing by CVOL command" in the timing chart.

ML22Q53X

◆ RDSTAT command

 Command 	1	0	1	1	0	0	0	0	1st byte
-----------------------------	---	---	---	---	---	---	---	---	----------

The RDSTAT command reads the internal operating states. This command can be input regardless of the NCR signal status. When reading the status of the second byte after command input, set the SI pin to "L".

The internal operating states read in the second byte are as follows:

2nd byte	D7	D6	D5	D4	D3	D2	D1	D0
Output data	BUSYB3	BUSYB2	BUSYB1	BUSYB0	NCR3	NCR2	NCR1	NCR0

The NCR signal outputs "L" during command processing and playback standby, and outputs "H" in other states. The BUSYB signal outputs "L" during command processing and playback sound, and outputs "H" in other states.

D7 to D0	Description
BUSYB3	BUSYB outputs of channel 3
BUSYB2	BUSYB outputs of channel 2
BUSYB1	BUSYB outputs of channel 1
BUSYB0	BUSYB outputs of channel 0
NCR3	NCR output of channel 3
NCR2	NCR output of channel 2
NCR1	NCR output of channel 1
NCR0	NCR output of channel 0

For the timing of the RDSTAT command, refer to the "RDSTAT command timing" in the timing chart.

ML22Q53X

◆ RDVER command

 Command 	1	0	1	1	0	1	0	0	1st byte
-----------------------------	---	---	---	---	---	---	---	---	----------

The RDVER command read the sound ROM information. This command can be input regardless of the NCR signal status. When reading the sound ROM information in the second byte after command input, set the SI pin to "L".

The sound ROM information read in the second byte is as follows:

2nd byte	D7	D6	D5	D4	D3	D2	D1	D0
Output data	VER7	VER6	VER5	VER4	VER3	VER2	VER1	VER0

Sound ROM information can be set by using dedicated tool (Speech LSI Utility) when creating sound data.

For the timing of the RDVER command, refer to the "RDVER command timing" in the timing chart.

ML22Q53X

◆ RDERR command

Command	Command
---------	---------

The RDERR command read misoperation detection and failure detection status. This command can be input regardless of the NCR signal status. When reading error information in the second byte after command input, set the SI pin to "L".

If the outputs of misoperation detection and failure detection are selected by OUTSTAT command, and the read data is all "L" even though STATUS1 or STATUS2 pin is "H", the read data cannot be read normally. Be sure to read it again.

The data to be read differs depending on the ERSEL bit. When an error occurs, use this command to check the error information corresponding to various misoperation detection and failure detection status set by the SAFE command.

The error information read in the second byte when ERSEL = "0" is as follows.

2nd byte	D7	D6	D5	D4	D3	D2	D1	D0
Output data	OSCERR	RSTERR	WDTERR	ROMERR	SPDERR	TSDERR	DCDERR	WCMERR

The error information read in the second byte when ERSEL = "1" is as follows.

2nd byte	D7	D6	D5	D4	D3	D2	D1	D0
Output data	MIXERR	SAIINERR	LRCKERR	BCKERR	0	0	0	WVDIFERR

Misoperation detection and failure detection status are as follows.

Error signal	Description
WCMERR	This bit is set to "1" when an error of the command is detected.
DCDERR	This bit is set to "1" when the disconnection of the speaker connected to the SPP and SPM pins is detected.
TSDERR	This bit is set to "1" when the LSI temperature becomes 130°C or higher.
SPDERR	This bit is set to "1" when the SPP pin and the SPM pin are short-circuited, or when the SPP pin or the SPM pin is short-circuited to GND.
ROMERR	This bit is set to 1 when an error is detected in the flash memory.
WDTERR	This bit is set to "1" when the first overflow of the watchdog timer counter occurs.
RSTERR	This bit is set to "1" when the second overflow of the watchdog timer counter occurs. Alternatively, this bit is set to "1" when the RST counter, which starts operation by any of the error detections, overflows.
OSCERR	This bit is set to "1" when the clock input from the crystal resonator or ceramic resonator is stopped.
WVDIFERR	This bit is set to "1" when the Wave Difference Error of playback sound error detection function is detected.
BCKERR	This bit is set to "1" when the disconnection/short circuit of the BCLK is detected.
LRCKERR	This bit is set to "1" when the disconnection/short circuit of the LRCLK is detected.
SAIINERR	This bit is set to "1" when the disconnection or short circuit of SAI_IN is detected.
MIXERR	This bit is set to "1" when an error in the mixing number is detected.

For details on misoperation detection and failure detection, refer to the "Misoperation detection and failure detection functions" in the "Function description".

For the timing of the RDERR command, refer to the "RDERR command timing" in the timing chart.

◆ OUTSTAT command

 Command 	1	1	0	0	0	0	0	0	1st byte
	0	PORT	STA1	STA0	CH3	CH2	CH1	CH0	2nd byte

The OUTSTAT command selects the internal operating states output to the STATUS1 pin and STATUS2 pin. This command can be input regardless of the NCR signal status.

PORT	Description
0	STATUS1 Pin setting
1	STATUS2 Pin setting


If the STATUS2 pin is set after the STATUS1 pin is set, the STATUS1 pin setting is retained. In the initial setting, the NCR of channel 0 is selected for the STATUS1 pin, and the BUSYB of channel 0 is selected for the STATUS2 pin.

STA1	STA0	Description					
0	0	BUSYB					
0	1	NCR					
1	0	Misoperation detection and failure detection					
1	1						

Channeled	Description
CH0	Setting this bit to 1 selects channel 0.
CH1	Setting this bit to 1 selects channel 1.
CH2	Setting this bit to 1 selects channel 2.
CH3	Setting this bit to 1 selects channel 3.

Channel settings are enabled when BUSYB or NCR is specified in the STA1/STA0. Multiple channels can also be set.

The relations between the STATUS1 pin and the STA1/STA0/CH3/CH2/CH1/CH0 are shown below.

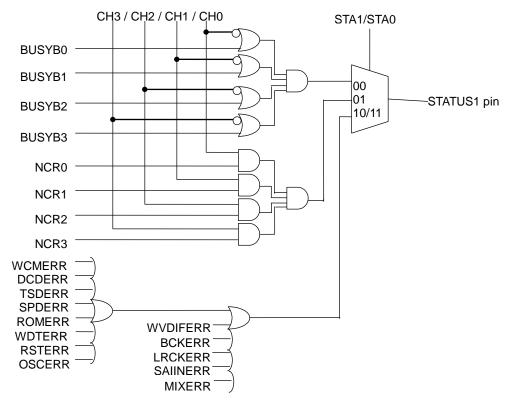

For the timing of the OUTSTAT command, refer to the "OUTSTAT command timing" in the timing chart.

ML22Q53X

♦ FADR2 command

Command

1	1	0	0	0	1	0	0	1st byte
0	0	C1	C0	F11	F10	F9	F8	2nd byte
F7	F6	F5	F4	F3	F2	F1	F0	3rd byte

The FADR2 command sets the channels and phrases to be played. This command can be input when the NCR signal of the corresponding channel is "H" level.

Playback is started by the START command after the playback phrases of the channels are specified.

The phrases (F11-F0) to be played back are specified when creating sound data. Set the phrase specified when creating.

The channel settings are as follows:

C1	C0	Description
0	0	Channel 0
0	1	Channel 1
1	0	Channel 2
1	1	Channel 3

When the number of phrases to be played is 1024 or less, the channels and phrases can be specified by FADR command.

For the timing of the FADR2 command, refer to the "Setting timing of playback phrases by FADR2 command" in the timing chart.

ML22Q53X

♦ PLAY2 command

Command

1	1	0	0	1	0	0	0	1st byte
0	0	C1	C0	F11	F10	F9	F8	2nd byte
F7	F6	F5	F4	F3	F2	F1	F0	3rd byte

The PLAY2 command is played by specifying channels and phrases. This command can be input when the NCR signal of the corresponding channel is "H" level.

The phrases (F11-F0) to be played back are specified when creating sound data. Set the phrase specified when creating.

The channel settings are as follows:

C1	C0	Description
0	0	Channel 0
0	1	Channel 1
1	0	Channel 2
1	1	Channel 3

When the number of phrases to be played is 1024 or less, the channels and phrases can be specified by PLAY command.

For the playback start timing by the PLAY2 command, refer to the "Playback start timing by PLAY2 command" in the timing chart.

◆ SAFE command

 Command 	1	1	0	1	0	0	0	ERSEL	1st byte
When ERSEL = "0"	OSCEN	RSTEN	WDTEN	ROMEN	SPDEN	TSDEN	DCDEN	WCMEN	2nd byte
When ERSEL = "1"	MIXEN	SAIINEN	LRCKEN	BCKEN	0	0	0	WVDIFEN	2nd byte

The SAFE command is used to set the operation of the misoperation detection function and the failure detection function. The initial value is the operation stop state ("0"). When this bit is set to "1", operation starts.

Select the function to be set in the ERSEL. If ERSEL is set to "1" after setting ERSEL to "0", the function set with ERSEL = "0" is retained. The functions to be set when ERSEL = "0" are as follows.

Error setting	Description
WCMEN	Set the command error detection.
DCDEN	Set the disconnection detection of the speakers connected to the SPP and SPM pins.
TSDEN	Set the LSI temperature error detection.
SPDEN	Set the detection of short circuit between the SPP pin and the SPM pin.
ROMEN	Set error detection of flash memory.
WDTEN*1	Operate the watchdog timer and set overflow detection.
RSTEN*1	Operate the RST counter and set overflow detection, when any error is detected.
OSCEN	Enable the error output for the stop detection of clock input from a crystal resonator or ceramic resonator.

^{*1} Do not set WDTEN and RSTEN to "1" at the same time. If these bits are set to "1" at the same time, only the RSTEN bit is set to "1".

The functions to be set when ERSEL = "1" are as follows.

Error setting	Description
WVDIFEN	Set the Wave Difference Error detection of the playback sound error detection function.
BCKEN	Set the BCLK disconnection/short detection.
LRCKEN	Set the LRCLK disconnection/short detection.
SAIINEN	Set the SAI_IN disconnection/short detection.
MIXEN	Set error detection of mixing number.

For details on misoperation detection and failure detection, refer to the "Misoperation detection and failure detection functions" in the function description.

For the timing of the SAFE command, refer to the "SAFE command timing" in the timing chart.

ML22Q53X

♦ ERRCL command

	ı									
٠	Command	1	1	1	1	1	1	1	1	1

The ERRCL command is a command that clears error bits that can be read by the RDERR command. The ERRCL command clears all error bits irrespective of the ERSEL bit of the RDERR command. This command can be input regardless of the NCR signal status.

However, if the error continues, the error bit remains in the error status even if the ERRCL command is entered.

For the timing of the ERRCL command, refer to the "ERRCL command timing" in the timing chart.

ML22Q53X

◆ PAN command

 Command
 1
 1
 1
 1
 0
 0
 C1
 C0
 1st byte

 R3
 R2
 R1
 R0
 L3
 L2
 L1
 L0
 2nd byte

The PAN command sets the volume of the Lch/Rch during serial audio interface (SAI) operation. This command can be input regardless of the NCR signal status.

Set the volume during playback or before starting playback. The initial value is 0dB for both channels.

The Fade function can change the volume step by step.

The channel settings are as follows:

C1	C0	Description
0	0	Channel 0
0	1	Channel 1
1	0	Channel 2
1	1	Channel 3

The volume settings are as follows:

R3/L3	R2/L2	R1/L1	R0/L0	Description
0	0	0	0	0 dB (initial value)
0	0	0	1	-0.58dB
0	0	1	0	-1.20dB
0	0	1	1	-1.87dB
0	1	0	0	-2.59dB
0	1	0	1	-3.38dB
0	1	1	0	-4.25dB
0	1	1	1	-5.22dB
1	0	0	0	-6.31dB
1	0	0	1	-7.55dB
1	0	1	0	-9.00dB
1	0	1	1	-10.74dB
1	1	0	0	-12.93dB
1	1	0	1	-15.85dB
1	1	1	0	-20.28dB
1	1	1	1	OFF

For the fade function, refer to the "FADE command".

For adjusting the Lch/Rch volume using FADE command, refer to the "Volume Settings" in the function description.

For the PAN command input timing, refer to the "Change volume timing by PAN command" in the timing chart.

◆ SAICH command

 Command 	1	1	1	0	0	0	0	1	1st byte
	0	LC1	LC0	LEN	0	RC1	RC0	REN	2nd byte

The SAICH command sets the operation of the serial audio interface (SAI) and the channels on the Lch and Rch sides. Set these bits when channels other than SAIs are not playing back (BUSYBn is "1").

LEN and REN set the operation of the Lch side and the Rch side.

LEN	Description
0	Stops the operation of the serial audio interface (SAI) on the Lch side (initial
1	Starts the operation of the serial audio interface (SAI) on the Lch side.

REN	Description
0	Stops the operation of the serial audio interface (SAI) on the Rch side (initial
1	Starts the operation of the serial audio interface (SAI) on the Rch side.

LC1 to LC0 and RC1 to RC0 specify the playback channels of the Lch and Rch sides.

RC1	RC0	Description
0	0	Specify Rch-side channel 0 (CH0).
0	1	Specify Rch-side channel 1 (CH1).
1	0	Specify Rch-side channel 2 (CH2).
1	1	Specify Rch-side channel 3 (CH3).

LC1	LC0	Description
0	0	Specify Lch-side channel 0 (CH0).
0	1	Specify Lch-side channel 1 (CH1).
1	0	Specify Lch-side channel 2 (CH2).
1	1	Specify Lch-side channel 3 (CH3).

The LEN and REN bits cannot be set to "1" when the channels specified by LC1 to LC0 and RC1 to RC0 are playing back in a mode other than SAI (BUSYBn = "L").

If you want to set LEN="0" and REN="1" with LEN="1" and REN="0", set LEN="0" and REN="1" after setting LEN=REN="0".

When LEN and REN are set to "1" with the same channel specified by LC1 to LC0 and RC1 to RC0, only the Lch operates.

Start the LRCLK/BCLK input after entering the SAICON command.

Subsequently, enter the MUON command and then the SAICH command.

After entering the MUON command, enter the SAICH command at least 10ms prior to the end of the silence period set by the MUON command.

Use a channel that is not played back by SAICH as the playback channel set by MUON commands. To mix with ROM playback, use a channel for ROM playback. When ROM playback is started within the silence time set by the MUON commands, resulting in continuous playback, ROM playback is started after the set silence time elapses.

For the timing of inputting the SAICH command, refer to the "SAICH command timing" in the timing chart.

When LRCLK is faster by 5% or more, SAICH is initialized. For LRCLK failure detection, refer to the "Function description" section.

ML22Q53X

◆ SAICON command

 Command 0 0 1st byte 0 0 1 FS3 FS2 FS1 FS0 0 1 **INEN** OUTEN 2nd byte

The SAICON command enable/disable input/output from the serial audio interface (SAI) pins. Set this bit when the Lch-side serial audio interface (SAI) operation of the SAICH command is stopped (LEN="0") and the Rch-side serial audio interface (SAI) operation is stopped (REN="0"). If either LEN or REN is set to "1", the entered SAICON command is ignored.

OUTEN	Description			
0	Stops SAI OUT pin output (initial value)			
1	Start SAI_OUT pin output			

INEN	Description
0	Invalid SAI IN pin input (initial value)
1	Valid SAI_IN pin input


The FS3 to FS0 select the sampling frequency used for the serial audio interface (SAI).

FS3	FS2	FS1	FS0	Description
0	0	0	0	8 kHz (initial value)
0	0	0	1	16kHz
0	0	1	0	32kHz
0	0	1	1	Setting prohibited
0	1	0	0	11.025kHz
0	1	0	1	22.05kHz
0	1	1	0	44.1kHz
0	1	1	1	Setting prohibited
1	0	0	0	12kHz
1	0	0	1	24kHz
1	0	1	0	48kHz
1	0	1	1	Setting prohibited
1	1	0	0	Setting prohibited
1	1	0	1	Setting prohibited
1	1	1	0	Setting prohibited
1	1	1	1	Setting prohibited

The operating status for each setting of OUT_EN and IN_EN is as follows.

		Playback sound				
		Input		Output		
IN_EN	OUT_EN	SAI_IN pin	Flash memory	SAI_OUT pin	Line amplifier or speaker amplifier	Playback operation
0	0	-	✓	-	/	Playback from flash memory to line amplifier or speaker amplifier.
		-	- 🗸	✓	-	Output from flash memory pin to SAI_OUT pin. 1
0	1				\	Playback from flash memory to line amplifier or speaker amplifier and SAI_OUT pin.
		/	-		\	Playback from SAI_IN pin to line amplifier or speaker amplifier.
1	0		✓	-		Playback the mixing of SAI_IN pin and flash memory to line amplifier or speaker amplifier.
		/	-		Output from SAI_IN pin to SAI_OUT pin.*1	
	1		✓		✓	Output the mixing of SAI_IN pin and flash memory to SAI_OUT pin.*1
1			-	✓		,
					V	Playback the mixing of SAI_IN pin and flash memory to line amplifier or speaker amplifier and SAI_OUT pin.

*1: To output only to the SAI_OUT pin, set DAG1,DAG0 bit of AMODE command to 0 (internal DAC signal input OFF).

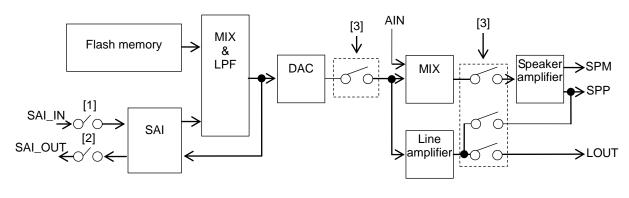

[1]: Controlled by IN_EN

[2] : Controlled by OUT_EN
[3] : Controlled by AMODE command

For the timing of inputting the SAICON command, refer to the "SAICON command timing" in the timing chart.

ML22Q53X

◆ SAITCON command

The SAITCON command sets the serial audio interface (SAI) transmission format.

Use the same format as that of SAIRCON command.

Set this bit when the Lch-side serial audio interface (SAI) operation of the SAICH command is stopped (LEN="0") and the Rch-side serial audio interface (SAI) operation is stopped (REN="0"). If either LEN or REN is set to "1", the entered SAITCON command is ignored.

WSLO specifies the LRCLK polarities when transmitting.

WSLO	Description
0	L channel is transmitted when LRCLK is "L" level, R channel is transmitted when LRCLK is "H" level (initial value)
1	L channel is transmitted when LRCLK is "H" level, R channel is transmitted when LRCLK is "L" level

DLYO specifies whether transmit data has a 1-clock delay or not.

DLYO	Description
0	Serial data delay (initial value)
1	No serial data delay

ISSCKO specifies the BCLK pin as 32fs or 64fs.

•	o speemes t	the Been pin us sens of ones.
	ISSCKO	Description
	0	32 fs (initial value)
	1	64 fs

MSBO specifies MSB first or LSB first in the transmit data.

MSBO	Description
0	MSB first (initial value)
1	LSB first

BWO specifies the bit width for transmission.

BWO	Description
0	16-bit straight PCM (initial value)
1	8-bit straight PCM

For the transmission format, refer to the "SAI (Serial Audio Interface)" in the function description. For the timing of inputting the SAITCON command, refer to "SAITCON command timing" in the timing chart.

ML22Q53X

◆ SAIRCON command

 Command
 1
 1
 1
 0
 0
 1
 0
 0
 1st byte

 BWI
 0
 0
 MSBI
 ISSCKI
 AFOI
 DLYI
 WSLI
 2nd byte

The SAIRCON command sets the serial audio interface (SAI) reception format.

Use the same format as that of SAITCON command.

Set this bit when the Lch-side serial audio interface (SAI) operation of the SAICH command is stopped (LEN="0") and the Rch-side serial audio interface (SAI) operation is stopped (REN="0"). If either LEN or REN is set to "1", the entered SAIRCON command is ignored.

WSLI specifies the LRCLK polarities for reception.

WSLI	Description
0	L channel is received when LRCLK is "L" level, R channel is received when LRCLK is "H" level (initial value)
1	L channel is received when LRCLK is "H" level, R channel is received when LRCLK is "L" level

DLYI specifies whether the received data has a 1-clock delay or not.

DLYI	Description
0	Serial data delay (initial value)
1	No serial data delay

AFOI specifies whether the received data is left-aligned or right-aligned.

AFOI	Description
0	Left-justify (initial value)
1	Right-justify

ISSCKI specifies the BCLK pin as 32fs or 64fs.

ISSCKI	Description
0	32 fs (initial value)
1	64 fs

MSBI specifies MSB first or LSB first in the received data.

	P	
	MSBI	Description
	0	MSB first (initial value)
Ī	1	LSB first

BWI specifies the bit width for reception.

BWI	Description
0	16-bit straight PCM (initial value)
1	8-bit straight PCM

For the reception format, refer to the "SAI (Serial Audio Interface)" in the "Function description". For the timing of inputting the SAIRCON command, refer to the "SAIRCON command timing" in the timing chart.

◆ SAIMOD command

 Command 	1	1	1	0	0	1	0	1	1st byte
	0	0	0	BSWP	0	0	0	0	2nd byte

The SAIMOD command sets the mode of the serial audio interface (SAI).

Set this bit when the Lch-side serial audio interface (SAI) operation of the SAICH command is stopped (LEN="0") and the Rch-side serial audio interface (SAI) operation is stopped (REN="0"). If either LEN or REN is set to "1", the entered SAIMOD command is ignored.

BSWP sets byte-swapping of the order of the data to be transmitted and the data to be received.

BSWP	Description					
0	No byte-swap (16-bit data order: 0bit-7 bit, 8bit-15 bit) (initial value)					
1	With byte swap (16-bit data order: 8bit-15 bit, 0bit-7 bit)					

For the timing of inputting the SAIMOD command, refer to the "SAIMOD command timing" in the timing chart.

ML22Q53X

◆ SCMODE command

 Command 	0	0	0	1	1	RW	0	0	1st byte
	0	0	0	0	0	0	0	0	2nd byte
	1	0	0	0	0	0	AINDET	FBPATH	3rd byte

The SCMODE command sets the basic parameters for playback sound error detection.

	FBPATH	Description						
Ī	0	The speaker output in the LSI is the target of playback sound error detection. (Initial value)						
	1	The FB1 and FB2 pin input is the target of playback sound error detection.						

	AINDET	Description
ſ	0	Playback sound error detection mode. (Initial value)
ſ	1	Disconnection of AIN detection mode.

ML22Q53X

◆ WVDIFTH command


 Command 	0	0	0	1	1	RW	0	0	•
	0	0	0	1	1	1	1	0	2
	WVDIFS	WVDIFS	WVDIFS	WVDIFS	WVDIFD	WVDIFD	WVDIFD	WVDIFD	3
	TH3	TH2	TH1	TH0	TH3	TH2	TH1	TH0	

1st byte 2nd byte 3rd byte


The WVDIFTH command sets WAVE Difference Error thresholds. If the threshold value is exceeded, a WAVE Difference Error occurs.

Set the threshold value in the format of absolute value 18-bit data, which shifts the WVDIFDTH 4-bit data to the left by the WVDIFSTH setting value.


- Command flowchart
- 1-byte command input flow(Applies to PUP, WDTCL, PDWN, START, STOP, SLOOP, CLOOP, and ERRCL commands.)

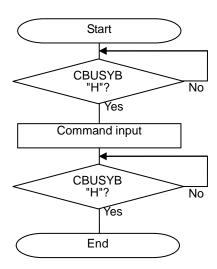


● 2-byte command input flow (Applies to AMODE, AVOL, FADE, FDIRECT, FADR, PLAY, MUON, CVOL, OUTSTAT, SAFE, PAN, and SAICH, SAICON, SAITCON, SAIRCON, SAIMOD commands.)

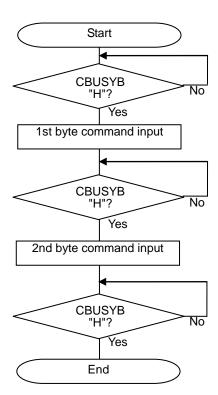


● 3-byte command input flow(Applies to FADR2, PLAY2 and playback sound error detection command group)

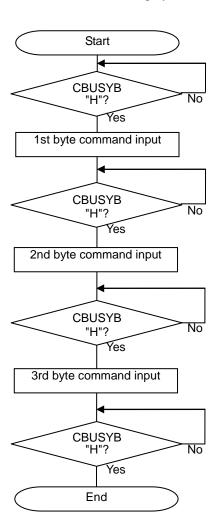


• Read flow (Applies to RDSTAT, RDVER, RDERR commands)

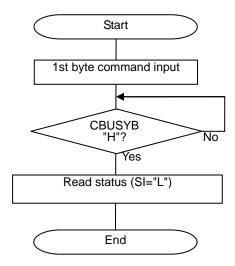


• Read flow (Applies to playback sound error detection command group)

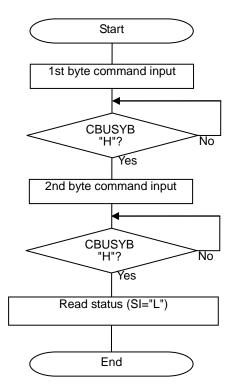


Power-on flow

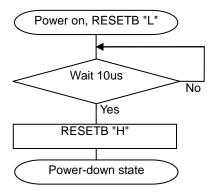


MCU command interface flash memory access migration/cancel

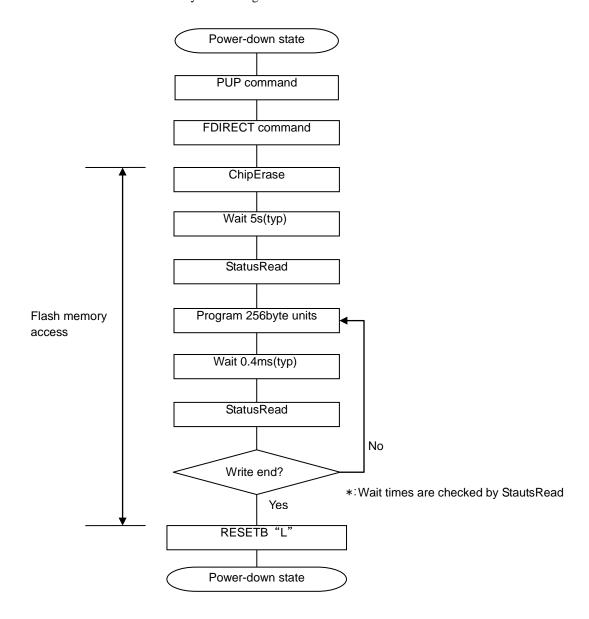


Analog power-up flow

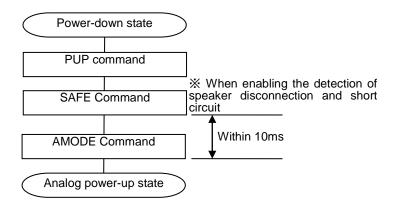


Playback start flow

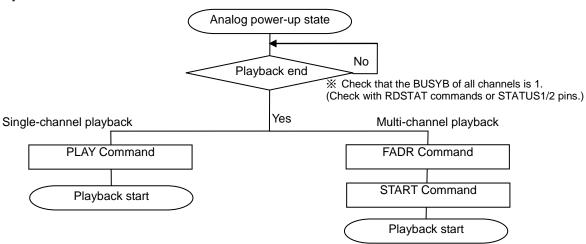


Playback stop flow

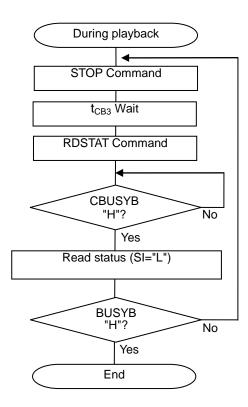


Continuous playback flow

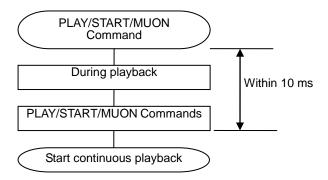


Loop playback start flow

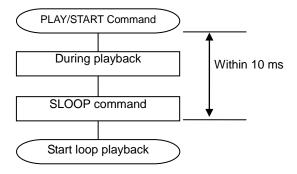


Loop playback stop flow

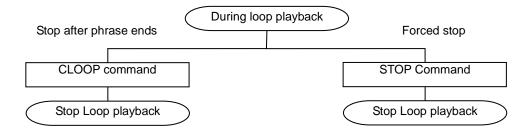


• Power-down flow




Detailed flow of "Power-up → Playback → Power-down"

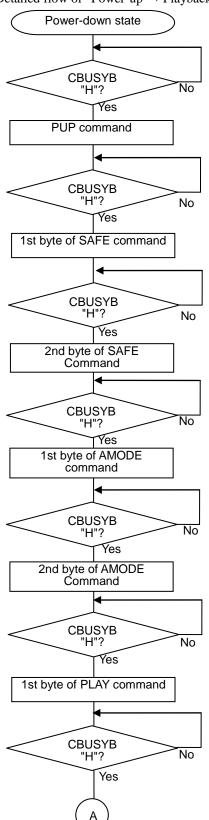


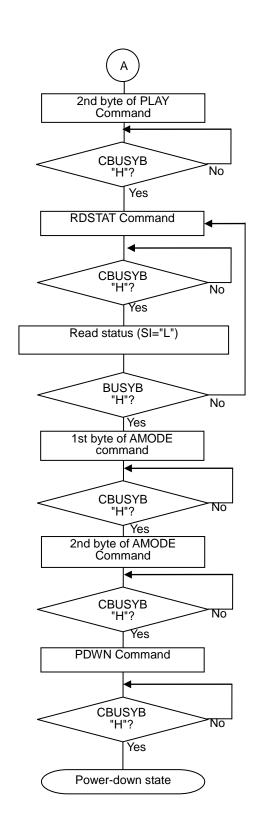


Processing flow for speaker short detection

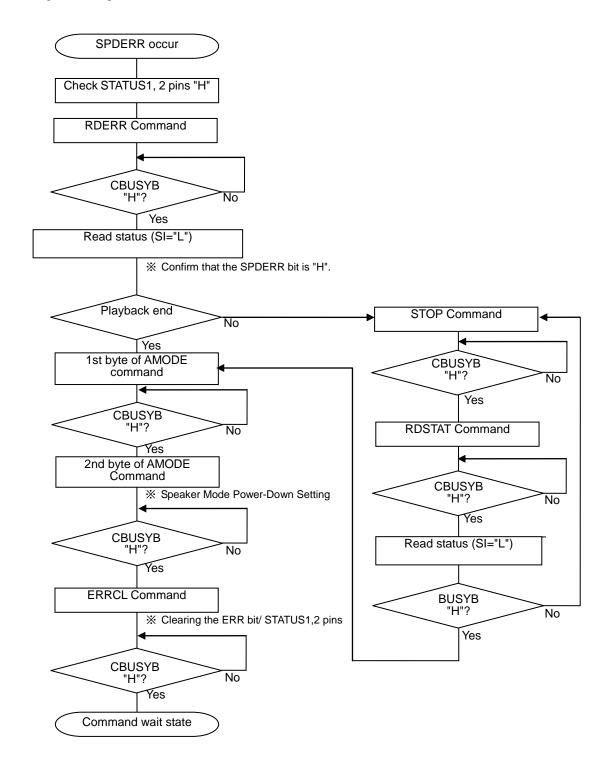


• 1-byte command input flow in two-times input mode

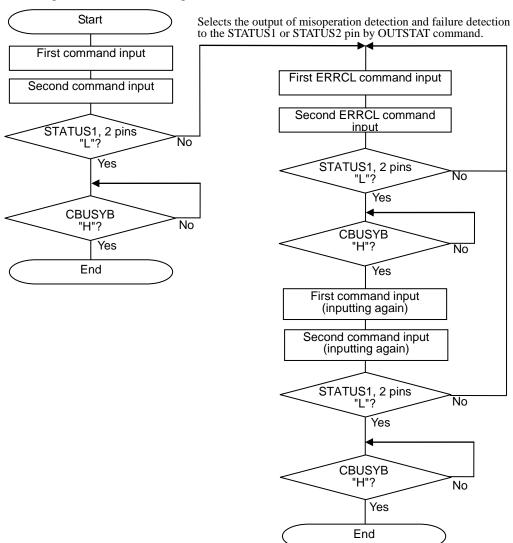


• 2-byte command input flow in two-times input mode

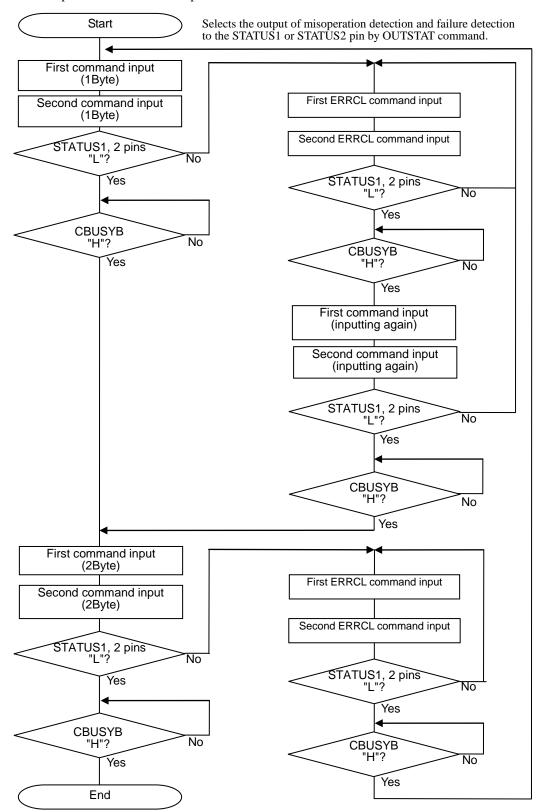


• 3-byte command input flow in two-times input mode

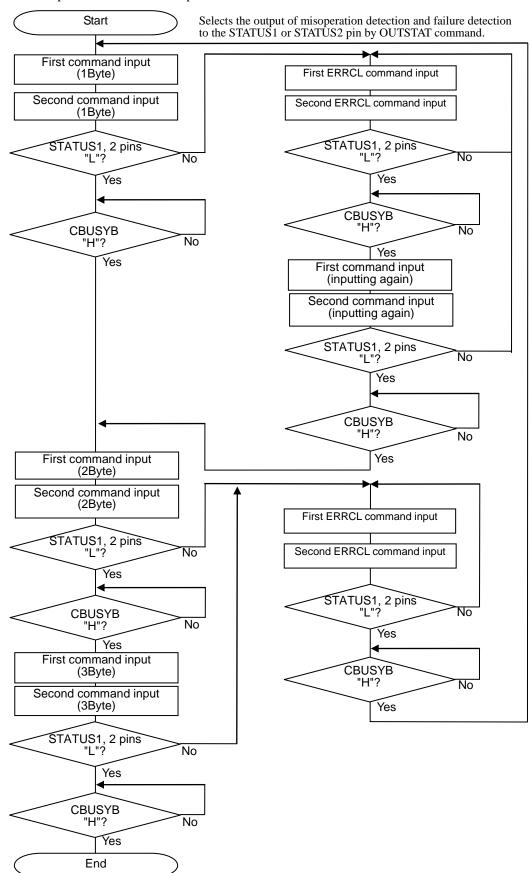

• Read flow in two-times input mode (Applies to RDSTAT and RDVER commands)

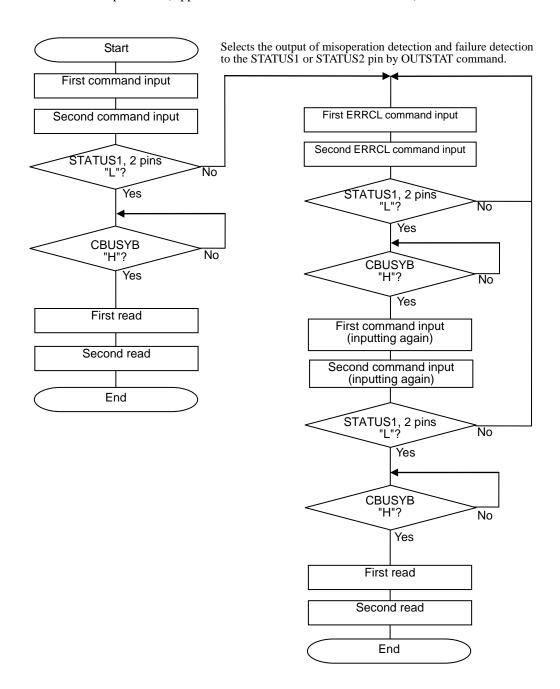


• Read flow in two-times input mode (Applies to RDERR command)

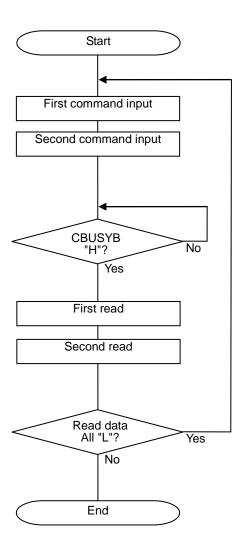


When the OUTSTAT command is used to select the misoperation detection and failure detection outputs and the STATUS1 or STATUS2 pin is "H", if all the read data is "L", the data cannot be read normally. Accordingly, read the data again.


• Read flow in the two-times input mode (applicable to the playback sound error detection command group)

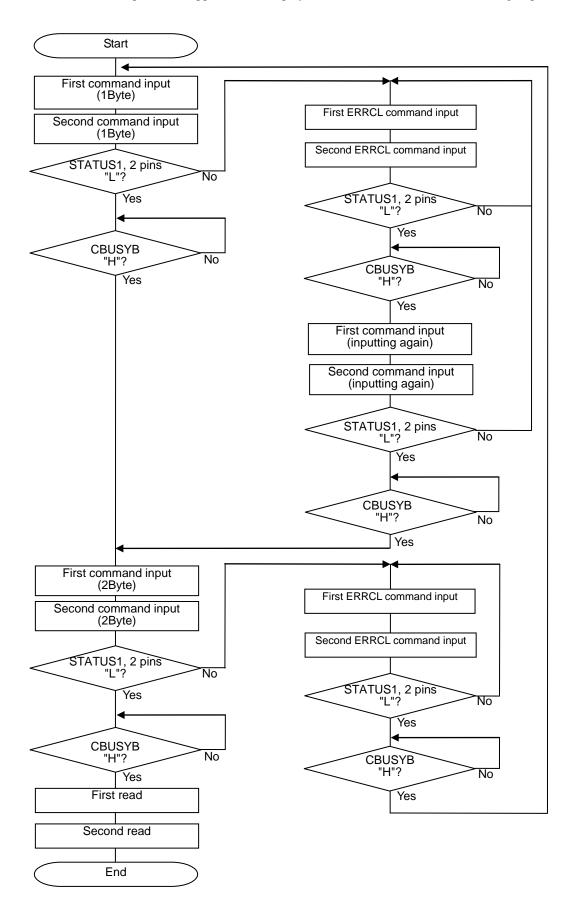


SAI playback start flow

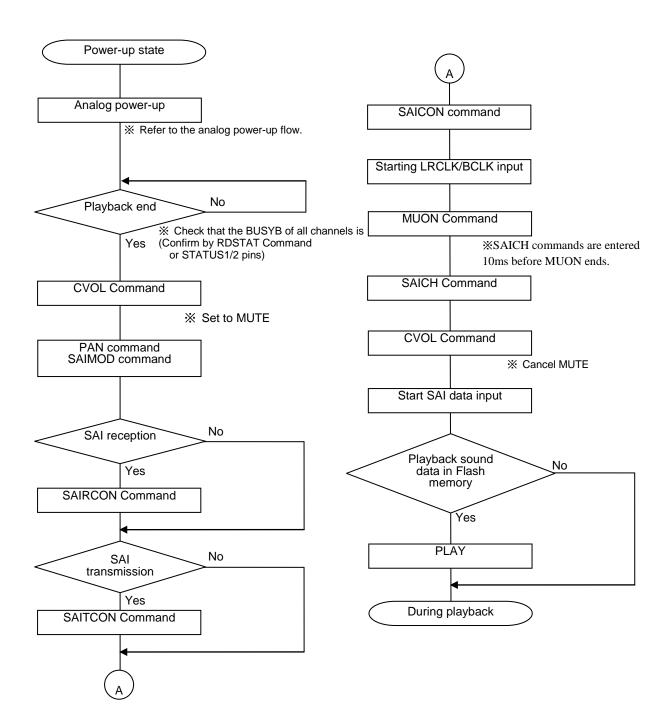


SAI playback stop flow

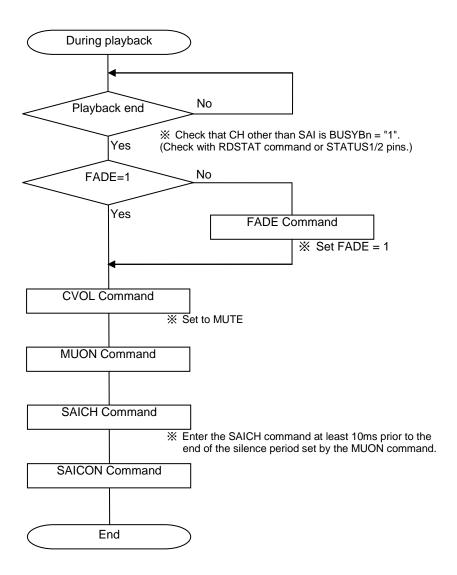


Playback sound error detection start flow

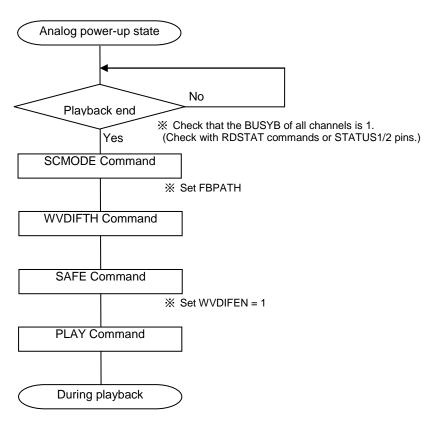


AIN disconnection detection mode setting flow

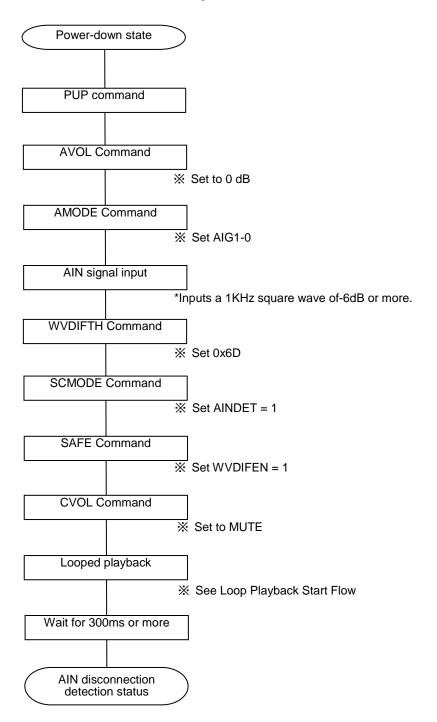

AIN disconnection detection mode stop flow

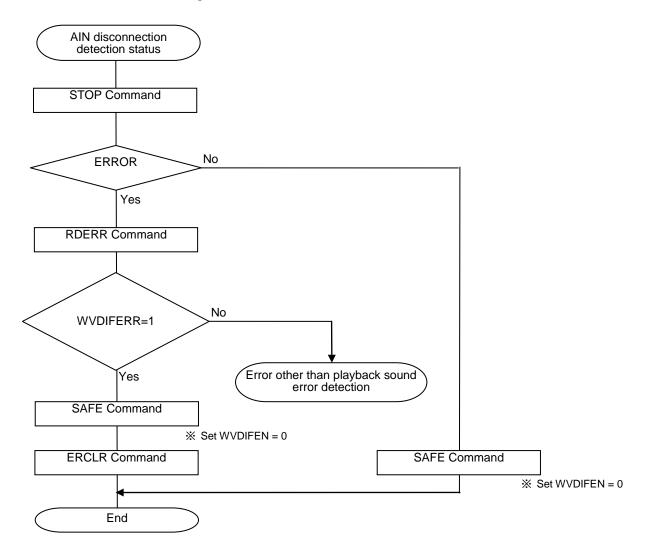

Playback sound error detection stop flow

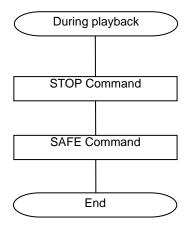

■ Peripheral circuit

Handling of SG Pin

The SG pin is the signal ground for the built-in speaker amplifier. Connect a capacitor between this pin and the SPGND to prevent noises.

Pin	Symbol	Recommended Constant
SG	C9	0.1µF±20%

Handling of V_{DDL} Pins

The V_{DDL} pin is a power supply for the internal circuits. Connect a capacitor across the DGND to prevent noises and power supply fluctuations. Please place it near the LSI on the user board.

Pin	Symbol	Recommended Constant	
V_{DDL}	C8	1μF±20%	

Handling of V_{DDR} Pins

The V_{DDR} pin is a power supply for the internal circuits. Connect a capacitor across the DGND to prevent noises and power supply fluctuations. Please place it near the LSI on the user board.

When using the DV_{DD} power supply voltage of 2.7V to 3.6V, connect to the DV_{DD} power supply.

Pin	Symbol	Recommended Constant	
V_{DDL}	C8	1μF±20%	
V_{DDR}	C11	1μF±20%	

Power wiring

The power supply of this LSI is divided into the following three power supplies.

- Digital power supply (DV _{DD}), digital GND (DGND)
- Spea ker amplifier power supply (SPV_{DD}, SPOV_{DD}), Speaker amplifier GND (SPGND, SPOGND)
- Power supply for flash memory interface (IOV_{DD})

These power supplies can be used independently. However, use it in the condition of SPV_{DD}=SPOV_{DD}≥DV_{DD}.

When using the same power supply, branch it from the root of the power supply for wiring.

Bypass capacitor

To improve noise-resistance, place the bypass capacitor close to the LSI on the user board, and shorten the wiring as short as possible without passing through the via.

Pin	Symbol	Recommended Constant	
SPV _{DD} , SPOV _{DD}	C3	3.3µF±20%	
SPV_{DD} , $SPOV_{DD}$	C4	0.1µF±20%	
DV_DD	C5	3.3µF±20%	
DV_DD	C6	0.1µF±20%	
IOV _{DD}	C7	1μF±20%	


Coupling capacitor

Insert when analog input from AIN pin.

Insert when using LOUT and SPP pins as line amplifier output.


Pin	Symbol	Recommended Constant
AIN	C10	0.1µF±20%
LOUT/SPP	C12	0.1µF±20%

- Application Circuit
- Exclusive use of clock synchronous serial interface and I²C interface. (DV_{DD}=2. 7V to 3. 6V)

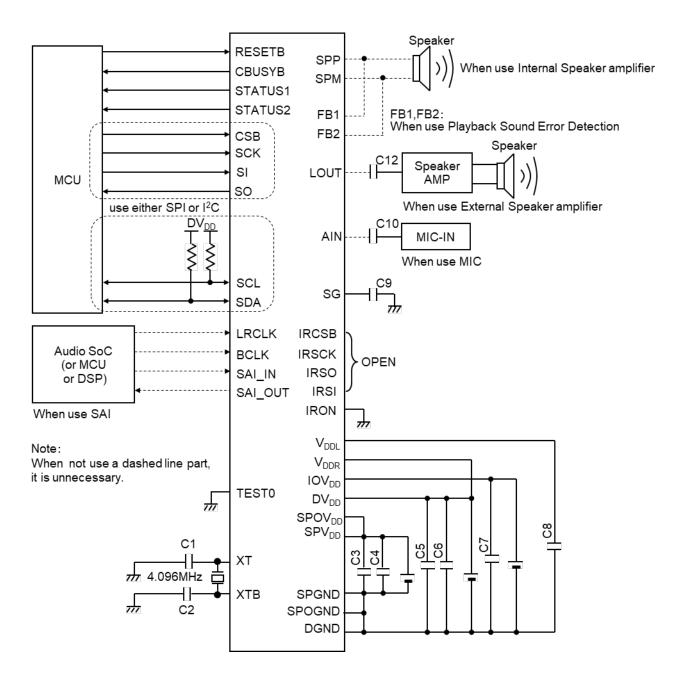

The V_{DDR} handling differs from the case where $DV_{DD}=3.3V$ to 5.5V.

• Exclusive use of clock synchronous serial interface and I²C interface. (DV_{DD}=3. 3V to 5. 5V)

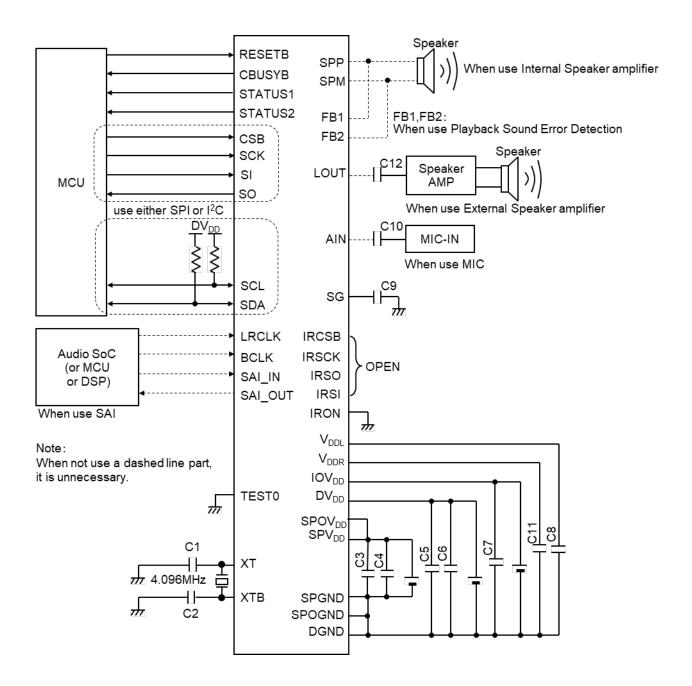

The V_{DDR} handling differs from the case where DV_{DD} =2.7V to 3.6V.

■ Recommended ceramic resonator


Recommended ceramic resonators are shown below.

MURATA Corporation

-			
	Frequency [Hz]	Product Name	Built-in load capacity [pF]
	4M	CSTCR4M00G55B-R0	20
	4.096M	CSTCR4M09G55B-R0	39

■ RC4MHz characteristic

RC4MHz characteristic is as follows.

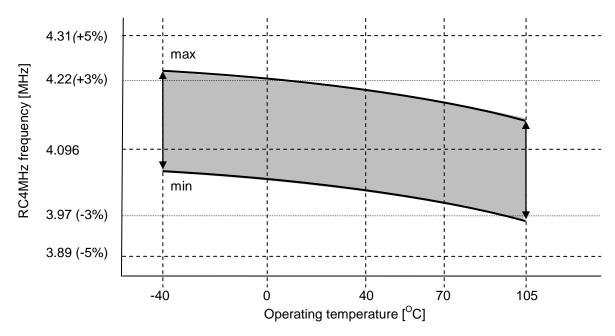

This graph is for reference only and does not guarantee the electrical characteristic.

■ Limitation on the operation time (Playback operating time)

This LSI operating temperature is 105° C (max). But the average ambient temperature at 1W playback (80hm drive) for 10 years in the reliability design is Ta= 65° C. (max (the package heat resistance θ ja= $32.1[^{\circ}$ C/W]))

When this LSI operates 1W playback (80hm drive) consecutively, the product life changes by the package temperature rise by the consumption. This limitation does not matter in the state that a speaker amplifier does not play.

The factors to decide the operation time (playback operating time) are the average ambient temperature (Ta), playback Watts (at the speaker drive mode), the soldering area ratio, and so on. In addition, the limitation on the operation time changes by the heat designs of the board.


■ Package Heat Resistance Value (Reference Value) (θja)

The following table is the package heat resistance value θ ja (reference value). This value changes the condition of the board (size, layer number, and so on).

Board	θја	Ψјс	Ψjb	Condition
JEDEC 4 layers *1 (W/L/t=76.2/114.5/1.6(mm))	32.1[°C/W]	0.70[^O C/W]	12.2[^O C/W]	Air cooling condition:No wind (0m/s)
JEDEC 2 layers ⁻² (W/L/t=76.2/114.5/1.6(mm))	38.3[^O C/W]	0.74[^O C/W]	13.0[^O C/W]	the soldering area ratio*3:100%

^{*1 :} The wiring density : 1st layer(Top) 60% / 2nd layer 100% / 3rd layer 100% / 4th layer(Bottom) 60%.


^{*3:} The soldering area ratio is the ratio that the heat sink area of this LSI and a land pattern on the board are soldered. 100% mean that the heat sink area of this LSI is completely soldered to the land pattern on the board. About the land pattern on the board, be sure to refer to the next clause (Package Dimensions).

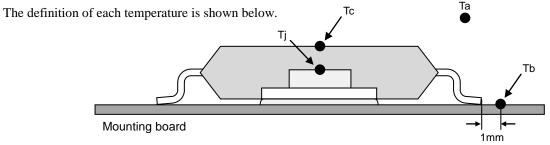

Take measures to dissipate heat on the mounting board so that the maximum junction temperature does not exceed 125 °C.

^{*2 :} The wiring density : 1st layer(Top) 60% / 2nd layer(Bottom) 100%.

- Package Dimensions
- ML22Q53X-NNN/ML22Q53X-xxxTB

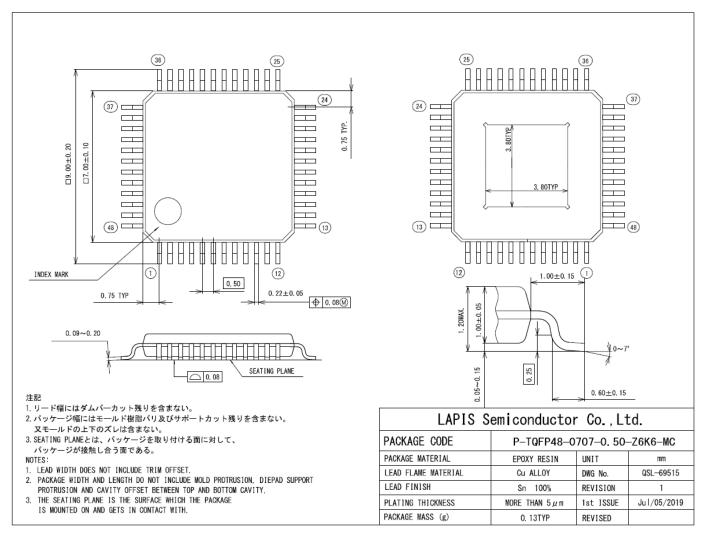


Notes for heat sink type Package

This LSI adopts a heat sink type package to raise a radiation of heat characteristic. Be sure to design the land pattern corresponding to the heat sink area of the LSI on a board, and solder each other. The heat sink area of the LSI solder open or GND on the board.

半田付け部端子存在範囲図

Mounting area for package lead soldering to PC boards

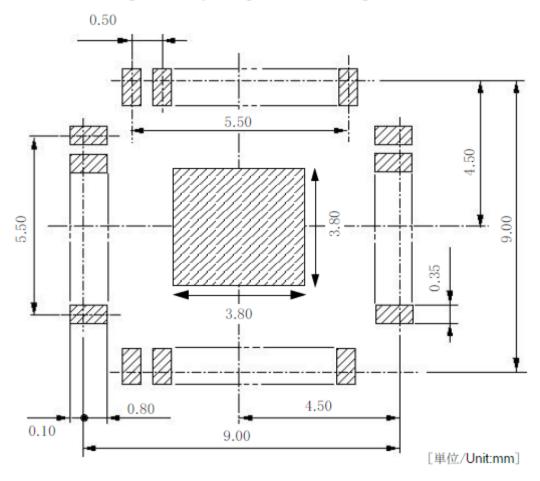

実装基板のフットパターンの設計の際には、実装の容易さ、接続の信頼性、配線の引き回し、 半田ブリッジ発生のないことなどを十分考慮してください。

フットパターンの最適な設計は基板材質、使用する半田ペースト種類、厚み、半田付け方法 などによって変わってきます。従って、本パッケージの端子の存在し得る範囲を「半田付け部 端子存在範囲図」として示しますので、フットパターン設計の参考資料としてください。

When laying out PC boards, it is important to design the foot pattern so as to give consideration to ease of mounting, bonding, positioning of parts, reliability, wiring, and elimination of solder bridges.

The optimum design for the foot pattern varies with the materials of the substrate, the sort and thickness of used soldering paste, and the way of soldering. Therefore when laying out the foot pattern on the PC boards, refer to this figure which mean the mounting area that the package leads are allowable for soldering to PC boards.

Notes for Mounting the Surface Mount Type Package

The surface mount type packages are very susceptible to heat in reflow mounting and humidity absorbed in storage. Therefore, before you perform reflow mounting, contact a ROHM sales office for the product name, package name, pin number, package code and desired mounting conditions (reflow method, temperature and times).

■ Differences from Existing Speech Synthesis LSIs (ML22Q553/ML22594)

Parameter		ML22Q553	ML22594	ML22Q53X	
MCU command interface		Clock synchronous serial	←	Clock synchronous serial I ² C (2 channels)	
Serial Audio Interface ('SΔΙ	(1 channel)	←	Yes	
Clock frequency		4.096MHz (Built-in crystal oscillation circuit)	-	4.096MHz (crystal oscillation circuit/built-in RC oscillation)	
Memory capacity	Built	4Mbits (flash memory)	6Mbits(mask rom)	532: 2Mbits (flash memory) 533: 4Mbits (flash memory) 535: 16Mbits (flash memory)	
	External	-	Up to 128Mbits	-	
Flash memory rewrite f	unction	JTAG interface	-	Flash memory interface MCU command interface (clock synchronous serial)	
	Speech synthesis algorithm	HQ-ADPCM 8-bit non-linear PCM 8bit straight PCM 16-bit straight PCM	←	HQ-ADPCM 4bit ADPCM2 8-bit non-linear PCM 8bit straight PCM 16-bit straight PCM	
Sound function	Sampling frequency (kHz)	6.4/12.8/25.6 8.0/16.0/32.0 12.0/24.0/48.0	←	6.4/12.8/25.6 8.0/16.0/32.0 10.7/21.3 11.025/22.05/44.1 12.0/24.0/48.0	
Godina ranosion	Simultaneous sounding function (Mixing-function)	4 channels	←	←	
	Maximum number of phrases	1024	←	4096	
	Edit ROM function	Yes	←	←	
	Silence insertion function	20ms to 1024ms (4ms step)	←	←	
	Repeat function	Yes	←	←	
Playback sound and SAI mixing functions		-	←	Yes	
Low-pass filter		FIR type interpolation filter	←	←	
D/A converter		Voltage type 16-bit	←	←	
Speaker amplifier (Clas	ss AB)	1. 0W@8Ω (SPV _{DD} =5V)	←	←	
Volume	Digital	32 levels	←	128 levels	
adjustment	Analog	50 levels	←	16 levels	
function	Fade function	-	←	Yes	
External analog input	Clock error	Yes	←	←	
	detection Playback sound	-	←	Yes Yes	
	error detection Power supply	Yes	<u>`</u>	-	
Failure	voltage detection				
detection	Thermal detection Speaker pin ground	Yes	←	←	
functions	fault detection *1	Yes	←	←	
	Speaker pin short detection *1	Yes	←	←	
	Speaker disconnection detection	-	←	Yes	
Power-supply voltage		DV _{DD} =SPV _{DD} =4.5 to 5.5V	DV _{DD} =SPV _{DD} =4.5 to 5.5V IOV _{DD} =2.7V to 5.5V	DV_{DD} =2.7 to 5.5V SPV_{DD} = $SPOV_{DD}$ > DV_{DD} IOV_{DD} =2.7V to 5.5V	
Operating temperature		-40 to 105 ^o C	←	←	
Package		30-pin SSOP	←	48-pin TQFP	
*1 The ground foult		wit detection functions of	on he used when the CDV	is 15V or higher	

^{*1} The ground fault detection and short-circuit detection functions can be used when the SPV_{DD} is 4.5V or higher.

■ Speech LSI Utility Setting Items

Set the following items on the Speech LSI Utility.

Item	Description
Protection code for flash memory access	Set any 8-bit data. Ox69: Flash memory cannot be accessed by the FDIRECT command. Other than 0x69: Accessing the flash memory is enabled when the protection unlock data entered by the FDIRECT command matches the data.
Master clock selection	Select master clock(Source clock oscillation). RC (RC oscillation) Xtal (Crystal or ceramic resonator)
Master clock frequency	Set the master clock frequency to F _{OSC} . • 4.096 : 4.096MHz setting • 4.000 : 4.000MHz setting
Number of phrases used	Select the number of phrases from the following. · 4096 · 3072 · 2048 · 1024
Sound ROM information	Set any 8-bit data. Read by RDVER command.
Class D amplifier output format	Output format selection. • Half-wave mode Full wave mode is not supported.
WDT counter, RST counter WDTERR or RSTERR processing at overflow	Select the processing to be performed when an overflow occurs. • Hold current state • Transition to the state after PUP command input
WDT counter, RST counter WDTERR or RSTERR overflow time	Select the overflow time from the following. • 125ms • 500ms • 2s • 4s

Refer to the Speech LSI Utility User's Manual for more information.

•Recommended operating conditions

[] *1 Be sure to $SPV_{DD}=SPOV_{DD}>=DV_{DD}$.

ML22Q53X

■ Check lists

This check list has notes to frequently overlooked or misunderstood hardware features of the LSI. Check each note listed up chapter by chapter while coding the program or evaluating it using the LSI.

_	\mathbf{F}_{i}	29	tı	11	_

[] *1 Mixing with SAI is limited by the sampling frequency. Refer to the "Function description".
[] *2 Handle V _{DDR} pin in two different ways depending on the voltage range 2.7-3.6V or 3.3-5.5V. Refer to the "Application Circuit".
[] *3 The operating time of the speaker amplifier may be limited depending on the average ambient temperature (Ta) used.
■Pin Description
[] (SCL pin) When using an I^2 C, be sure to insert a pull-up resistor between DV _{DD} pin.
[] (SCL pin) Accessing with clock synchronous serial interface at the same time is prohibited.
[] (SDA pin) When using an I^2 C, be sure to insert a pull-up resistor between DV _{DD} pin.
[] (SDA pin) Accessing with clock synchronous serial interface at the same time is prohibited.
[] (CSB pin) Accessing with I ² C slave interface at the same time is prohibited.
[] (SCK pin) Accessing with I ² C slave interface at the same time is prohibited.
[] (SI pin) Accessing with I ² C slave interface at the same time is prohibited.
[] (SO pin) Accessing with I ² C slave interface at the same time is prohibited.
[] (IRON pin) Set this bit to "L" during playback operation using flash memory.
[] (IRON pin) Set this bit to "H" for onboard rewriting.
[] (IOV _{DD} pin) Connect to DV _{DD} pin even when not using serial flash memory interface.
[] (IOV _{DD} pin) Connect a bypass capacitor between this pin and the DGND pin.
[] (V _{DDR} pin) Connect a capacitor between this pin and DGND pin as close as possible.
[] (V_{DDR} pin) Connect this pin to the DV_{DD} pin when $DV_{DD} = 2.7$ to 3.6V.
[] (XTB pin) When using a resonator, connect it as close as possible.
[] (XTB pin) Leave it open when not in use.
[] (XT pin) To use an external clock, input from this pin. Delete the capacitor when a crystal or ceramic resonator is
connected.
[] (XT pin) When using a resonator, connect it as close as possible.
[] (XT pin) Leave it open when not in use.
[] (DV _{DD} pin) Connect a bypass capacitor between this pin and the DGND pin.
[] (V _{DDL} pin) Connect a capacitor between this pin and DGND pin as close as possible.
[] (SG pin) Connect a capacitor between this pin and SPGND pin.
[] (SPV _{DD} pin) Connect a bypass capacitor between this pin and the SPGND pin.
[] (SPOV _{DD} pin) Set it at the same potential as the SPV _{DD} .
[] (SPOGND pin) Set it at the same potential as the SPGND.[] (RESETB pin) At power-on, input an "L" level to this pin. After the power supply voltage stabilizes, set this pin to an
"H" level.
[] (TEST0 pin) Fix to the DGND.
[] (CBUSYB pin) Be sure to input a command with this pin at an "H" level.
[] (N.C. pin) Unused pin. Leave open.
■Termination of Unused Pins
[] Confirm the recommended termination of unused pins in this chapter.
■Electrical characteristics

■Function description
•I ² C interface (Slave)
[] When I2C is used, be sure to insert a pull-up resistor between SCL and SDA pins and DV _{DD} pin. Command flow when reading data
[] The data to be read is updated by inputting RDSTAT/RDERR/RDVER command. Be sure to enter the RDSTAT/RDERR/RDVER command before reading the internal status.
•SAI(Serial Audio Interface)
[] To use SAI, use AMODE commands to place the SAI into the analog power-up status.
●Mixing function
 ◆Restrictions when using Serial Audio Interface(SAI) [] When the serial audio interface (SAI) is used, there are some limitations to the maximum number of mixing ar playable channels depending on the sampling frequency. [] When mixing at the sampling frequencies of 8.0/16.0/32.0kHz with using Serial Audio Interface(SAI), HQ-ADPCI cannot be used.
 ◆Waveform clamp precautions for mixing [] If the clamp is known to be generated in advance, adjust the volume of each channel by CVOL and PAN commands ◆Different sampling frequency mixing algorithm [] It is not possible to perform channel mixing by a different sampling frequency group. Note that when channel synthes
is performed on a sampling frequency group other than the selected sampling frequency group, playback will be faste or slower.
Misoperation detection and failure detection functions
 ♦SPP pin and SPM pin short detection [] After inputting SAFE command, start the analog power-up operation by AMODE command within 10ms. ♦Flash memory error detection [] If the error bit (ROMERR) is set to "1" after the PUP command and before the PLAY command or START command starts playback, this LSI may have error at the time of start. In such cases, initialize this LSI by moving the LSI to the power-down mode by resetting the LSI by the RESETB pin or by using PDWN command. ♦Detects the stop of clock input from a crystal resonator or ceramic resonator. [] If the RDERR command (first byte) is inputted before the crystal or ceramic resonator stops and switches to Roscillation (about 500μs), the CBUSYB pin will remain "L". Therefore, read the command after the CBUSYB pin becomes "H". [] When the crystal resonator or the ceramic resonator stops and switches to RC oscillation, playback may become abnormal. Therefore, after confirming that the error bit (OSCERR) is "1", enter STOP command to stop playback. ♦Detects disconnection/short circuit of LRCLK. [] *5 The unit does not recover even if a normal LRCLK is input after stopping playback. Enter MUON command the stop playback of the command after inputting a normal LRCLK. ♦Detects disconnection/short circuit of SAI_IN. [] When OUTEN is set to "1" and INEN is set to "0" by the SAICON command, the SAI_IN input is disabled. Therefor set SAIINEN to "0". ♦Mixing number error detection. [] When using the serial audio interface (SAI), the sampling frequency limits the maximum number of mixings are playable channels.
■Timing chart
■Timing chart
•Common
 ◆Power-on timing Start up in the order of DVDD, SPVDD and IOVDD or DVDD, IOVDD and SPVDD. Be sure to input "L" to the RESETB pin before inputting the first command after power-on. Be sure to enter "L" at the RESETB pin when the DVDD is below the (recommended) operating voltage range. ◆Power-off timing Shut down in the order of IOVDD, SPVDD, and DVDD or SPVDD, IOVDD, and DVDD.

[] Shut down each power supply after changing to the power down status with PDWN commands.

Clock	sync	hronous	serial
-------------------------	------	---------	--------

- ◆Change volume timing by AVOL command
 - [] Speaker amplifier volume setting by AVOL commands is valid only when Class AB speaker amplifier is used. When a Class D speaker amplifier is used, the setting value is ignored and +0.0dB is selected.
- ◆Continuous playback timing by PLAY command
 - [] When making continuous playbacks, input the PLAY command for the next phrases within the specified time period (tcm) after the NCR of the corresponding channel changes to "H" level.
 - [] When the playback is not continuous, input the PLAY command for the next phrases after confirming the playback is completed by RDSTAT command and etc.
- ◆Continuous playback timing by START command
 - [] When making continuous playbacks, send the START command for the next phrases within the specified time period (tcm) after the NCR of the corresponding channel changes to "H" level.
 - [] When the playback is not continuous, input the START command for the next phrases after confirming the playback is completed by RDSTAT command, etc.
- ◆Continuous playback timing by MUON command
 - [] When making continuous playbacks, input the MUON/PLAY/START command for the next phrases within 10ms (tcm) after the NCR of the corresponding channel changes to "H" level. When the playback is not continuous, input the MUON/PLAY/START command for the next phrases after confirming the playback is completed by RDSTAT command and etc.
- ◆Repeat playback setting/release timing by SLOOP/CLOOP command
 - [] The SLOOP command is valid only during playback. After the PLAY command is input, input the SLOOP command within the specified period (tcm) after the NCR of the corresponding channel becomes "H" level.
- •I2C Interface (Slave)
 - ◆Change volume timing by AVOL command
 - [] Speaker amplifier volume setting by AVOL commands is valid only when Class AB speaker amplifier is used.

When a Class D speaker amplifier is used, the setting value is ignored and +0.0dB is selected.

- ◆Continuous playback timing by PLAY command
 - [] When making continuous playbacks, input the PLAY command for the next phrases within the specified time period (tcm) after the NCR of the corresponding channel changes to "H" level.
 - [] When the playback is not continuous, input the PLAY command for the next phrases after confirming the playback is completed by RDSTAT command and etc.
- ◆Continuous playback timing by START command
 - [] When making continuous playbacks, send the START command for the next phrases within the specified time period (tcm) after the NCR of the corresponding channel changes to "H" level.
 - [] When the playback is not continuous, input the START command for the next phrases after confirming the playback is completed by RDSTAT command, etc.
- ◆Continuous playback timing by MUON command
 - [] When making continuous playbacks, input the MUON/PLAY/START command for the next phrases within 10ms (tcm) after the NCR of the corresponding channel changes to "H" level. When the playback is not continuous, input the MUON/PLAY/START command for the next phrases after confirming the playback is completed by RDSTAT command and etc.
- ◆Repeat playback setting/release timing by SLOOP/CLOOP command
 - [] The SLOOP command is valid only during playback. After the PLAY command is input, input the SLOOP command within the specified period (tcm) after the NCR of the corresponding channel becomes "H" level.

■Command

- Command list
 - Do not enter command that is not described in this manual. Enter the command with the CBUSYB "H".
- •Description of Command Functions
- ◆PUP command
 - [] Even if two-times input modes are used for the I2C interface, one-time input is used for the slave address input. If the slave address matches, ACK is returned. If the slave address does not match, NACK is returned. The command is input two-times.

 [] To perform power-down under a setting condition that differs from the power-up condition of the analog unit, set the AMODE command to set the power-down condition again. [] To power up the analog part, set the CVOL command to 00h (initial value) and then enter the AMODE command. [] When using analog mixing from the AIN pin, set DAMP = "0" (Class AB amplifier is used). In this LSI, select DAMP = "0" (Class AB amplifier is used). [] Iliput the sound signals to the AIN pin after CBUSYB pin becomes "H" by the AMODE command. [] When using a class D amplifier with speaker amplifier outputs, set it to the power-up state (AENI/AENO= "01") or the power-down state (AENI/AENO= "00"). If DAMP = "1" is selected, do not set AEN1= "1". [] AVS-AV2=1h and 2h are prohibited. [] TIRE FDIRECT command [] The FDIRECT command ocntrols accesses to the flash memory using the clock synchronous serial interface. Input the command after inputting the PUP command. [] Do not enter this command because this command is ignored when this command is entered from the I²C interface. [] To cancel the flash memory access mode, insert a reset (RESETB = "L") and conduct initialization or turn off the power supply. START command [] Be sure to specify one of the channels for the channel setting (CH0-CH3). Do not input it to "0" (all "0") with specifying nothing, fall "it is input with specifying nothing (all "0"), the command is ignored. STOP command [] The STOP command can be input regardless of the status of the NCR during playback operation. However, following the elapse of CBUSYB "L" level output time 3 (ICB3), input the next command again. [] Be sure to specify one of the channels for the channel setting (CH0-CH3). Do not input it to "0" (all "0") with specifying nothing. If it is input with specifying nothing (all "0"), the command is ignored. MUON command [] Be sure to specify one of the c	AMODE command
 [] When using analog mixing from the AIN pin, set DAMP = "0" (Class AB amplifier is used). In this LSI, select DAMF = "0" (Class AB amplifier is used). [] Ihput the sound signals to the AIN pin after CBUSYB pin becomes "H" by the AMODE command. [] When using a Class D amplifier with speaker amplifier outputs, set it to the power-up state (AENI/AEN0="01") or the power-down state (AENI/AEN0="00"). If DAMP = "1" is selected, do not set AEN1="1". [] AVS-AV2=Ih and 21 are prohibited. [FDIRECT command] [] Interpolate Development of the power of the command after inputting the PUP command. [] In one tenter this command because this command is ignored when this command is entered from the I*C interface. [] To cancel the flash memory access mode, insert a reset (RESETB = "L") and conduct initialization or turn off the power supply. START command [] Be sure to specify one of the channels for the channel setting (CH0-CH3). Do not input it to "0" (all "0") with specifying nothing. If it is input with specifying nothing (all "0"), the command is ignored. [] The STOP command can be input regardless of the status of the NCR during playback operation. However, following the elapse of CBUSYB TL" (bet output time 3 (tCB3), input the next command after confirming that the BUSYB signal becomes "H". If the BUSYB signal becomes "H". If the BUSYB signal becomes "H" is the silence setting (MT-M0) to 04 hor more (tmu>=20ms). [] Be sure to specify one of the channels for the channel setting (CH0-CH3). Do not input it to "0" (all "0") with specifying nothing. If it is input with specifying nothing (all "0"), the command is ignored. MUON command [] Be sure to specify one of the channels for the channel setting (CH0-CH3). Do not input	AMODE command to set the power-down condition again.
[] Ilput the sound signals to the AIN pin after CBUSYB pin becomes "H" by the AMODE command. [] When using a Class D amplifier with speaker amplifier outputs, set it to the power-up state (AENI/AENO="01") or the power-down state (AENI/AENO="00"). If DAMP = "1" is selected, do not set AEN1="1". AVOL command [] AVS-AV2=Ih and 2h are prohibited. FDIRECT command controls accesses to the flash memory using the clock synchronous serial interface. Input the command after inputting the PUP command. [] Do not enter this command because this command is ignored when this command is entered from the I ² C interface. [] To cancel the flash memory access mode, insert a reset (RESETB = "L") and conduct initialization or turn off the power supply. START command [] Be sure to specify one of the channels for the channel setting (CHO-CH3). Do not input it to "0" (all "0") with specifying nothing. If it is input with specifying nothing (all "0"), the command is ignored. STOP command STOP command can be input regardless of the status of the NCR during playback operation. However, following the elapse of CBUSYB "L" level output time 3 (tCB3), input the next command after confirming that the BUSYB signal becomes "H". If the BUSYB signal does not become "H", enter the STOP command again. [] Be sure to specify one of the channels for the channel setting (CHO-CH3). Do not input it to "0" (all "0") with specifying nothing. If it is input with specifying nothing (all "0"), the command is ignored. MUON command [] Set the silence setting (M7-M0) to 04h or more (tmu>=20ms). [] Be sure to specify one of the channels for the channel setting (CHO-CH3). Do not input it to "0" (all "0") with specifying nothing. If it is input with specifying nothing (all "0"), the command is ignored. SLOOP command [] Be sure to specify one of the channels for the channel setting (CHO-CH3). Do not input it to "0" (all "0") with specifying nothing. If it is input with specifying nothing (all "0"), the command is ignored. CLOOP command [] Be sure to spe	[] When using analog mixing from the AIN pin, set DAMP = "0" (Class AB amplifier is used). In this LSI, select DAMF
[] When using a Class D amplifier with speaker amplifier outputs, set it to the power-up state (AEN1/AEN0="01") or the power-down state (AEN1/AEN0="00"). If DAMP = "1" is selected, do not set AEN1="1". AVOL command [] AV5-AV2=1h and 2h are prohibited. FDIRECT command [] The FDIRECT command controls accesses to the flash memory using the clock synchronous serial interface. Input the command after inputting the PUP command. [] Do not enter this command because this command is ignored when this command is entered from the I²C interface. [] To cancel the flash memory access mode, insert a reset (RESETB = "L") and conduct initialization or turn off the power supply. START command [] Be sure to specify one of the channels for the channel setting (CH0-CH3). Do not input it to "0" (all "0") with specifying nothing. If it is input with specifying nothing (all "0"), the command is ignored. STOP command [] The STOP command can be input regardless of the status of the NCR during playback operation. However, following the clapse of CBUSYB "L" level output time 3 (tCB3), input the next command after confirming that the BUSYB signal bocomes ""L". If the BUSYB signal does not become ""L", enter the STOP command again. [] Be sure to specify one of the channels for the channel setting (CH0-CH3). Do not input it to "0" (all "0") with specifying nothing. If it is input with specifying nothing (all "0"), the command is ignored. MUON command [] Set the silence setting (M7-M0) to 04h or more (tmu>=20ms). [] Be sure to specify one of the channels for the channel setting (CH0-CH3). Do not input it to "0" (all "0") with specifying nothing. If it is input with specifying nothing (all "0"), the command is ignored. SLOOP command [] Set the silence setting (M7-M0) to 04h or more (tmu>=20ms). [] Be sure to specify one of the channels for the channel setting (CH0-CH3). Do not input it to "0" (all "0") with specifying nothing. If it is input with specifying nothing (all "0"), the command is ignored. CLOOP command [] Be s	
AVOL command [] AVS-AV2=1h and 2h are prohibited. [] AVS-AV2=1h and 2h are prohibited. [] AVS-AV2=1h and 2h are prohibited. [] The FDIRECT command [] Do not enter this command controls accesses to the flash memory using the clock synchronous serial interface. Input the command after inputting the PUP command. [] Do not enter this command because this command is ignored when this command is entered from the I²C interface. In the command after inputting the PUP command. [] Do not enter this command because this command is ignored when this command is entered from the I²C interface. In To cancel the flash memory access mode, insert a reset (RESETB = "L") and conduct initialization or turn off the power supply. START command [] Be sure to specify one of the channels for the channel setting (CH0-CH3). Do not input it to "0" (all "0") with specifying nothing. If it is input with specifying nothing (all "0"), the command is ignored. STOP command [] The STOP command can be input regardless of the status of the NCR during playback operation. However, following the elapse of CBUSYB "L" level output time 3 (tCB3), input the next command after confirming that the BUSYB signal becomes "H". Fit the BUSYB signal does not become "H". Finettre the STOP command again. [] Be sure to specify one of the channels for the channel setting (CH0-CH3). Do not input it to "0" (all "0") with specifying nothing. If it is input with specifying nothing (all "0"), the command is ignored. MUON command [] Set the silence setting (M7-M0) to 04h or more (tmu>=20ms). [] Be sure to specify one of the channels for the channel setting (CH0-CH3). Do not input it to "0" (all "0") with specifying nothing. If it is input with specifying nothing (all "0"), the command is ignored. SLOOP command [] Be sure to specify one of the channels for the channel setting (CH0-CH3). Do not input it to "0" (all "0") with specifying nothing. If it is input with specifying nothing (all "0"), the command is ignored. COOLOP command [] Be sure to specify o	
[] AVS-AV2=1h and 2h are prohibited. FDIRECT command [] The FDIRECT command controls accesses to the flash memory using the clock synchronous serial interface. Input the command after inputting the PUP command. [] Do not enter this command because this command is ignored when this command is entered from the 1²C interface. [] To cancel the flash memory access mode, insert a reset (RESETB = "L") and conduct initialization or turn off the power supply. START command [] Be sure to specify one of the channels for the channel setting (CH0-CH3). Do not input it to "0" (all "0") with specifying nothing. If it is input with specifying nothing (all "0"), the command is ignored. STOP command [] The STOP command can be input regardless of the status of the NCR during playback operation. However, following the elapse of CBUSYB "L" level output time 3 (tCB3), input the next command after confirming that the BUSYB signal becomes "H". If the BUSYB signal does not become "H", enter the STOP command again. [] Be sure to specify one of the channels for the channel setting (CH0-CH3). Do not input it to "0" (all "0") with specifying nothing. If it is input with specifying nothing (all "0"), the command is ignored. MUON command [] Set the silence setting (M7-M0) to 04h or more (tmu>=20ms). [] Be sure to specify one of the channels for the channel setting (CH0-CH3). Do not input it to "0" (all "0") with specifying nothing. If it is input with specifying nothing (all "0"), the command is ignored. SLOOP command [] Be sure to specify one of the channels for the channel setting (CH0-CH3). Do not input it to "0" (all "0") with specifying nothing. If it is input with specifying nothing (all "0"), the command is ignored. SLOOP command [] Be sure to specify one of the channels for the channel setting (CH0-CH3). Do not input it to "0" (all "0") with specifying nothing. If it is input with specifying nothing (all "0"), the command is ignored. CLOOP command [] Be sure to specify one of the channels for the channe	power-down state (AEN1/AEN0= "00"). If DAMP = "1" is selected, do not set AEN1= "1".
FIDIRECT command [The FDIRECT command controls accesses to the flash memory using the clock synchronous serial interface. Input the command after inputting the PUP command. [Do not enter this command because this command is ignored when this command is entered from the I ² C interface. [To cancel the flash memory access mode, insert a reset (RESETB = "L") and conduct initialization or turn off the power supply. START command [] Be sure to specify one of the channels for the channel setting (CH0-CH3). Do not input it to "0" (all "0") with specifying nothing. If it is input with specifying nothing (all "0"), the command is ignored. STOP command [] The STOP command can be input regardless of the status of the NCR during playback operation. However, following the elapse of CBUSYB "L" level output time 3 (tCB3), input the next command after confirming that the BUSYB signal becomes "H". If the BUSYB signal does not become "H", enter the STOP command again. [] Be sure to specify one of the channels for the channel setting (CH0-CH3). Do not input it to "0" (all "0") with specifying nothing. If it is input with specifying nothing (all "0"), the command is ignored. MUON command [] Be sure to specify one of the channels for the channel setting (CH0-CH3). Do not input it to "0" (all "0") with specifying nothing. If it is input with specifying nothing (all "0"), the command is ignored. SLOOP command [] Be sure to specify one of the channels for the channel setting (CH0-CH3). Do not input it to "0" (all "0") with specifying nothing. If it is input with specifying nothing (all "0"), the command is ignored. CLOOP command [] Be sure to specify one of the channels for the channel setting (CH0-CH3). Do not input it to "0" (all "0") with specifying nothing. If it is input with specifying nothing (all "0"), the command is ignored. CLOOP command [] Be sure to specify one of the channels for the channel setting (CH0-CH3). Do not input it to "0" (all "0") with specifying nothing. If it is input with specifyin	
[] The FDIRECT command controls accesses to the flash memory using the clock synchronous serial interface. Input the command after inputting the PUP command. [] Do not enter this command because this command is ignored when this command is entered from the I²C interface. [] To cancel the flash memory access mode, insert a reset (RESETB = "L") and conduct initialization or turn off the power supply. START command [] Be sure to specify one of the channels for the channel setting (CH0-CH3). Do not input it to "0" (all "0") with specifying nothing. If it is input with specifying nothing (all "0"), the command is ignored. STOP command [] The STOP command can be input regardless of the status of the NCR during playback operation. However, following the clapse of CBUSYB "L" level output time 3 (tCB3), input the next command after confirming that the BUSYB signal becomes "H". If the BUSYB signal does not become "H", enter the STOP command again. [] Be sure to specify one of the channels for the channel setting (CH0-CH3). Do not input it to "0" (all "0") with specifying nothing. If it is input with specifying nothing (all "0"), the command is ignored. MUON command [] Set the silence setting (M7-M0) to 04h or more (tmu>=20ms). [] Be sure to specify one of the channels for the channel setting (CH0-CH3). Do not input it to "0" (all "0") with specifying nothing. If it is input with specifying nothing (all "0"), the command is ignored. SLOOP command [] Be sure to specify one of the channels for the channel setting (CH0-CH3). Do not input it to "0" (all "0") with specifying nothing. If it is input with specifying nothing (all "0"), the command is ignored. CLOOP command [] Be sure to specify one of the channels for the channel setting (CH0-CH3). Do not input it to "0" (all "0") with specifying nothing. If it is input with specifying nothing (all "0"), the command is ignored. CLOOP command [] Be sure to specify one of the channels for the channel setting (CH0-CH3). When multiple channels are specified, the volu	
command after inputting the PUP command. [] Do not enter this command because this command is ignored when this command is entered from the I ² C interface. [] To cancel the flash memory access mode, insert a reset (RESETB = "L") and conduct initialization or turn off the power supply. START command [] Be sure to specify one of the channels for the channel setting (CH0-CH3). Do not input it to "0" (all "0") with specifying nothing. If it is input with specifying nothing (all "0"), the command is ignored. STOP command [] The STOP command can be input regardless of the status of the NCR during playback operation. However, following the elapse of CBUSYB "L" level output time 3 (tCB3), input the next command after confirming that the BUSYB signal becomes "H". If the BUSYB signal does not become "H", enter the STOP command again. [] Be sure to specify one of the channels for the channel setting (CH0-CH3). Do not input it to "0" (all "0") with specifying nothing. If it is input with specifying nothing (all "0"), the command is ignored. MUON command [] Be sure to specify one of the channels for the channel setting (CH0-CH3). Do not input it to "0" (all "0") with specifying nothing. If it is input with specifying nothing (all "0"), the command is ignored. SLOOP command [] Be sure to specify one of the channels for the channel setting (CH0-CH3). Do not input it to "0" (all "0") with specifying nothing. If it is input with specifying nothing (all "0"), the command is ignored. CLOOP command [] Be sure to specify one of the channels for the channel setting (CH0-CH3). Do not input it to "0" (all "0") with specifying nothing. If it is input with specifying nothing (all "0"), the command is ignored. CLOOP command [] Be sure to specify one of the channels for the channel setting (CH0-CH3). When multiple channels are specified, the volume of the specify one of the channels for the channel setting (CH0-CH3). When multiple channels are specified, the volume of the specify one of the channels for the channel setting	
[] To cancel the flash memory access mode, insert a reset (RESETB = "L") and conduct initialization or turn off the power supply. START command [] Be sure to specify one of the channels for the channel setting (CH0-CH3). Do not input it to "0" (all "0") with specifying nothing. If it is input with specifying nothing (all "0"), the command is ignored. STOP command [] The STOP command can be input regardless of the status of the NCR during playback operation. However, following the elapse of CBUSYB "L" level output time 3 (tCB3), input the next command after confirming that the BUSYB signal becomes "H". If the BUSYB signal does not become "H", enter the STOP command again. [] Be sure to specify one of the channels for the channel setting (CH0-CH3). Do not input it to "0" (all "0") with specifying nothing. If it is input with specifying nothing (all "0"), the command is ignored. MUON command [] Set the silence setting (M7-M0) to 04h or more (tmu>=20ms). [] Be sure to specify one of the channels for the channel setting (CH0-CH3). Do not input it to "0" (all "0") with specifying nothing. If it is input with specifying nothing (all "0"), the command is ignored. SLOOP command [] Be sure to specify one of the channels for the channel setting (CH0-CH3). Do not input it to "0" (all "0") with specifying nothing. If it is input with specifying nothing (all "0"), the command is ignored. CVOL command [] Be sure to specify one of the channels for the channel setting (CH0-CH3). Do not input it to "0" (all "0") with specifying nothing. If it is input with specifying nothing (all "0"), the command is ignored. CVOL command [] Be sure to specify one of the channels for the channel setting (CH0-CH3). When multiple channels are specified, the volume of the specified channels is set. Do not input it to "0" (all "0") with specifying nothing. If it is input with specifying nothing (all "0"), the command is ignored. RDSTAT command [] When reading the status of the second byte after command input, set the SI pin to "L"	command after inputting the PUP command.
START command [] Be sure to specify one of the channels for the channel setting (CH0-CH3). Do not input it to "0" (all "0") with specifying nothing. If it is input with specifying nothing (all "0"), the command is ignored. STOP command [] The STOP command can be input regardless of the status of the NCR during playback operation. However, following the elapse of CBUSYB "L" level output time 3 (tCB3), input the next command after confirming that the BUSYB signal becomes "H". If the BUSYB signal does not become "H", enter the STOP command again. [] Be sure to specify one of the channels for the channel setting (CH0-CH3). Do not input it to "0" (all "0") with specifying nothing. If it is input with specifying nothing (all "0"), the command is ignored. MUON command [] Set the silence setting (M7-M0) to 04h or more (tmu>=20ms). [] Be sure to specify one of the channels for the channel setting (CH0-CH3). Do not input it to "0" (all "0") with specifying nothing. If it is input with specifying nothing (all "0"), the command is ignored. SLOOP command [] Be sure to specify one of the channels for the channel setting (CH0-CH3). Do not input it to "0" (all "0") with specifying nothing. If it is input with specifying nothing (all "0"), the command is ignored. CLOOP command [] Be sure to specify one of the channels for the channel setting (CH0-CH3). Do not input it to "0" (all "0") with specifying nothing. If it is input with specifying nothing (all "0"), the command is ignored. CLOOP command [] Be sure to specify one of the channels for the channel setting (CH0-CH3). Do not input it to "0" (all "0") with specifying nothing. If it is input with specifying nothing (all "0"), the command is ignored. CVOL command [] Be sure to specify one of the channels for the channel setting (CH0-CH3). When multiple channels are specified, the volume of the specified channels is set. Do not input it to "0" (all "0") with specifying nothing. If it is input with specifying nothing (all "0"), the command [] When reading the sta	
 [] Be sure to specify one of the channels for the channel setting (CH0-CH3). Do not input it to "0" (all "0") with specifying nothing. If it is input with specifying nothing (all "0"), the command is ignored. STOP command [] The STOP command can be input regardless of the status of the NCR during playback operation. However, following the elapse of CBUSYB "L" level output time 3 (tCB3), input the next command after confirming that the BUSYB signal becomes "H". If the BUSYB signal does not become "H", enter the STOP command again. [] Be sure to specify one of the channels for the channel setting (CH0-CH3). Do not input it to "0" (all "0") with specifying nothing. If it is input with specifying nothing (all "0"), the command is ignored. [] Set the silence setting (M7-M0) to 04h or more (tmu>=20ms). [] Be sure to specify one of the channels for the channel setting (CH0-CH3). Do not input it to "0" (all "0") with specifying nothing. If it is input with specifying nothing (all "0"), the command is ignored. [] Be sure to specify one of the channels for the channel setting (CH0-CH3). Do not input it to "0" (all "0") with specifying nothing. If it is input with specifying nothing (all "0"), the command is ignored. [] Be sure to specify one of the channels for the channel setting (CH0-CH3). Do not input it to "0" (all "0") with specifying nothing. If it is input with specifying nothing (all "0"), the command is ignored. [] Be sure to specify one of the channels for the channel setting (CH0-CH3). Do not input it to "0" (all "0") with specifying nothing. If it is input with specifying nothing (all "0"), the command is ignored. [] When reading the status of the second byte after command input, set the SI pin to "L". [] RDSTAT command [] When reading the status of the second byte after command input, set the SI pin to "L". [] RDSTAT command [] When reading the status of the second byte a	power supply.
specifying nothing. If it is input with specifying nothing (all "0"), the command is ignored. STOP command [] The STOP command can be input regardless of the status of the NCR during playback operation. However, following the elapse of CBUSYB "L" level output time 3 (tCB3), input the next command after confirming that the BUSYB signal becomes "H". If the BUSYB signal does not become "H", enter the STOP command again. [] Be sure to specify one of the channels for the channel setting (CH0-CH3). Do not input it to "0" (all "0") with specifying nothing. If it is input with specifying nothing (all "0"), the command is ignored. MUON command [] Set the silence setting (M7-M0) to 04h or more (tmu>=20ms). [] Be sure to specify one of the channels for the channel setting (CH0-CH3). Do not input it to "0" (all "0") with specifying nothing. If it is input with specifying nothing (all "0"), the command is ignored. SLOOP command [] Be sure to specify one of the channels for the channel setting (CH0-CH3). Do not input it to "0" (all "0") with specifying nothing. If it is input with specifying nothing (all "0"), the command is ignored. CLOOP command [] Be sure to specify one of the channels for the channel setting (CH0-CH3). Do not input it to "0" (all "0") with specifying nothing. If it is input with specifying nothing (all "0"), the command is ignored. CLOOP command [] Be sure to specify one of the channels for the channel setting (CH0-CH3). When multiple channels are specified, the volume of the specified channels is set. Do not input it to "0" (all "0") with specifying nothing. If it is input with specifying nothing (all "0"), the command is ignored. CRDSTAT command [] When reading the status of the second byte after command input, set the SI pin to "L". RDERR command [] When reading the status of the second byte after command input, set the SI pin to "L". RDERR command [] When reading the status of the second byte after command input, set the SI pin to "L". If the outputs of misoperation detection and	START command
 [] The STOP command can be input regardless of the status of the NCR during playback operation. However, following the elapse of CBUSYB "L" level output time 3 (tCB3), input the next command after confirming that the BUSYB signal becomes "H". If the BUSYB signal does not become "H", enter the STOP command again. [] Be sure to specify one of the channels for the channel setting (CH0-CH3). Do not input it to "0" (all "0") with specifying nothing. If it is input with specifying nothing (all "0"), the command is ignored. [] Be sure to specify one of the channels for the channel setting (CH0-CH3). Do not input it to "0" (all "0") with specifying nothing. If it is input with specifying nothing (all "0"), the command is ignored. [] SE sure to specify one of the channels for the channel setting (CH0-CH3). Do not input it to "0" (all "0") with specifying nothing. If it is input with specifying nothing (all "0"), the command is ignored. [] Be sure to specify one of the channels for the channel setting (CH0-CH3). Do not input it to "0" (all "0") with specifying nothing. If it is input with specifying nothing (all "0"), the command is ignored. [] Be sure to specify one of the channels for the channel setting (CH0-CH3). Do not input it to "0" (all "0") with specifying nothing. If it is input with specifying nothing (all "0"), the command is ignored. [] Be sure to specify one of the channels for the channel setting (CH0-CH3). When multiple channels are specified, the volume of the specified channels is set. Do not input it to "0" (all "0") with specifying nothing. If it is input with specifying nothing (all "0"), the command is ignored. [] When reading the status of the second byte after command input, set the SI pin to "L". [RDVER command [] When reading the status of the second byte after command input, set the SI pin to "L". [] When reading the status of the second byte after command input, set the SI pin to "L". 	specifying nothing. If it is input with specifying nothing (all "0"), the command is ignored.
the elapse of CBUSYB "L" level output time 3 (tCB3), input the next command after confirming that the BUSYB signal becomes "H". If the BUSYB signal does not become "H", enter the STOP command again. [] Be sure to specify one of the channels for the channel setting (CH0-CH3). Do not input it to "0" (all "0") with specifying nothing. If it is input with specifying nothing (all "0"), the command is ignored. MUON command [] Set the silence setting (M7-M0) to 04h or more (tmu>=20ms). [] Be sure to specify one of the channels for the channel setting (CH0-CH3). Do not input it to "0" (all "0") with specifying nothing. If it is input with specifying nothing (all "0"), the command is ignored. SLOOP command [] Be sure to specify one of the channels for the channel setting (CH0-CH3). Do not input it to "0" (all "0") with specifying nothing. If it is input with specifying nothing (all "0"), the command is ignored. CLOOP command [] Be sure to specify one of the channels for the channel setting (CH0-CH3). Do not input it to "0" (all "0") with specifying nothing. If it is input with specifying nothing (all "0"), the command is ignored. CVOL command [] Be sure to specify one of the channels for the channel setting (CH0-CH3). When multiple channels are specified, the volume of the specified channels is set. Do not input it to "0" (all "0") with specifying nothing. If it is input with specifying nothing (all "0"), the command is ignored. RDSTAT command [] When reading the status of the second byte after command input, set the SI pin to "L". RDERR command [] When reading the status of the second byte after command input, set the SI pin to "L". RDERR command [] When reading the status of the second byte after command input, set the SI pin to "L". [] If the outputs of misoperation detection and failure detection are selected by OUTSTAT command, and the read data is all "L" even though STATUS1 or STATUS2 pin is "H", the read data cannot be read normally. Be sure to read it again. SAFE command [] The initial value is the op	
specifying nothing. If it is input with specifying nothing (all "0"), the command is ignored. MUON command [] Set the silence setting (M7-M0) to 04h or more (tmu>=20ms). [] Be sure to specify one of the channels for the channel setting (CH0-CH3). Do not input it to "0" (all "0") with specifying nothing. If it is input with specifying nothing (all "0"), the command is ignored. SLOOP command [] Be sure to specify one of the channels for the channel setting (CH0-CH3). Do not input it to "0" (all "0") with specifying nothing. If it is input with specifying nothing (all "0"), the command is ignored. CLOOP command [] Be sure to specify one of the channels for the channel setting (CH0-CH3). Do not input it to "0" (all "0") with specifying nothing. If it is input with specifying nothing (all "0"), the command is ignored. CVOL command [] Be sure to specify one of the channels for the channel setting (CH0-CH3). When multiple channels are specified, the volume of the specified channels is set. Do not input it to "0" (all "0") with specifying nothing. If it is input with specifying nothing (all "0"), the command is ignored. RDSTAT command [] When reading the status of the second byte after command input, set the SI pin to "L". RDVER command [] When reading the status of the second byte after command input, set the SI pin to "L". RDERR command [] When reading the status of the second byte after command input, set the SI pin to "L". RDERR command [] When reading the status of the second byte after command input, set the SI pin to "L". RDERR command [] When reading the status of the second byte after command input, set the SI pin to "L". RDERR command [] If the outputs of misoperation detection and failure detection are selected by OUTSTAT command, and the read data is all "L" even though STATUS1 or STATUS2 pin is "H", the read data cannot be read normally. Be sure to read it again. SAFE command [] The initial value is the operation stop state ("0"). When this bit is set to "1", operation starts.	the elapse of CBUSYB "L" level output time 3 (tCB3), input the next command after confirming that the BUSYE
 [] Set the silence setting (M7-M0) to 04h or more (tmu>=20ms). [] Be sure to specify one of the channels for the channel setting (CH0-CH3). Do not input it to "0" (all "0") with specifying nothing. If it is input with specifying nothing (all "0"), the command is ignored. (SLOOP command) [] Be sure to specify one of the channels for the channel setting (CH0-CH3). Do not input it to "0" (all "0") with specifying nothing. If it is input with specifying nothing (all "0"), the command is ignored. (CLOOP command) [] Be sure to specify one of the channels for the channel setting (CH0-CH3). Do not input it to "0" (all "0") with specifying nothing. If it is input with specifying nothing (all "0"), the command is ignored. (CVOL command) [] Be sure to specify one of the channels for the channel setting (CH0-CH3). When multiple channels are specified, the volume of the specified channels is set. Do not input it to "0" (all "0") with specifying nothing. If it is input with specifying nothing (all "0"), the command is ignored. (RDSTAT commnad) [] When reading the status of the second byte after command input, set the SI pin to "L". (RDVER command) [] When reading the status of the second byte after command input, set the SI pin to "L". (] When reading the status of the second byte after command input, set the SI pin to "L". (] If the outputs of misoperation detection and failure detection are selected by OUTSTAT command, and the read data is all "L" even though STATUS1 or STATUS2 pin is "H", the read data cannot be read normally. Be sure to read it again. () SAFE command [] The initial value is the operation stop state ("0"). When this bit is set to "1", operation starts. 	
[] Be sure to specify one of the channels for the channel setting (CH0-CH3). Do not input it to "0" (all "0") with specifying nothing. If it is input with specifying nothing (all "0"), the command is ignored. SLOOP command [] Be sure to specify one of the channels for the channel setting (CH0-CH3). Do not input it to "0" (all "0") with specifying nothing. If it is input with specifying nothing (all "0"), the command is ignored. CLOOP command [] Be sure to specify one of the channels for the channel setting (CH0-CH3).Do not input it to "0" (all "0") with specifying nothing. If it is input with specifying nothing (all "0"), the command is ignored. CVOL command [] Be sure to specify one of the channels for the channel setting (CH0-CH3). When multiple channels are specified, the volume of the specified channels is set. Do not input it to "0" (all "0") with specifying nothing. If it is input with specifying nothing (all "0"), the command is ignored. PRDSTAT command [] When reading the status of the second byte after command input, set the SI pin to "L". PRDERR command [] When reading the status of the second byte after command input, set the SI pin to "L". PRDERR command [] When reading the status of the second byte after command input, set the SI pin to "L". PRDERR command [] When reading the status of the second byte after command input, set the SI pin to "L". PRDERR command [] When reading the status of the second byte after command input, set the SI pin to "L". PRDERR command [] When reading the status of the second byte after command input, set the SI pin to "L". PRDERR command [] When reading the status of the second byte after command input, set the SI pin to "L". PRDERR command [] When reading the status of the second byte after command input, set the SI pin to "L". PRDERR command [] The intitial value is the operation stop state ("0"). When this bit is set to "1", operation starts.	MUON command
specifying nothing. If it is input with specifying nothing (all "0"), the command is ignored. SLOOP command [] Be sure to specify one of the channels for the channel setting (CH0-CH3). Do not input it to "0" (all "0") with specifying nothing. If it is input with specifying nothing (all "0"), the command is ignored. CLOOP command [] Be sure to specify one of the channels for the channel setting (CH0-CH3). Do not input it to "0" (all "0") with specifying nothing. If it is input with specifying nothing (all "0"), the command is ignored. CVOL command [] Be sure to specify one of the channels for the channel setting (CH0-CH3). When multiple channels are specified, the volume of the specified channels is set. Do not input it to "0" (all "0") with specifying nothing. If it is input with specifying nothing (all "0"), the command is ignored. RDSTAT command [] When reading the status of the second byte after command input, set the SI pin to "L". RDVER command [] When reading the status of the second byte after command input, set the SI pin to "L". RDERR command [] When reading the status of the second byte after command input, set the SI pin to "L". [] If the outputs of misoperation detection and failure detection are selected by OUTSTAT command, and the read data is all "L" even though STATUS1 or STATUS2 pin is "H", the read data cannot be read normally. Be sure to read it again. SAFE command [] The initial value is the operation stop state ("0"). When this bit is set to "1", operation starts.	
 [] Be sure to specify one of the channels for the channel setting (CH0-CH3). Do not input it to "0" (all "0") with specifying nothing. If it is input with specifying nothing (all "0"), the command is ignored. CCLOOP command [] Be sure to specify one of the channels for the channel setting (CH0-CH3).Do not input it to "0" (all "0") with specifying nothing. If it is input with specifying nothing (all "0"), the command is ignored. CCVOL command [] Be sure to specify one of the channels for the channel setting (CH0-CH3). When multiple channels are specified, the volume of the specified channels is set. Do not input it to "0" (all "0") with specifying nothing. If it is input with specifying nothing (all "0"), the command is ignored. PRDSTAT command [] When reading the status of the second byte after command input, set the SI pin to "L". PRDVER command [] When reading the status of the second byte after command input, set the SI pin to "L". PRDERR command [] When reading the status of the second byte after command input, set the SI pin to "L". [] If the outputs of misoperation detection and failure detection are selected by OUTSTAT command, and the read data is all "L" even though STATUS1 or STATUS2 pin is "H", the read data cannot be read normally. Be sure to read it again. PSAFE command [] The initial value is the operation stop state ("0"). When this bit is set to "1", operation starts. 	
specifying nothing. If it is input with specifying nothing (all "0"), the command is ignored. **CLOOP command** [] Be sure to specify one of the channels for the channel setting (CH0-CH3).Do not input it to "0" (all "0") with specifying nothing. If it is input with specifying nothing (all "0"), the command is ignored. **CVOL command** [] Be sure to specify one of the channels for the channel setting (CH0-CH3). When multiple channels are specified, the volume of the specified channels is set. Do not input it to "0" (all "0") with specifying nothing. If it is input with specifying nothing (all "0"), the command is ignored. **RRDSTAT command** [] When reading the status of the second byte after command input, set the SI pin to "L". **RDVER command** [] When reading the status of the second byte after command input, set the SI pin to "L". **RDERR command** [] When reading the status of the second byte after command input, set the SI pin to "L". [] If the outputs of misoperation detection and failure detection are selected by OUTSTAT command, and the read data is all "L" even though STATUS1 or STATUS2 pin is "H", the read data cannot be read normally. Be sure to read it again. **SAFE command** [] The initial value is the operation stop state ("0"). When this bit is set to "1", operation starts.	SLOOP command
 Be sure to specify one of the channels for the channel setting (CH0-CH3).Do not input it to "0" (all "0") with specifying nothing. If it is input with specifying nothing (all "0"), the command is ignored. CVOL command Be sure to specify one of the channels for the channel setting (CH0-CH3). When multiple channels are specified, the volume of the specified channels is set. Do not input it to "0" (all "0") with specifying nothing. If it is input with specifying nothing (all "0"), the command is ignored. CRDSTAT commnad When reading the status of the second byte after command input, set the SI pin to "L". CRDERR command When reading the status of the second byte after command input, set the SI pin to "L". CRDERR command When reading the status of the second byte after command input, set the SI pin to "L". If the outputs of misoperation detection and failure detection are selected by OUTSTAT command, and the read data is all "L" even though STATUS1 or STATUS2 pin is "H", the read data cannot be read normally. Be sure to read it again. SAFE command The initial value is the operation stop state ("0"). When this bit is set to "1", operation starts. 	specifying nothing. If it is input with specifying nothing (all "0"), the command is ignored.
specifying nothing. If it is input with specifying nothing (all "0"), the command is ignored. CVOL command [] Be sure to specify one of the channels for the channel setting (CH0-CH3). When multiple channels are specified, the volume of the specified channels is set. Do not input it to "0" (all "0") with specifying nothing. If it is input with specifying nothing (all "0"), the command is ignored. RDSTAT command [] When reading the status of the second byte after command input, set the SI pin to "L". RDVER command [] When reading the status of the second byte after command input, set the SI pin to "L". RDERR command [] When reading the status of the second byte after command input, set the SI pin to "L". [] If the outputs of misoperation detection and failure detection are selected by OUTSTAT command, and the read data is all "L" even though STATUS1 or STATUS2 pin is "H", the read data cannot be read normally. Be sure to read it again. SAFE command [] The initial value is the operation stop state ("0"). When this bit is set to "1", operation starts.	
[] Be sure to specify one of the channels for the channel setting (CH0-CH3). When multiple channels are specified, the volume of the specified channels is set. Do not input it to "0" (all "0") with specifying nothing. If it is input with specifying nothing (all "0"), the command is ignored. PRDSTAT command [] When reading the status of the second byte after command input, set the SI pin to "L". PRDVER command [] When reading the status of the second byte after command input, set the SI pin to "L". PRDERR command [] When reading the status of the second byte after command input, set the SI pin to "L". [] If the outputs of misoperation detection and failure detection are selected by OUTSTAT command, and the read data is all "L" even though STATUS1 or STATUS2 pin is "H", the read data cannot be read normally. Be sure to read it again. PSAFE command [] The initial value is the operation stop state ("0"). When this bit is set to "1", operation starts.	specifying nothing. If it is input with specifying nothing (all "0"), the command is ignored.
volume of the specified channels is set. Do not input it to "0" (all "0") with specifying nothing. If it is input with specifying nothing (all "0"), the command is ignored. RDSTAT commnad [] When reading the status of the second byte after command input, set the SI pin to "L". RDVER command [] When reading the status of the second byte after command input, set the SI pin to "L". RDERR command [] When reading the status of the second byte after command input, set the SI pin to "L". [] If the outputs of misoperation detection and failure detection are selected by OUTSTAT command, and the read data is all "L" even though STATUS1 or STATUS2 pin is "H", the read data cannot be read normally. Be sure to read it again. PSAFE command [] The initial value is the operation stop state ("0"). When this bit is set to "1", operation starts.	
PRDSTAT commnad [] When reading the status of the second byte after command input, set the SI pin to "L". PRDVER command [] When reading the status of the second byte after command input, set the SI pin to "L". PRDERR command [] When reading the status of the second byte after command input, set the SI pin to "L". [] If the outputs of misoperation detection and failure detection are selected by OUTSTAT command, and the read data is all "L" even though STATUS1 or STATUS2 pin is "H", the read data cannot be read normally. Be sure to read it again. PSAFE command [] The initial value is the operation stop state ("0"). When this bit is set to "1", operation starts.	volume of the specified channels is set. Do not input it to "0" (all "0") with specifying nothing. If it is input with
[] When reading the status of the second byte after command input, set the SI pin to "L". PRDVER command [] When reading the status of the second byte after command input, set the SI pin to "L". PRDERR command [] When reading the status of the second byte after command input, set the SI pin to "L". [] If the outputs of misoperation detection and failure detection are selected by OUTSTAT command, and the read data is all "L" even though STATUS1 or STATUS2 pin is "H", the read data cannot be read normally. Be sure to read it again. PSAFE command [] The initial value is the operation stop state ("0"). When this bit is set to "1", operation starts.	
PRDVER command [] When reading the status of the second byte after command input, set the SI pin to "L". PRDERR command [] When reading the status of the second byte after command input, set the SI pin to "L". [] If the outputs of misoperation detection and failure detection are selected by OUTSTAT command, and the read data is all "L" even though STATUS1 or STATUS2 pin is "H", the read data cannot be read normally. Be sure to read it again. PSAFE command [] The initial value is the operation stop state ("0"). When this bit is set to "1", operation starts.	
RDERR command [] When reading the status of the second byte after command input, set the SI pin to "L". [] If the outputs of misoperation detection and failure detection are selected by OUTSTAT command, and the read data is all "L" even though STATUS1 or STATUS2 pin is "H", the read data cannot be read normally. Be sure to read it again. *SAFE command [] The initial value is the operation stop state ("0"). When this bit is set to "1", operation starts.	PRDVER command
 [] When reading the status of the second byte after command input, set the SI pin to "L". [] If the outputs of misoperation detection and failure detection are selected by OUTSTAT command, and the read data is all "L" even though STATUS1 or STATUS2 pin is "H", the read data cannot be read normally. Be sure to read it again. SAFE command [] The initial value is the operation stop state ("0"). When this bit is set to "1", operation starts. 	
 If the outputs of misoperation detection and failure detection are selected by OUTSTAT command, and the read data is all "L" even though STATUS1 or STATUS2 pin is "H", the read data cannot be read normally. Be sure to read it again. SAFE command The initial value is the operation stop state ("0"). When this bit is set to "1", operation starts. 	
again. •SAFE command [] The initial value is the operation stop state ("0"). When this bit is set to "1", operation starts.	[] If the outputs of misoperation detection and failure detection are selected by OUTSTAT command, and the read data is
SAFE command [] The initial value is the operation stop state ("0"). When this bit is set to "1", operation starts.	
[] The initial value is the operation stop state ("0"). When this bit is set to "1", operation starts.	
bit is set to "1".	[] The initial value is the operation stop state ("0"). When this bit is set to "1", operation starts. [] *1 Do not set WDTEN and RSTEN to "1" at the same time. If these bits are set to "1" at the same time, only the RSTEN

◆SAICH command
[] Set these bits when channels other than SAIs are not playing back (BUSYBn is "1").
[] If you want to set LEN="0" and REN="1" with LEN="1" and REN="0", set LEN="0" and REN="1" after setting LEN=REN="0".
[] Start the LRCLK/BCLK input after entering the SAICON command. Subsequently, enter the MUON command and then the SAICH command.
[] After entering the MUON command, enter the SAICH command at least 10ms prior to the end of the silence period set by the MUON command.
[] Use a channel that is not played back by SAICH as the playback channel set by MUON commands. To mix with ROM playback, use a channel for ROM playback.
♦SAICON command
[] Set this bit when the Lch-side serial audio interface (SAI) operation of the SAICH command is stopped (LEN="0") and the Rch-side serial audio interface (SAI) operation is stopped (REN="0"). If either LEN or REN is set to "1", the entered SAICON command is ignored.
◆SAITCON command
[] Use the same format as that of SAIRCON command. Set this bit when the Lch-side serial audio interface (SAI) operation of the SAICH command is stopped (LEN="0") and the Rch-side serial audio interface (SAI) operation is stopped (REN="0"). If either LEN or REN is set to "1", the entered SAITCON command is ignored.
◆SAIRCON command
[] Use the same format as that of SAITCON command. Set this bit when the Lch-side serial audio interface (SAI) operation of the SAICH command is stopped (LEN="0") and the Rch-side serial audio interface (SAI) operation is stopped (REN="0"). If either LEN or REN is set to "1", the entered SAIRCON command is ignored.
♦SAIMOD command
[] Set this bit when the Lch-side serial audio interface (SAI) operation of the SAICH command is stopped (LEN="0") and the Rch-side serial audio interface (SAI) operation is stopped (REN="0"). If either LEN or REN is set to "1", the entered SAIMOD command is ignored.
■Peripheral circuit
●Handling of SG Pin/●Handling of V _{DDL} , V _{DDR} Pins/●Power wiring/●Bypass capacitor/●Coupling capacitor
[] Confirm the recommended values and precautions in this chapter.
■Package Dimensions
[] Confirm "Notes for heat sink type Package" and "Notes for Mounting the Surface Mount Type Package" in this chapter.
■Speech LSI Utility Setting Items
[] Confirm setting items of "Speech LSI Utility" in this chapter.

■ Revision history

Page		ge		
Document No.	Date	Previous edition	Current edition	Description
FEDL22Q53X-01	Apr 24, 2020	-	-	Formal 1st edition.
FEDL22Q53X-02	Jun 23, 2020	2	2	Added "DV _{DD} , SPV _{DD} /SPOV _{DD} and IOV _{DD} can be set independently. (SPV _{DD} =SPOV _{DD} ≥DV _{DD})" to the description of power-supply voltage.
		4	4	
		21	21	Changed description of SCL pin to "be sure to insert a
		172	172	pull-up resistor between DV _{DD} pin."
		173	173	
		12	12	Added "*3" to the standard value of I _{DDO} and I _{DDS} of DC characteristics.
		20	20	Added "Accessing with I ² C slave interface at the same time is prohibited." to Clock Synchronous Serail Interface.
		21	21	Added "Accessing with clock synchronous serial interface at the same time is prohibited." to Clock Synchronous Serail Interface.
		24	24	Added description to SAI(Serial Audio Interface).
		27	27	Added definition of compression rate.
		34	34	Changed description of command error detection. (Not a change in product specifications.)
		38	38	Changed description of watchdog timer overflow detection. (Not a change in product specifications.)
		40	40	Changed description of RST counter overflow detection. (Not a change in product specifications.)
		44	44	Added description of mixing number error detection.
		46	46	Added a method to return from flash memory access mode to normal mode.
		108	108	Changed description of DAMP bit of AMODE command. (Not a change in product specifications.)
		109	109	Changed description of POP bit of AMODE command. (Not a change in product specifications.)
		109	109	Changed description of table of AEN1, AEN0 and POP bit, of AMODE command. (Not a change in product specifications.)
		131	131	Changed description of OSCEN bit of SAFE command. (Not a change in product specifications.)
		163	163	Added attention of voltage setting of SPV _{DD} /SPOV _{DD} and DV _{DD} for power wiring.
		163	163	Added C12 to the coupling capacitor.
		166	166	Changed notation of recommended ceramic resonator. (Not a recommended product change.)

Notes

- 1) The information contained herein is subject to change without notice.
- 2) Although LAPIS Semiconductor is continuously working to improve product reliability and quality, semiconductors can failure and malfunction due to various factors. Therefore, in order to prevent personal injury or fire arising from failure, please take safety measures such as complying with the derating characteristics, implementing redundant and fire prevention designs, and utilizing backups and fail-safe procedures. LAPIS Semiconductor shall have no responsibility for any damages arising out of the use of our Products beyond the rating specified by LAPIS Semiconductor.
- 3) Examples of application circuits, circuit constants and any other information contained herein are provided only to illustrate the standard usage and operations of the Products. The peripheral conditions must be taken into account when designing circuits for mass production.
- 4) The technical information specified herein is intended only to show the typical functions of the Products and examples of application circuits for the Products. No license, expressly or implied, is granted hereby under any intellectual property rights or other rights of LAPIS Semiconductor or any third party with respect to the information contained in this document; therefore LAPIS Semiconductor shall have no responsibility whatsoever for any dispute, concerning such rights owned by third parties, arising out of the use of such technical information.
- 5) The Products are intended for use in general electronic equipment (i.e. AV/OA devices, communication, consumer systems, gaming/entertainment sets) as well as the applications indicated in this document.
- 6) The Products specified in this document are not designed to be radiation tolerant.
- 7) For use of our Products in applications requiring a high degree of reliability (as exemplified below), please contact and consult with a LAPIS Semiconductor representative: transportation equipment (i.e. cars, ships, trains), primary communication equipment, traffic lights, fire/crime prevention, safety equipment, medical systems, servers, solar cells, and power transmission systems.
- 8) Do not use our Products in applications requiring extremely high reliability, such as aerospace equipment, nuclear power control systems, and submarine repeaters.
- 9) LAPIS Semiconductor shall have no responsibility for any damages or injury arising from non-compliance with the recommended usage conditions and specifications contained herein.
- 10) LAPIS Semiconductor has used reasonable care to ensure the accuracy of the information contained in this document. However, LAPIS Semiconductor does not warrant that such information is error-free and LAPIS Semiconductor shall have no responsibility for any damages arising from any inaccuracy or misprint of such information.
- 11) Please use the Products in accordance with any applicable environmental laws and regulations, such as the RoHS Directive. For more details, including RoHS compatibility, please contact a ROHM sales office. LAPIS Semiconductor shall have no responsibility for any damages or losses resulting non-compliance with any applicable laws or regulations.
- 12) When providing our Products and technologies contained in this document to other countries, you must abide by the procedures and provisions stipulated in all applicable export laws and regulations, including without limitation the US Export Administration Regulations and the Foreign Exchange and Foreign Trade Act.
- 13) This document, in part or in whole, may not be reprinted or reproduced without prior consent of LAPIS Semiconductor.

 Copyright 2019-2020 LAPIS Semiconductor Co., Ltd.

LAPIS Semiconductor Co., Ltd.

2-4-8 Shinyokohama, Kouhoku-ku, Yokohama 222-8575, Japan http://www.lapis-semi.com/en/