


STEVAL-STLKT01V1

SensorTile development kit

Data brief

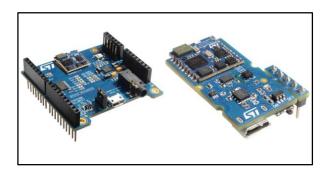

Features

- SensorTile Development Kit for connectable sensor nodes
- Included in kit package:
 - STLCS01V1: SensorTile connectable sensor node
 - STLCX01V1: SensorTile Cradle expansion with USB, audio DAC and Arduino connectors, compatible with STM32-Nucleo
 - STLCR01V1: compact SensorTile Cradle with USB, battery charger, humidity and temperature sensor, SDCard
 - 100 mAh Li-Ion Battery
 - SWD programming cable compatible with ST-Link connector on STM32 Nucleo boards
 - Plastic housing for SensorTile + Cradle + Battery
- Software
 - STSW-STLKT01: SensorTile firmware package that supports sensors raw data streaming via USB and data logging on SDCard. It includes low level drivers for all the on-board devices
 - BLUEMICROSYSTEM2: STM32Cube expansion software package, supporting different algorithms tailored to the on-board sensors

- FP-SNS-ALLMEMS1: STM32 ODE functional pack
- ST BlueMS: iOS and Android demo apps
- BlueST-SDK: iOS and Android SD
- Compatible with STM32 ecosystem through STM32Cube support

Description

STEVAL-STLKT01V1 is the development kit for the SensorTile board (STEVAL-STLCS01V1).

This kit includes all that is needed to remotely sense and measure motion, environmental and acoustical parameters. It is designed to support the prototyping phases of new projects and to dramatically accelerate the startup stages.

1 Boards included in the kit

Figure 1: STLCS01V1 board photo



STLCS01V1 SensorTile component board features

- Very compact module for motion, audio and environmental sensing and Bluetooth low energy connectivity with a complete set of firmware examples
- Supported by the BLUEMICROSYSTEM1 and BLUEMICROSYSTEM2 software expansion package for STM32Cube and the STM32 ODE functional pack FP-SNS-ALLMEMS1
- Mobile connectivity via the ST BlueMS app, available for iOS and Android
- Main components:
 - STM32L476 32-bit ultra-low-power MCU with CortexM4F
 - LSM6DSM iNEMO inertial module: 3D accelerometer and 3D gyroscope
 - LSM303AGR Ultra-compact high-performance eCompass module: ultra-low power 3D accelerometer and 3D magnetometer
 - LPS22HB MEMS nano pressure sensor: 260-1260 hPa absolute digital output barometer
 - MP34DT04 64dB SNR Digital MEMS Microphone
 - BlueNRG-MS Bluetooth low energy network processor
 - BALF-NRG-01D3 50 Ω balun with integrated harmonic filter
 - LD39115J18R 150 mA low quiescent current low noise LDO 1.8 V
 - 2 V-5.5 V power supply range
 - External interfaces: UART, SPI, SAI (Serial Audio Interface), I²C, DFSDM, USB OTG, ADC, GPIOs
- Pluggable or solderable interface
- SWD interface for debugging and programming capability

STLCS01V1 SensorTile component board description

STEVAL-STLCS01V1 (SensorTile) is a highly integrated reference design that can be plugged into form-factor prototypes and adds sensing and connectivity capabilities to new designs through a smart hub solution. It can also easily support development of monitoring

577

and tracking applications as standalone sensor node connected to iOS/Android smartphone applications.

The SensorTile comes in a very small square shape 13.5 x 13.5 mm. All the electronic components are on the top side of the pcb, while the bottom side has a small connector through which it is possible to easily plug and unplug it from a motherboard. The connector pinout is also replicated on 18 pcb pads that render the SensorTile a solderable system on module as well.

The module comes with pre-loaded BLUEMICROSYSTEM2 software that initializes all the sensors and the Bluetooth low energy radio. The "ST BlueMS" app, available free of charge on Apple Store ™ and Google Play™, is the easiest and fastest way to start using the SensorTile board and to experience a real activity monitoring system.

The SensorTile firmware package STSW-STLKT01, built on the STM32Cube software technology, includes all the low level drivers to manage the on-board devices and system-level interfaces. It has been designed in order to be easily extended and personalized as starting point for development and customization of new dedicated applications.

All the firmware packages are freely available on www.st.com.

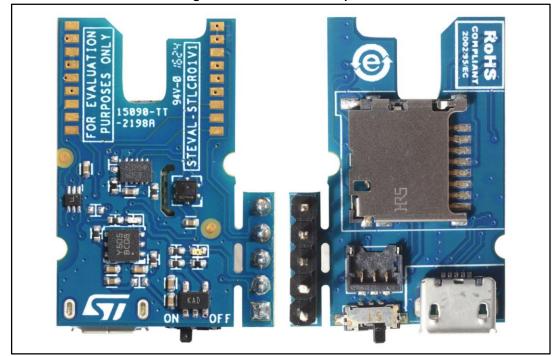


Figure 2: STLCR01V1 board photo

STLCR01V1 SensorTile component board features

- Sensortile Cradle board with SensorTile footprint (solderable)
- STBC08PMR 800 mA standalone linear Li-Ion battery charger
- HTS221 capacitive digital sensor for relative humidity and temperature
- LDK120M-R 200 mA low guiescent current very low noise LDO
- STC3115 Fuel gauge IC
- USBLC6-2P6 very low capacitance ESD protection
- USB type A to Mini-B USB connector for power supply and communication
- microSD card socket
- SWD connector for programming and debugging

Figure 3: STLCX01V1 board photo


STLCX01V1 SensorTile component board features

- Sensortile Cradle expansion board with SensorTile plug connector
- Compatible with STM32 Nucleo boards through Arduino UNO R3 connector
- LDK120M-R 200 mA low quiescent current very low noise LDO
- ST2378ETTR 8-bit dual supply 1.71 V to 5.5 V level translator
- USBLC6-2P6 very low capacitance ESD protection
- 16-Bit, low-power stereo audio DAC
- Micro-USB connector for power supply and communication
- Reset button
- SWD connector for programming and debugging

STEVAL-STLKT01V1 Schematic diagram

2 Schematic diagram

Figure 4: Functional block diagram

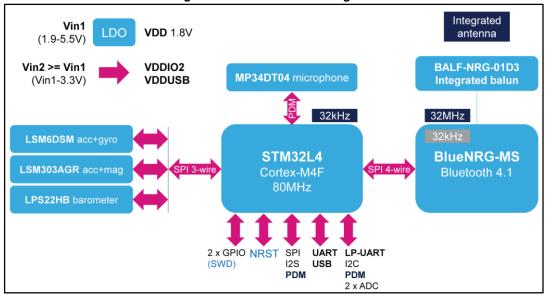

Revision history STEVAL-STLKT01V1

3 Revision history

Table 1: Document revision history

Date	Version	Changes
24-May-2016	1	Initial release.
01-Jun-2016	2	Updated board photo on the cover page.
02-Aug-2016	3	Updated board photo on the cover page, Figure 1: "STLCS01V1 board photo", Figure 2: "STLCR01V1 board photo" and Figure 3: "STLCX01V1 board photo".

IMPORTANT NOTICE - PLEASE READ CAREFULLY

STMicroelectronics NV and its subsidiaries ("ST") reserve the right to make changes, corrections, enhancements, modifications, and improvements to ST products and/or to this document at any time without notice. Purchasers should obtain the latest relevant information on ST products before placing orders. ST products are sold pursuant to ST's terms and conditions of sale in place at the time of order acknowledgement.

Purchasers are solely responsible for the choice, selection, and use of ST products and ST assumes no liability for application assistance or the design of Purchasers' products.

No license, express or implied, to any intellectual property right is granted by ST herein.

Resale of ST products with provisions different from the information set forth herein shall void any warranty granted by ST for such product.

ST and the ST logo are trademarks of ST. All other product or service names are the property of their respective owners.

Information in this document supersedes and replaces information previously supplied in any prior versions of this document.

© 2016 STMicroelectronics - All rights reserved

