# groov 180-280 VAC Input Modules

## **Features**

- > 12 or 24 channels per module
- > Module cover with LED indicates module status
- > Touch-sensitive pad triggers display of module information on groov EPIC® processor
- > Operating temperature: -20 to 70 °C
- > ATEX compliant
- > Guaranteed for life

## **DESCRIPTION**

groov I/O modules are part of the groov EPIC® (Edge Programmable Industrial Controller) system. Wired directly to field devices (sensors and actuators), groov I/O translates the electrical signals from those devices into the digital language computers understand—so you can monitor and control devices and use their data wherever you need it, in your local computer network or in cloud services.

These *groov* AC input modules sense status from devices that use a 180–280 VAC signal.

You can sense status from up to 24 devices using a 24-channel module, or up to 12 devices using a 12-channel module.

Choose the module you need based on your requirements:

- The GRV-IACHV-24 module provides 24 channels per module.
   Field devices are isolated from the logic side of the module, but channels are not isolated from each other: they share a common connection inside the module.
- The **GRV-IACIHV-12** module provides 12 channels per module, with channel-to-channel isolation.
- The GRV-IACHVS-24 and the GRV-IACIHVS-12 modules provide input state only, offering a lower cost option for projects that require only on/off status.

See "Features and Specifications" on page 2 for more information.

Wiring is simplified with a top-mounted connector, which provides spring-clamp terminals for power, common, and field wiring. The connector is held in place by a single, captive retention screw but can be removed with the field wiring intact for wiring in advance or easier module field replacement.

A swinging, two-position cover protects wiring from inadvertent contact, as does the dead-front design. The two positions of the cover offer the option of more space to accommodate larger wire. The module cover provides a touch-sensitive pad; touch the pad and the *groov* EPIC processor displays information about the module, including specifications and a wiring diagram.



PAGE 1

GRV-IACHV-24 module



GRV-IACIHV-12 module

The module pivots into place and is held securely in place by a captive retention screw.

groov I/O modules are hot swappable (which means they can be installed or removed without turning off the unit or stopping the process) and self-identifying—as soon as you mount the module to the chassis, it communicates to the processor and identifies itself.

Each *groov* I/O module cover provides a large module LED to indicate module health at a glance.

All *groov* power supplies, voltage converters, adapters, and processors, are UL/cUL listed and compliant with the ATEX, Low Voltage, and EMC CE directives. Each module is factory tested twice before shipment and almost every module is guaranteed for life.

#### **Part Numbers**

Part	Description
GRV-IACHV-24	AC input, 24 channels, 180–280 VAC
GRV-IACHVS-24	AC input, 24 channels, 180–280 VAC, on/off state only
GRV-IACIHV-12	AC input, 12 channels, 180–280 VAC, channel-to-channel isolation
GRV-IACIHVS-12	AC input, 12 channels, 180–280 VAC, channel-to-channel isolation, on/off state only



# FEATURES AND SPECIFICATIONS

## **Features**

Compare 180–280 VAC input module features:

Feature	GRV-IACHV-24	GRV-IACHVS-24	GRV-IACIHV-12	GRV-IACIHVS-12
Number of channels	24	24	12	12
Channel-to-channel isolation			x	x
On/off state	X	X	X	x
On/off latching	x		x	
On/off totalization	X		X	
Frequency measurement	x		x	
Period measurement	X		X	
Pulse measurement	X		x	

# **SPECIFICATIONS**

Specification	GRV-IACHV-24	GRV-IACHVS-24	GRV-IACIHV-12	GRV-IACIHVS-12
Nominal Input Voltage Range (RMS)	180–280 VAC	180–280 VAC	180–280 VAC	180–280 VAC
Turn-on Voltage	180 VAC	180 VAC	180 VAC	180 VAC
Turn-off Voltage	100 VAC	100 VAC	100 VAC	100 VAC
Input Impedance (± 5%)	532 kOhms	532 kOhms	271 kOhms	271 kOhms
Operating Frequency	40 Hz to 400 Hz			
Isolation (field-to-logic)	300 VAC, 1500 V Transient			
Isolation (channel-to-channel)	N/A	N/A	300 VAC working	300 VAC working
Number of Channels	24	24	12	12
Chassis Power Consumption	1.0 W	1.0 W	1.0 W	1.0 W
Wire Size	28–14 AWG	28–14 AWG	28–14 AWG	28–14 AWG
Torque, connector screw	2.5 in-lb (0.28 N-m)			
Torque, hold-down screw	3.5 in-lb (0.4 N-m)			
Temperature (operating)	-20 °C to +70 °C			
Temperature (storage)	-40 °C to +85 °C			
Relative Humidity (non-condensing)	5–95%	5–95%	5–95%	5–95%
Agency Approvals	CE, ATEX(Category 3, Zone 2), RoHS; DFARS; CB Scheme	CE, ATEX(Category 3, Zone 2), RoHS; DFARS; CB Scheme	CE, ATEX(Category 3, Zone 2), RoHS; DFARS; CB Scheme	CE, ATEX(Category 3, Zone 2), RoHS; DFARS; CB Scheme
Warranty	Lifetime	Lifetime	Lifetime	Lifetime




#### **MOUNTING**

Mount *groov* I/O modules onto a *groov* EPIC chassis. See *groov* EPIC Chassis Data Sheet (form 2247). You may also want to review the diagrams in the Description of Module Parts section so you learn the names of the various parts of the module.

## Installing the module



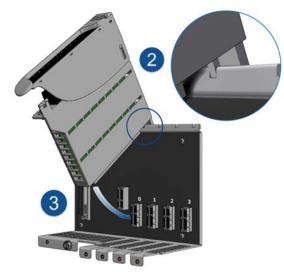

The numbers on the diagrams correspond to the numbered steps in these instructions.

CAUTION: For electrical safety, turn off power to the chassis and de-energize field devices wired to the terminal connector before starting.

- 1. Orient the *groov* EPIC chassis so that the module connector numbers are right-side up, with module connector zero on the left, as shown in the diagram.
- **2.** Hold the module at a 45° angle, lining up the alignment tab on the back tip of the module with the slot at the back of the chassis.
- **3.** Pivot the front of the module down to the module connector on the chassis. Push to snap the module into the connector.
- **4.** Swing the module cover up so you can access the module retention screw. Secure the module into position by tightening the module retention screw.


CAUTION: Do not over-tighten. See the torque specs in the Specifications table.


- 5. If the module does not have a terminal connector, install one.
- **6.** Secure the terminal connector by tightening the terminal connector screw.

CAUTION: Do not over-tighten. See the torque specs in the Specifications table.

- **7.** Follow the wiring instructions in the Pinout and Wiring section to wire your field devices to the channels on the terminal connector.
- **8.** When wiring is complete, swing the module cover back down to cover the wires. If the wires are too thick to close the module cover easily, lift the module cover, then raise the back of the module cover up to the higher position. Swing the module cover back down to cover the wires.

When you are done installing modules and wiring, if you powered down your unit, you can turn it back on.

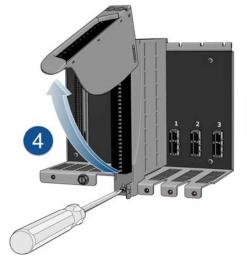

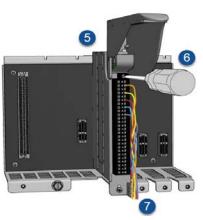






**OPTO 22** • 800-321-6786 • 1-951-695-3000 • www.opto22.com • sales@opto22.com

# Removing the module

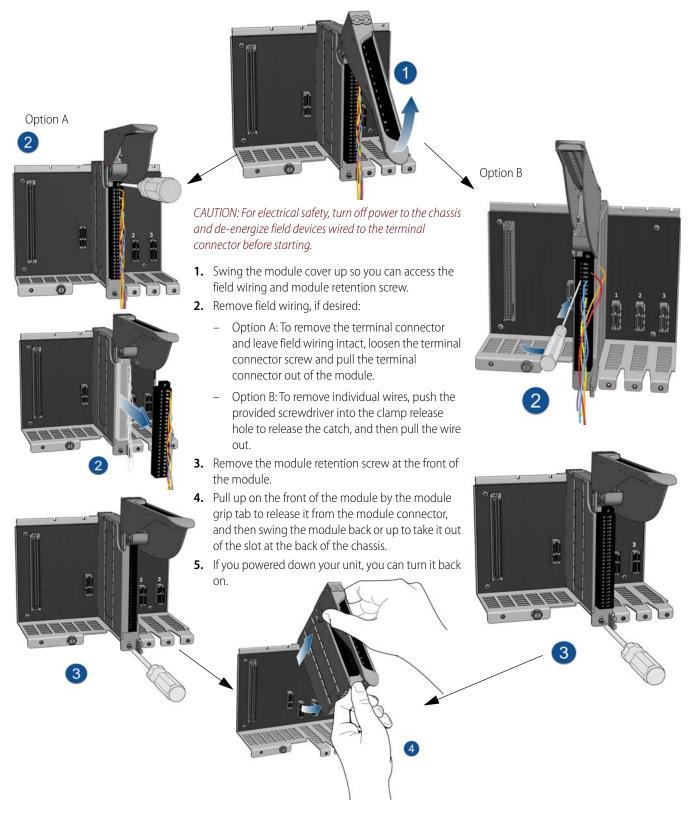




### PINOUT AND WIRING

Before you begin wiring, do the following tasks:

CAUTION: For electrical safety, turn off power to the chassis and deenergize field devices wired to the terminal connector before starting.

- Select the appropriate wire. The terminal connectors are rated for 28–14 AWG wire. If you're using stranded wire, tin the strands for an easier, better connection.
- Ensure that you have the screwdriver supplied with your module.
- If you are unfamiliar with the names of some of the parts of the module, review the diagrams on this page and in the Description of Module Parts section.
- It may be easier to insert wires if you remove the terminal connector from the module. To remove the terminal connector, loosen the terminal connector screw at one end of the connector, then pull the connector straight out to remove it from the module.
- If you have never used a spring-clamp wiring system, take a moment to familiarize yourself with the diagram below. The clamp release hole is where you will insert the screwdriver. The field wiring hole is where you will insert your field wires.

If you look into the field wiring hole, you will see a highly reflective surface. If you can see that surface, that means that the clamp is closed.

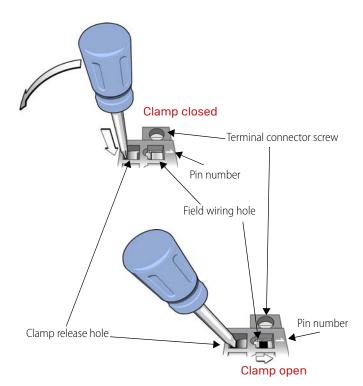

Follow these instructions to connect your field wires to the module:

CAUTION: For electrical safety, turn off power to the chassis and deenergize field devices wired to the terminal connector before starting.

- 1. Orient the module or terminal connector to match the wiring diagrams on the following page. To make it easier to handle the screwdriver and the field wires, secure the module by doing one of the following:
  - If you are working with the terminal connector while it is attached to the module, make sure the module is screwed securely to the chassis.
  - If you are working only with the terminal connector, secure the terminal connector with a clamp.
- **2.** Hold the screwdriver so that you can place the flat side of the blade against the left side of the clamp release hole.
- **3.** Slide the screwdriver into the clamp release hole, along the left side, until you feel the blade begin to meet some resistance. Gently push the screwdriver in a little more, until you feel the screwdriver stop.


Note: If you push in too hard, the screwdriver might pop out of the clamp release hole and you'll have to return to step 2.

- Look into the field wiring hole. If it is dark, the clamp is open.
   You can go to the next step.
- If you can still see the highly reflective surface, gently pull the screwdriver handle to the left until you feel the blade stop.
   Hold the screwdriver in that position. Look into the field wiring hole. If it is dark, the clamp is open. You can go to the next step.
- **4.** Insert the wire into the field wiring hole until it meets complete resistance. Then pull out the screwdriver.
- **5.** Test that the wire is secure by gently pulling on it. If the wire pulls out, repeat steps 2 through 4.

To remove a wire, push the screwdriver into the clamp release hole as described in steps 2 and 3 above, and then pull the wire out.



# WIRING: GRV-IACHV-24, GRV-IACHVS-24

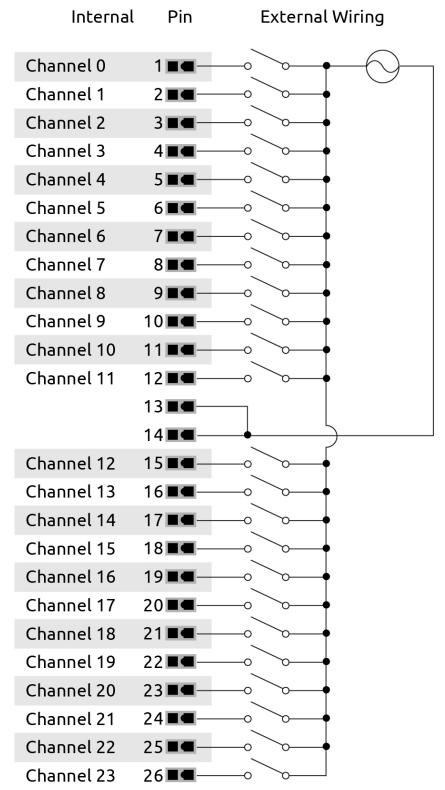




# WIRING: GRV-IACIHV-12, GRV-IACIHVS-12

Interna Channels inter			External Wiring
Channel 0	1 • • • • • • • • • • • • • • • • • • •		Or
Channel 1	3 <b>4 -</b>		Or
Channel 2	5 <b>■■</b> -6		Or
Channel 3	7 <b>■■</b> -		Or
Channel 4	9 <b>■■</b> -		Or
Channel 5	11 <b>■□</b> -12 <b>■□</b> -		Or
	13 ■ ■	Unused	
	14	Unused	
Channel 6			Or
Channel 6 Channel 7	14 <b>■■</b>	Unused	Or Or
	14 <b>••</b> 15 <b>••</b> 16 <b>••</b> 17 <b>••</b>	Unused	
Channel 7	14 ■	Unused	Or
Channel 7 Channel 8	14 ■ ■ 15 ■ ■ - 16 ■ ■ - 17 ■ ■ - 19 ■ ■ - 20 ■ ■ - 21 ■ ■	Unused	Or Or



# DIMENSIONS: GRV-IACHV-24, GRV-IACHVS-24, GRV-IACIHV-12, GRV-IACIHVS-12

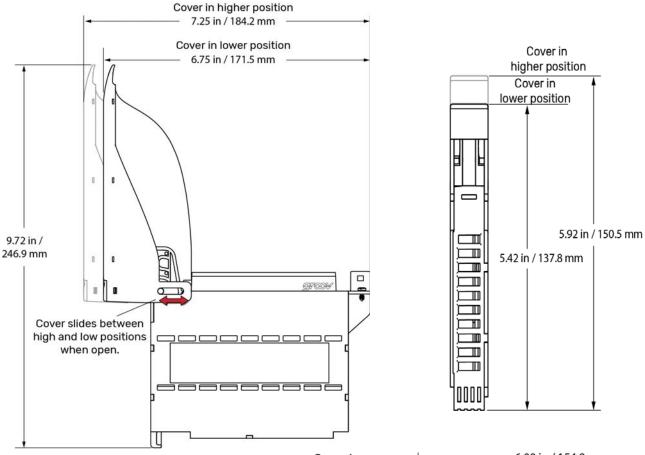


The module cover pivots and can be adjusted to two different heights (positions). The higher position provides more space to accommodate thicker wires.

To switch between higher and lower position, open the cover to at least a 45° angle. Grasp the hinged end of the module cover and do one of the following:

- Pull up on the back hinge to slide it to the higher position.
- Push down on the back hinge to slide it to the lower position.

You cannot switch between the higher and lower positions while the cover is closed.

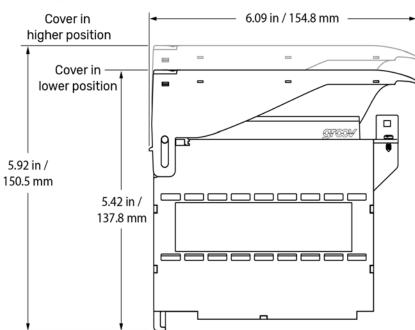



# DIMENSIONS: GRV-IACHV-24, GRV-IACHVS-24, GRV-IACIHV-12, GRV-IACIHVS-12

#### GRV-IACHV-24 and GRV-IACHVS-24 module




#### GRV-IACIHV-12 and GRV-IACIHVS-12 module





## **DESCRIPTION OF MODULE PARTS**

The following diagram identifies the parts of the modules. The installation instructions in the documentation rely on these terms to describe how to handle the module.

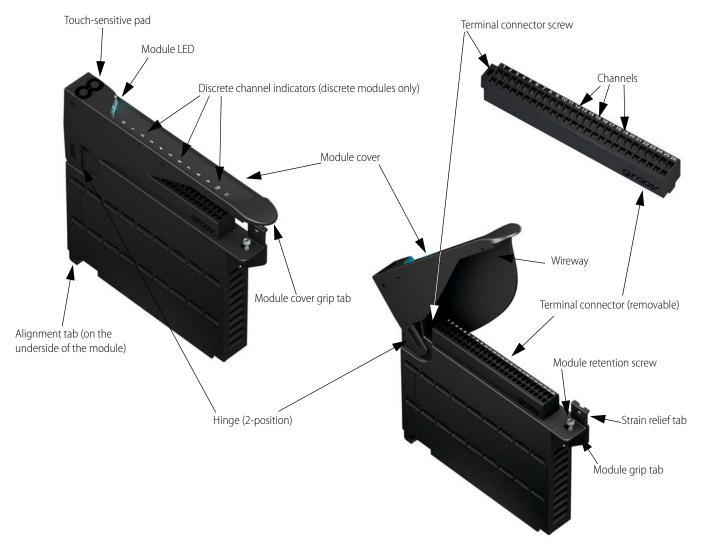

Some parts offer unique features:

- Module LED: Provides a visual indication of the health of the module. For example, if it is blue, the module is operating normally. If it is blinking blue, the module's information is being displayed on the *groov* EPIC processor's screen. For a complete list of the various colors that this LED might display, see the *groov* EPIC User's Guide (form 2267).
- Terminal connector: Specially designed for groov I/O modules, it
  provides a spring-clamp wiring system to securely connect the
  wires from your field devices to the module. To learn how to use a
  spring-clamp wiring system, see the Pinouts and Wiring section.
- Hinge and Wireway: These two features work together to provide more space for wires. The hinge can be adjusted between a lower position and a higher position. The wireway is the space underneath the module cover. To increase this space, you can raise the hinge to the higher position.
- Discrete channel indicators: Available only on discrete modules, the indicators are lit when the channel is on.
- Touch-sensitive pad: Offers a convenient way to display the
  module's information on the groov EPIC processor. Press on the
  pad for approximately two seconds and the processor displays
  that module's information on the screen, as well as changing the
  module LED to a blinking blue light.

**OPTO 22 ·** www.opto22.com 43044 Business Park Dr. Temecula, CA 92590-3614 **SALES •** sales@opto22.com 800-321-6786 • 1-951-695-3000 **SUPPORT** • support@opto22.com 800-835-6786 • 1-951-695-3080



# More about Opto 22

# **OPTO 22**

### **PRODUCTS**

Opto 22 develops and manufactures reliable, easy-to-use, open standards-based hardware and software products.

Industrial automation, process control, building automation, industrial refrigeration, remote monitoring, data acquisition, and industrial internet of things (IIoT) applications worldwide all rely on Opto 22.

# groov EPIC® System

Opto 22's *groov* Edge Programmable Industrial Controller (EPIC) system is the culmination of over 40 years of experience in designing products for the automation industry.

groov EPIC gives you an industrially hardened system with guaranteed-for-life I/O, a flexible Linux®-based controller with gateway functions, and software for your IIoT application or any application.

#### groov EPIC I/O

I/O provides the local connection to sensors and equipment. *groov* I/O offers up to 24 channels on each I/O module, with a spring-clamp terminal strip, integrated wireway, and swingaway cover.

Opto 22 I/O is so reliable, we can afford to guarantee it for life. *groov* I/O is hot swappable, UL Hazardous Locations approved, and ATEX compliant.

## groov EPIC Controller

The heart of the system is the *groov* EPIC controller. It handles a wide range of digital, analog, and serial functions for data collection, remote monitoring, process control, and discrete and hybrid manufacturing.

In addition, the EPIC provides secure data communications among physical assets, control systems, software applications, online services, and more, both on premises and in the cloud.

Configuring and troubleshooting I/O and networking is easier with the EPIC's integrated high-resolution touchscreen. Authorized users can see your *groov* View HMI locally on the touchscreen or on a monitor connected via the HDMI or USB ports.

#### groov EPIC Software

Software includes:

- Flowchart-based PAC Control for control programming, or build your own custom application with optional secure shell access
- groov View for building and viewing your own deviceindependent HMI
- Node-RED for creating simple logic flows from pre-built nodes

Ignition Edge® from Inductive Automation®, with OPC-UA drivers to Allen-Bradley®, Siemens®, and other control systems, and MQTT/Sparkplug communications for efficient IIoT data transfer

## groov Edge Appliance

Visualization, data handling, and connectivity in a compact, industrial box: that's the *groov* Edge Appliance. Included are:

- groov View for building and viewing operator interfaces on PCs and mobile
- Node-RED for building simple logic flows
- Ignition Edge® from Inductive Automation®, for OPC-UA drivers and MQTT/Sparkplug IIoT communications

# Older products

From solid state relays (our first products) to world-famous G4 and SNAP I/O, to SNAP PAC controllers, Opto 22 products last a long time. You can count on us to give you the reliability and service you expect.



# **OUALITY**

Founded in 1974, Opto 22 has established a worldwide reputation for high-quality products. All are made in the U.S.A. at our manufacturing facility in Temecula, California.

Because we test each product twice before it leaves our factory rather than testing a sample of each batch, we can guarantee most solid-state relays and optically isolated I/O modules for life.

## FREE PRODUCT SUPPORT

Opto 22's California-based Product Support Group offers free, comprehensive technical support for Opto 22 products from engineers with decades of training and experience. Support is available in English and Spanish by phone or email, Monday–Friday, 7 a.m. to 5 p.m. PST.

Support is always available on our website, including how-to videos, user's guides, the Opto 22 KnowledgeBase, troubleshooting tips, and OptoForums. In addition, free hands-on training is available at our Temecula, California headquarters, and you can register online.

### **PURCHASING OPTO 22 PRODUCTS**

Opto 22 products are sold directly and through a worldwide network of distributors, partners, and system integrators. For more information, contact Opto 22 headquarters at **800-321-6786** (toll-free in the U.S. and Canada) or **+1-951-695-3000**, or visit our website at www.opto22.com.

**OPTO 22 ·** www.opto22.com 43044 Business Park Dr. Temecula, CA 92590-3614 **SALES** • sales@opto22.com 800-321-6786 • 1-951-695-3000 **SUPPORT** • support@opto22.com 800-835-6786 • 1-951-695-3080

