PHASE LOSS, PHASE REVERSAL, PHASE UNBALANCE, UNDERVOLTAGE & OVERVOLTAGE

PMP SERIES



- Protects against phase loss, phase reversal, phase unbalance, undervoltage, overvoltage & rapid cycling
- Universal voltage range of 190-500V on PMPU—greater range that covers more global applications
- True RMS voltage measurement ensures accurate sensing across more applications
- Retains fault indication and continues monitoring all voltages even with a lost phase
- Ultimate three-phase protection with a variety of user-selectable and adjustable settings
- Full fault indication on top of unit for easy troubleshooting
- Manual reset option works with external switch to reset the relay from outside the enclosure
- Compact plug-in case utilizing industry-standard 8 pin octal socket
- ◆ 10A SPDT output contacts



Better. By Design.

800.238.7474

www.macromatic.com
sales@macromatic.com

PMP Series Three-Phase Monitor Relays continuously monitor all voltages of a three-phase system. They are used to protect motors and equipment from expensive damage due to phase loss, phase reversal, phase unbalance, undervoltage and overvoltage faults as well as rapid cycling. These products detect single phasing and unbalanced voltages regardless of regenerative voltages.

The PMP Series incorporate a microprocessor-based design capable of advanced signal processing including *True RMS voltage measurement*. Innovative analog-to-digital sensing circuitry allows for true full-wave monitoring of all three phases, delivering the highest level of protection possible.

True RMS voltage measurement ensures accurate sensing in most generator and other applications with non-sinusoidal wave forms, eliminating nuisance tripping. Full wave monitoring provides a more accurate method to measure the voltages, regardless of load type or wave shape, resulting in improved protection across more applications.

Unlike similar three-phase monitor relays, the PMP Series will *continue to function even with a lost phase*. They are the only line-powered units in their class to retain fault indication and continuous monitoring of all voltages during a phase loss, increasing the ease of troubleshooting and the level of protection.

The PMPU is a true universal voltage product that works on any three-phase line-line voltage of 190-500V. The Voltage Line-Line knob on the PMPU has two ranges: a 190-250V low voltage scale and a 380-500V high voltage scale. The unit auto senses the three-phase line-line voltage when applied and automatically selects the appropriate range. The PMP120 and PMP575 have a single adjustable range (see table below).



Operation:

When the proper three-phase line voltage is applied to the unit and the phase sequence (rotation) is correct, the relay is

energized after the Restart Delay is completed. Any one of five fault conditions will de-energize the relay after a delay. As standard, re-energization is automatic upon correction of the fault condition. Manual reset is available if an external momentary N.C. switch is connected to pins 6 and 7. A bi-color status LED indicates normal condition and also provides specific fault indication to simplify troubleshooting.

PMP Series

PROTECTS AGAINST	LINE-LINE VOLTAGE▲ 50/60 Hz	CATALOG NUMBER	WIRING/SOCKET
Phase Loss, Phase Reversal,	102-138V	PMP120	8 Pin Octal 70169-D
Phase Unbalance, Undervoltage	190-500V	PMPU ●	ØA ØB ØC MANUAL RESET
& Overvoltage	460-600V	PMP575 ●	3 4 5 6
			1 8
			DIAGRAM 104

- ▲ Phase-to-Phase (Line-to-Line).
- Requires a 600V-rated socket when used on system voltages above 300V.

Sockets & Accessories available

PHASE LOSS, PHASE REVERSAL, PHASE UNBALANCE, UNDERVOLTAGE & OVERVOLTAGE

PMP SERIES

APPLICATION DATA

Catalog No.	Range (50/60Hz <u>+</u> 5%)	MIN VOLTAGE	MAX VOLTAGE
PMPU	190-500V AC (see below)	156V AC	550V AC
PMP120	102-138V AC	77V AC	152V AC
PMP575	460-600V AC	345V AC	660V AC

Three-Phase Line-Line Voltage:



The Voltage Line-Line knob on the PMPU has two ranges (left): a 190-250V low voltage scale and a 380-500V high voltage scale. The unit auto senses the three-phase line-line voltage when applied and automatically selects the appropriate range.

The PMP120 has a single adjustable range of 102-138V and the PMP575 has a single adjustable range of 460-600V.

Power Consumption: Less than 40VA.

Phase Loss: Unit trips on loss of any Phase A, B or C, regardless of any regenerative voltages.

Phase Reversal (Out-of-Sequence): Unit trips if sequence (rotation) of the three phases is anything other than A-B-C. It will

Undervoltage: Adjustable from 80-95% of the line voltage setting. Unit trips when the average of all three lines is less than the adjusted set point for a period longer than the adjustable trip delay. It will reset at +3% of the Undervoltage trip setting.

Overvoltage: Fixed at 110% of the line voltage setting. Unit trips when the average of all three lines is greater than the fixed set point for a period longer than the adjustable trip delay. It will reset at 107% of the line voltage setting.

Phase Unbalance: Adjustable from 2 - 10% unbalance. Unit trips when any one of the three lines deviates from the average of all three lines by more than the adjusted set point for a period longer than the adjustable trip delay.

Response Times:

Restart:

Drop-out Due to Fault: Phase Loss and Reversal:

Undervoltage and Overvoltage: Unbalance:

Normal:

Severe (Twice Knob Setting):

100ms fixed

0.3 - 30 seconds adjustable

1 - 300 seconds adjustable

0.3 - 30 seconds adjustable

0.3 - 2 seconds

Output Contacts: 10 A @ 277V AC / 7A @ 30V DC;

1HP @ 250V AC, 1/2HP @ 125V AC,

C300 Pilot Duty

Life: Mechanical: 10,000,000 operations; Full Load: 100,000 operations

Temperature: Operating: -28° to 65°C (-18° to 149°F)

Storage: -40° to 85°C (-40° to 185°F)

Mounting: Uses an 8 pin octal socket. Requires a 600V-rated socket when used on system voltages greater than 300V such as Macromatic Catalog Number 70169-D.

Status LED:

	LED STATUS	STATUS
GR		NORMAL/ RELAY ON
REEN	MMMM.	RESTART DELAY
RED		REVERSAL
		LOSS/ UNBALANCE
		UNDERVOLTAGE
		OVERVOLTAGE

Reset: As standard, the PMP Series relays are in the Automatic Reset mode. However, they can be set in the Manual Reset mode by connecting an external N.C. switch across terminals 6 and 7. Upon application of line voltage, the PMP Series will go into Manual Reset mode if it recognizes a closure across terminals 6 and 7. After a fault clears, the relay will not reset until the N.C. switch is opened.


Approvals:





appropriate socket File #E109466 Low Voltage & EMC Directives EN60947-1. EN60947-5-1

DIMENSIONS

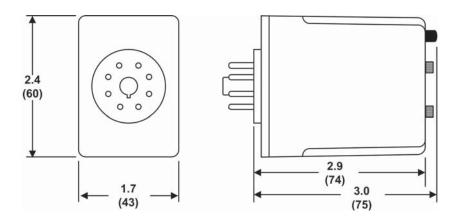

All Dimensions in Inches (Millimeters)