# S15C Analog Voltage to Modbus Converter




## Datasheet



- Compact analog voltage to Modbus converter that connects to a voltage source (0 V to 10 V) and outputs the value to Modbus registers
- Rugged over-molded design meets IP65, IP67, and IP68
- · Connects directly to a sensor or anywhere in-line for ease of use

### Models

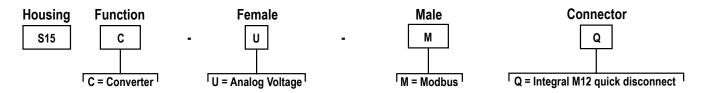

## Modbus Configuration

Modbus Register Address	Description	I/O Range	Comments	Default	Access
	,	IO Data	Out		
40001	Analog Data output	010000	Voltage (V) = Register Value / 1000	0-10	RO
40002	Alarm State for IO 1 based on Min and Max thresholds defined in Analog In Min Value () and Analog In Max Value()	01	0 = Within threshold range 1 = Out of threshold range	-	RO
40003	Status of program	02	STATUS_ERROR_TYPE_NO_ERROR = 0 STATUS_ERROR_TYPE_BELOW_MIN = 1 STATUS_ERROR_TYPE_ABOVE_MAX = 2	-	RO
		Input_ADC	_Config		
41001	Sample interval time	0.65535	0 = Disabled 1 = 10 ms 265535 = 5 ms increments	1	RW
	·	FilterCo	onfig		
41002	Takes current ADC value and the last 2 ADC readings and takes the median of the 3 values.	01	0 = Median Filter Disabled 1 = Median Filter Enabled	0	RW
		Minimum	ı Value		
41004	Minimum analog value for data read	09	Must be less than maximum	0	RW
	<u> </u>	Maximum	n Value		!
41005	Max analog value for data read	110	Must be greater than the minimum	10	RW
		COMs Se	ettings		
46101	Baud Rate	0 = 9.6k 1 = 19.2k 2 = 38.4k	0 = 9.6k 1 = 19.2k 2 = 38.4k	1	RW
46102	Parity	0 = None 1 = Odd 2 = Even	0 = None 1 = Odd 2 = Even	0	RW
46103	Slave Address	1247	1 to 247	1	RW

### Wiring Diagrams




Male (Gateway)	Female (Sensor)	Pin	Wire Color
		1	Brown
	2	2	White
2	4 4 3	3	Blue
3 4		4	Black



**Important:** If using a cable to connect the converter to an analog sensor, use of a shielded M12 cable is recommended, with the shield tied to pin 3.

### Connecting 0 V to 10 V Analog Sensors

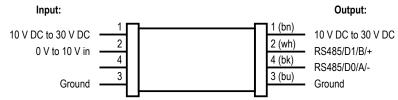

### Status Indicators

### Power LED Indicator (Green)

- Solid Green = Power On
- Off = Power Off

### **Modbus Communication LED Indicator (Amber)**

- Flashing Amber (4 Hz) = Modbus communications are active
- Solid Amber for 2 seconds to Off = Modbus communications are lost after connection
- Solid Amber for 2 seconds to Flashing Amber (4 Hz) = Modbus communications momentarily lost, but communication reestablished
- Solid Amber = Modbus communications are intermittent, or communications error occurs more frequently than once every 2 seconds
- Off = Modbus communications are not present

### Specifications

#### Supply Voltage

10 V DC to 30 V DC at 50 mA maximum

#### Supply Protection Circuitry

Protected against reverse polarity and transient voltages

#### Leakage Current Immunity

400 μΑ

#### Resolution

12-bits

#### Accuracy

1.5% of full scale

#### Indicators

Green power

Amber Modbus communications

#### Connections

Integral male/female 4-pin M12 quick disconnect

Coupling Material: Nickel-plated brass Connector Body: PVC translucent black

#### Vibration and Mechanical Shock

Meets IEC 60068-2-6 requirements (Vibration: 10 Hz to 55 Hz, 0.5 mm amplitude, 5 minutes sweep, 30 minutes dwell)
Meets IEC 60068-2-27 requirements (Shock: 15G 11 ms duration, half sine

#### Certifications





#### **Environmental Rating**

IEC IP65, IEC IP67, IEC IP68 NEMA/UL Type 1

#### **Operating Conditions**

Temperature: -40 °C to +70 °C (-40 °F to +158 °F) 90% at +70 °C maximum relative humidity (non-condensing) Storage Temperature: -40 °C to +80 °C (-40 °F to +176 °F)

#### **Required Overcurrent Protection**



**WARNING:** Electrical connections must be made by qualified personnel in accordance with local and national electrical codes and regulations.

Overcurrent protection is required to be provided by end product application per the supplied table.

Overcurrent protection may be provided with external fusing or via Current Limiting, Class 2 Power Supply.


Supply wiring leads < 24 AWG shall not be spliced.

For additional product support, go to www.bannerengineering.com.

Supply Wiring (AWG)	Required Overcurrent Protection (Amps)		
20	5.0		
22	3.0		
24	2.0		
26	1.0		
28	0.8		
30	0.5		

### Dimensions

All measurements are listed in millimeters [inches], unless noted otherwise.

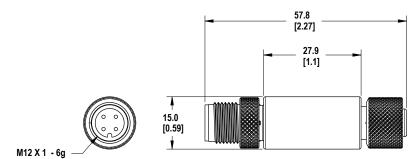



### Accessories

#### Cordsets

4-Pin Threaded M12 Cordsets—Double Ended							
Model	Length	Style Dimensions		Pinout			
MQDEC-401SS	0.31 m (1 ft)			Female			
MQDEC-403SS	0.91 m (2.99 ft)		•40 Typ=  1.58"				
MQDEC-406SS	1.83 m (6 ft)			1 (60)			
MQDEC-412SS	3.66 m (12 ft)			4			
MQDEC-420SS	6.10 m (20 ft)		M12 x 1	Male			
MQDEC-430SS	9.14 m (30.2 ft)	Male Straight/ Female Straight	Male Straight/	ø 14.5 [0.57"]	ividic		
MQDEC-450SS	15.2 m (49.9 ft)		44 Typ. 11.73" M12 x 1 Ø 14.5 [0.57"]	2 4			
				1 = Brown 2 = White 3 = Blue 4 = Black			

### Banner Engineering Corp Limited Warranty

Banner Engineering Corp. warrants its products to be free from defects in material and workmanship for one year following the date of shipment. Banner Engineering Corp. will repair or replace, free of charge, any product of its manufacture which, at the time it is returned to the factory, is found to have been defective during the warranty period. This warranty does not cover damage or liability for misuse, abuse, or the improper application or installation of the Banner product.

THIS LIMITED WARRANTY IS EXCLUSIVE AND IN LIEU OF ALL OTHER WARRANTIES WHETHER EXPRESS OR IMPLIED (INCLUDING, WITHOUT LIMITATION, ANY WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE), AND WHETHER ARISING UNDER COURSE OF PERFORMANCE, COURSE OF DEALING OR TRADE USAGE.

This Warranty is exclusive and limited to repair or, at the discretion of Banner Engineering Corp., replacement. IN NO EVENT SHALL BANNER ENGINEERING CORP. BE LIABLE TO BUYER OR ANY OTHER PERSON OR ENTITY FOR ANY EXTRA COSTS, EXPENSES, LOSSES, LOSS OF PROFITS, OR ANY INCIDENTAL, CONSEQUENTIAL OR SPECIAL DAMAGES RESULTING FROM ANY PRODUCT DEFECT OR FROM THE USE OR INABILITY TO USE THE PRODUCT, WHETHER ARISING IN CONTRACT OR WARRANTY, STATUTE, TORT, STRICT LIABILITY, NEGLIGENCE, OR OTHERWISE.

Banner Engineering Corp. reserves the right to change, modify or improve the design of the product without assuming any obligations or liabilities relating to any product previously manufactured by Banner Engineering Corp. Any misuse, abuse, or improper application or installation of this product or use of the product for personal protection applications when the product is identified as not intended for such purposes will void the product warranty. Any modifications to this product without prior express approval by Banner Engineering Corp will void the product warranties. All specifications published in this document are subject to change; Banner reserves the right to modify product specifications or update documentation at any time. Specifications and product information in English supersede that which is provided in any other language. For the most recent version of any documentation, refer to: www.bannerengineering.com.

For patent information, see www.bannerengineering.com/patents.

### FCC Part 15 and CAN ICES-3 (B)/NMB-3(B)

This device complies with part 15 of the FCC Rules and CAN ICES-3 (B)/NMB-3(B). Operation is subject to the following two conditions:

- This device may not cause harmful interference, and
- This device must accept any interference received, including interference that may cause undesired operation

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules and CAN ICES-3 (B)/NMB-3(B). These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

